


POP RECESSED SQUARE

DRIVER REPLACEMENT - INSTRUCTIONS


NOTE: Wire dimming conductors as Class 1

1 DROP

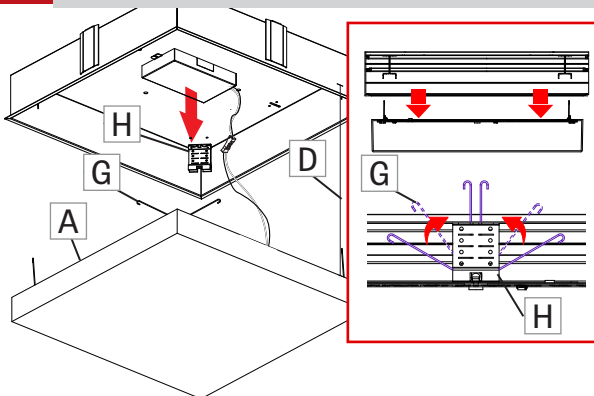


Pull down the diffuser (A) to get access to the springs (G). Squeeze the springs (G) to release them from the brackets (H). Once all the springs (G) have been released, slowly lower the diffuser (A) retained by security cable (D).

2

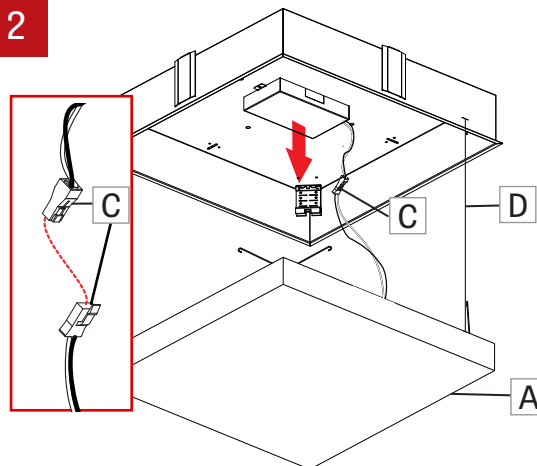


Disconnect quick connectors (C) between driver and diffuser (A). Remove security cable (D).

3

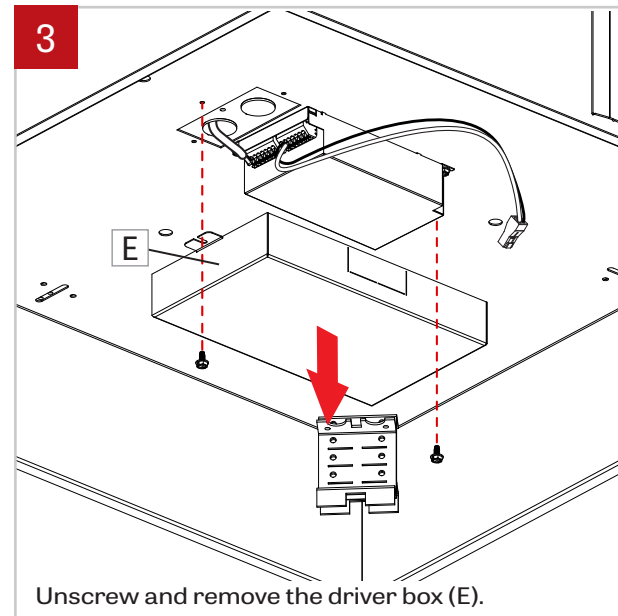


Unscrew and remove the driver box (E).

4

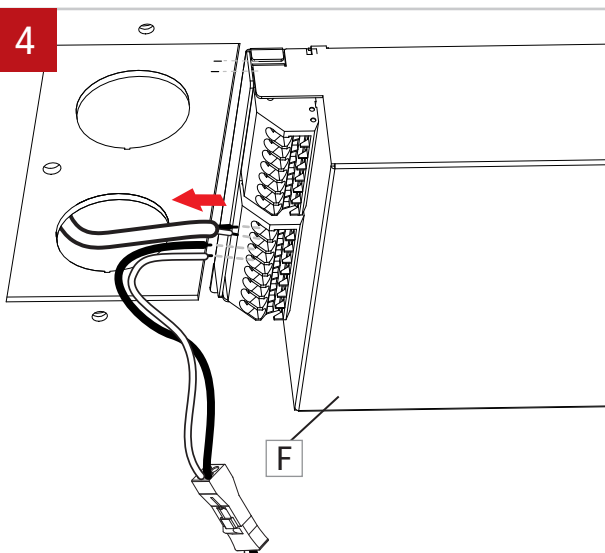


Disconnect wires from the driver (F) to the power and quick connector.

5

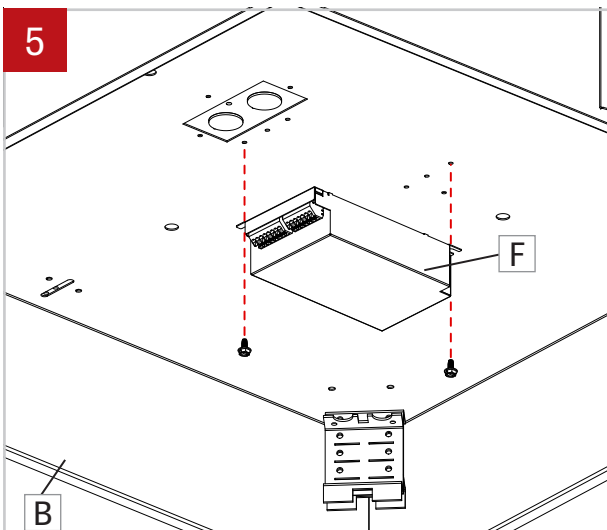

Unscrew the driver (F) from the housing (B). Replace the driver and reconnect the wires.


6

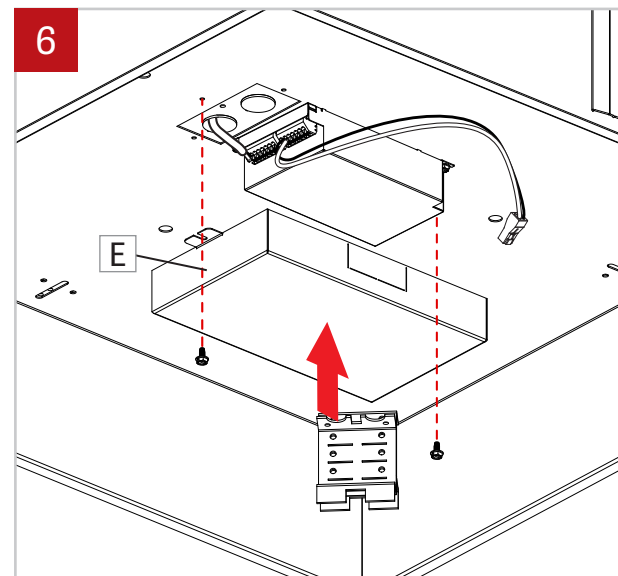


Screw back in place the driver box (E).

POP RECESSED SQUARE

DRIVER REPLACEMENT - INSTRUCTIONS

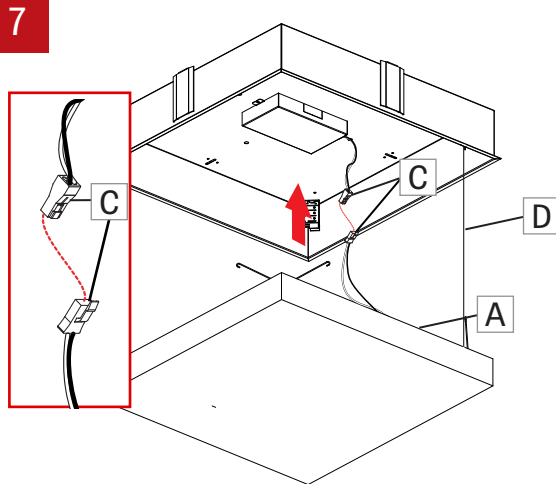

Attach security cable (D). Make wires connection between the driver and the diffuser (A) by connecting quick connectors (C).

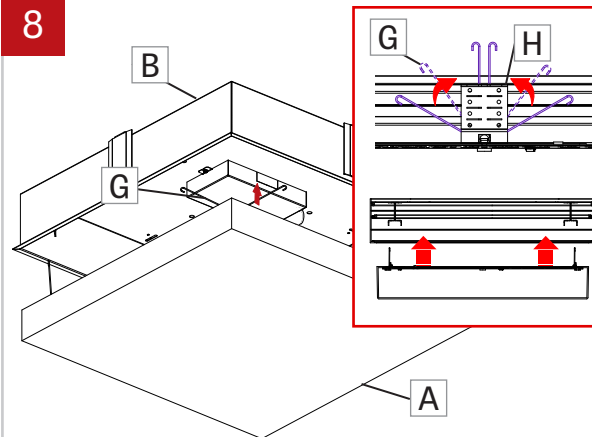

Squeeze, align and insert the springs (G) into the brackets (H) that are further inside the housing. Once all the springs (G) are properly installed, slowly push the diffuser (A) in the housing (B) as far as the brackets (H) allow.