


POP RECESSED SQUARE

DRIVER REPLACEMENT - INSTRUCTIONS


NOTE: Wire dimming conductors as Class 1

1 FLUSH

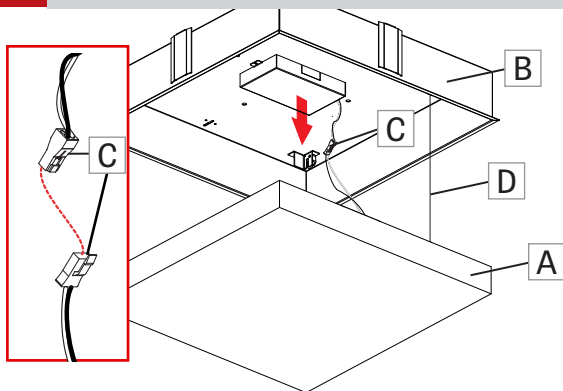


Make sure the power to the fixture is turned off. Push slowly the diffuser (A) until it unlocked. Lower the diffuser (A) from the housing (B). Disconnect quick connectors (C) between driver and diffuser (A). Remove security cable (D).

2

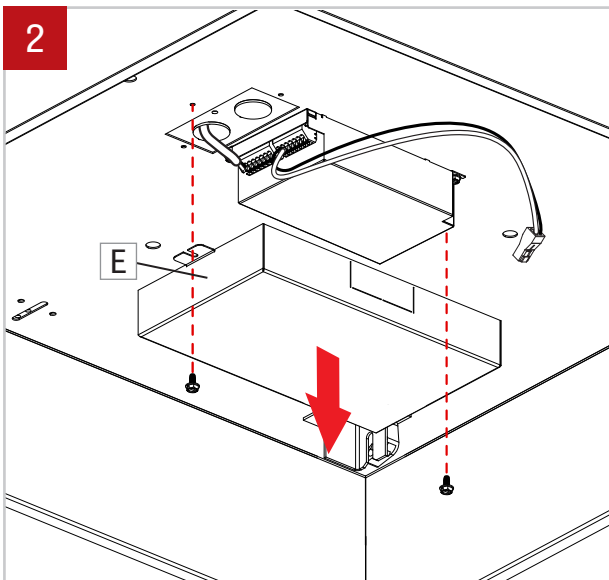


Unscrew and remove the driver box (E).

3

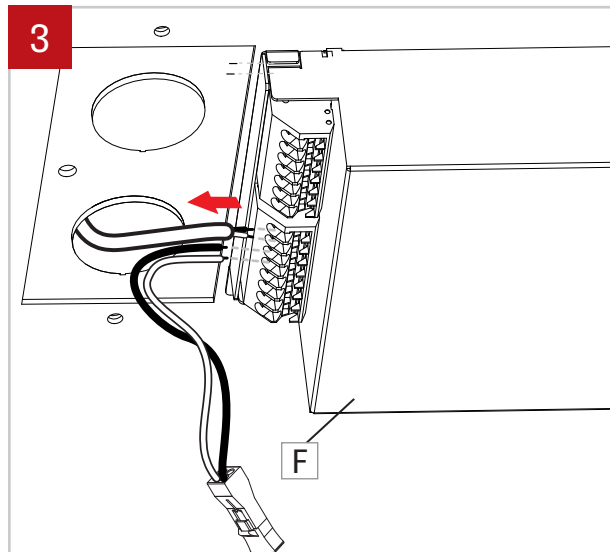


Disconnect wires from the driver (F) to the power and quick connector.

4

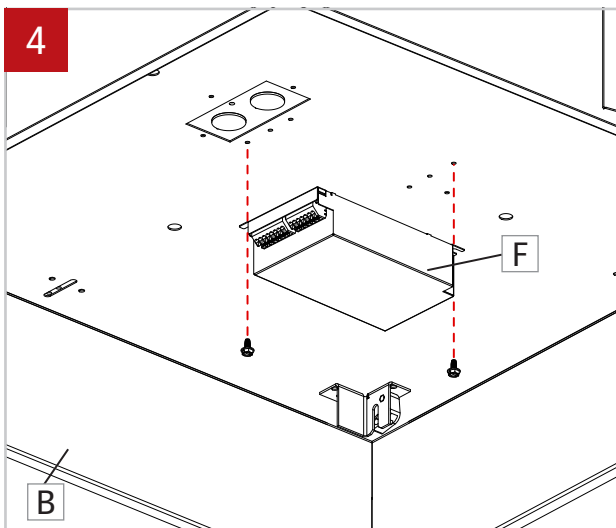


Unscrew the driver (F) from the housing (B). Replace the driver and reconnect the wires.

5

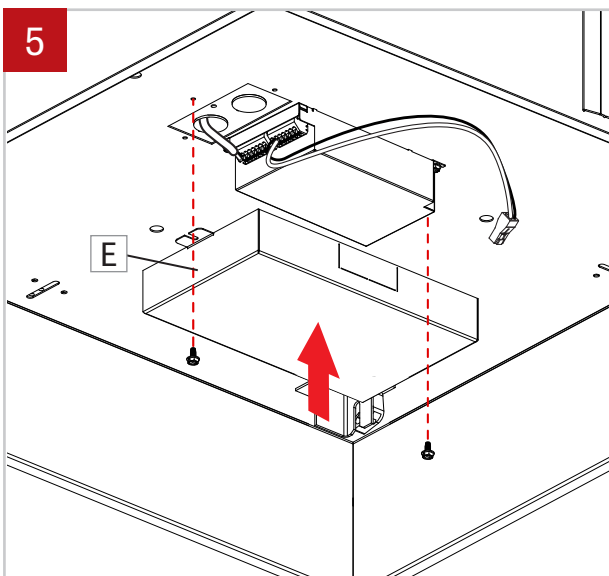

Screw back in place the driver box (E).

6

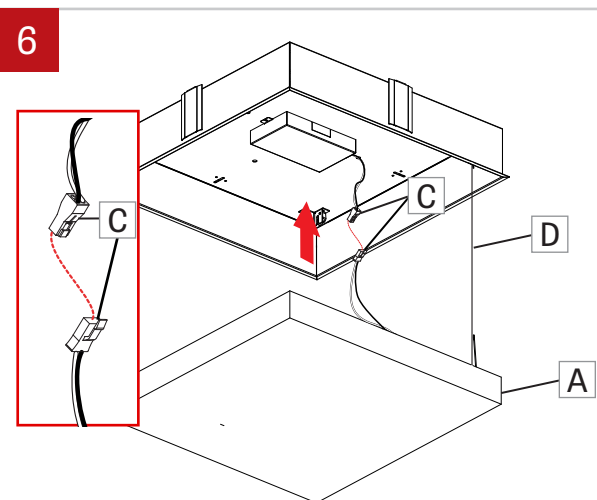


Attach security cable (D). Make wires connection between the driver and the diffuser (A) by connecting quick connectors (C).

POP RECESSED SQUARE

DRIVER REPLACEMENT - INSTRUCTIONS

7

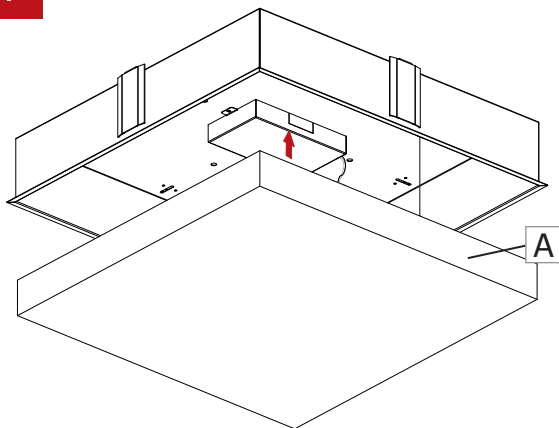

Carrefuly push back in place the diffuser (A) after aligning the brackets.