
POP RECESSED SQUARE


LED BOARD REPLACEMENT - INSTRUCTION




NOTE: Wire dimming conductors as Class 1

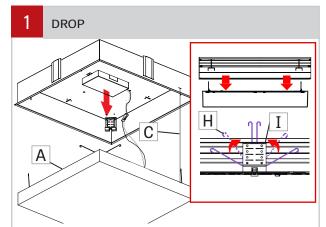



Make sure the power to the fixture is turned off. Pull down the diffuser (A) to get acces to the springs (H). Squeeze the springs (H) to release them from the brackets (I). Once all the springs (H) have been released, slowly lower the diffuser (A) retained by security cable (C).

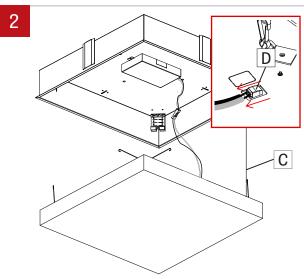


Disconnect wires from molex connector (D) (on LED plate holder) and remove security cable (C).

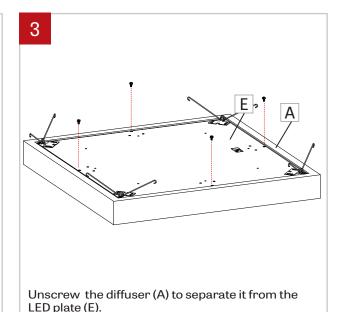

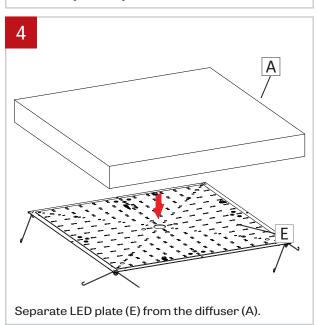

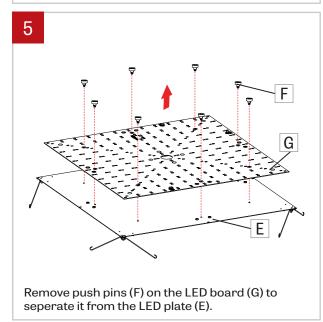

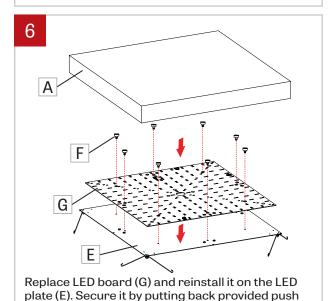

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILENAME:POP-RECESSED-SO-LED-BOARD-REPLACEMENT-DROP-INST

November 13, 2019

pins (F). Place LEDs on the diffuser (A).


Page: 1/2


Pending


POP RECESSED SQUARE

LED BOARD REPLACEMENT - INSTRUCTION



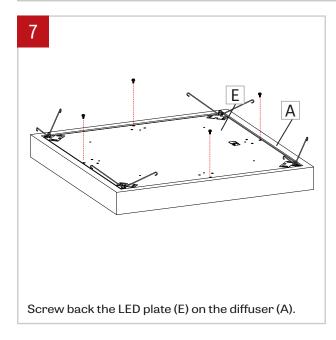

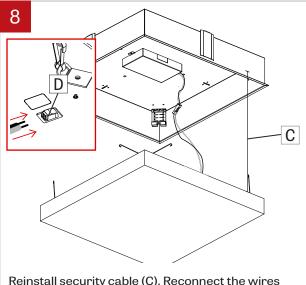

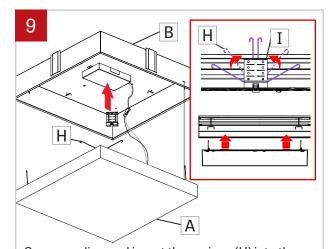

Squeeze, align and insert the springs (H) into the brackets (I) that are further inside the housing. Once all the springs (H) are properly installed, slowly push the diffuser (A) in the housing (B) as far as the brackets (I) allow.