


IMPORTANT: Installation instructions are shown with Quad Narrow and applies to all Quad sizes

NOTE: Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

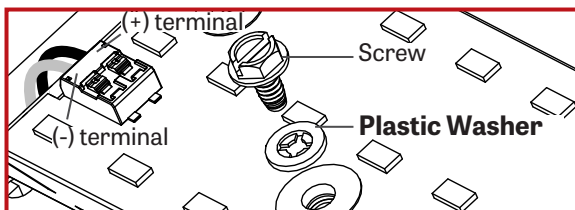


1 SINGLE FIXTURE

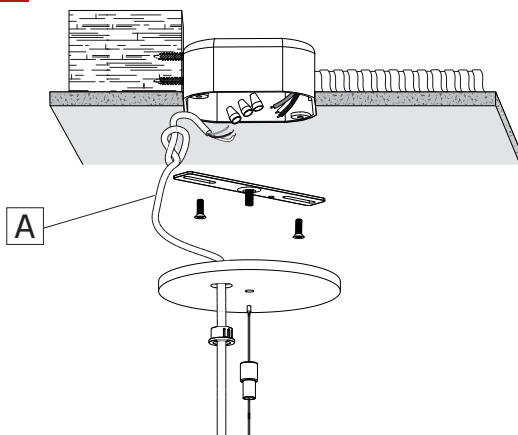


Locate ceiling mounting points according to supplied client drawing. Make a knot in the power cord (A) and then connect it to the ceiling power feed.

2 POWER SIDE

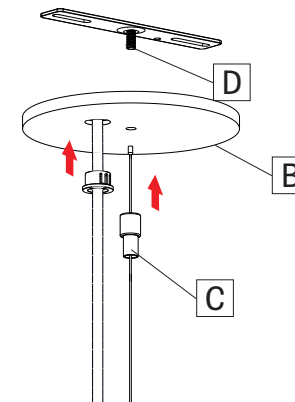


Secure canopy (B) with slip ring (C) on threaded rod (D). For a continuous system, please proceed to step 10.

3 NON-POWER SIDE

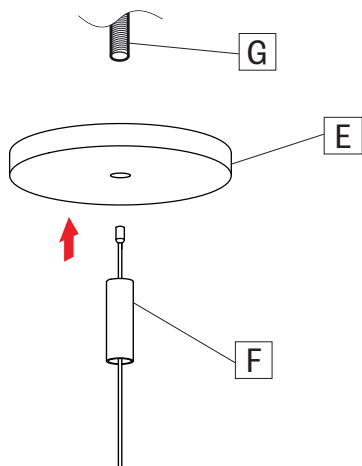


Secure canopy (E) with cable coupler (F) on threaded rod (G) (by other).

4

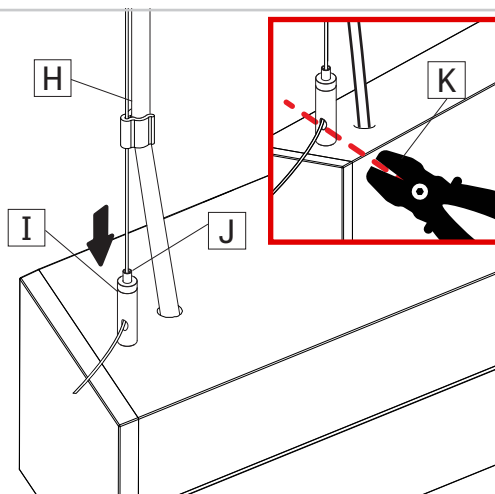


Insert the aircraft cable (H) into the griplock (I). Adjust the cable (H) length by pushing the feeder tube (J) and **cut the excess cable** with an aircraft cable cutter (K).

5

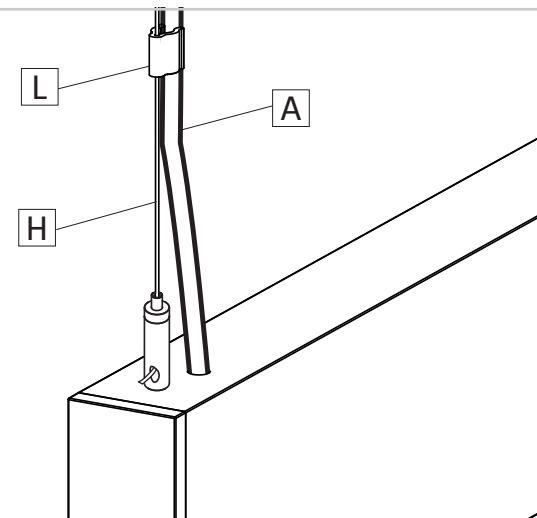


Secure power cord (G) to aircraft cable (H) with plastic clip (L).


6 CONTINUOUS SYSTEM

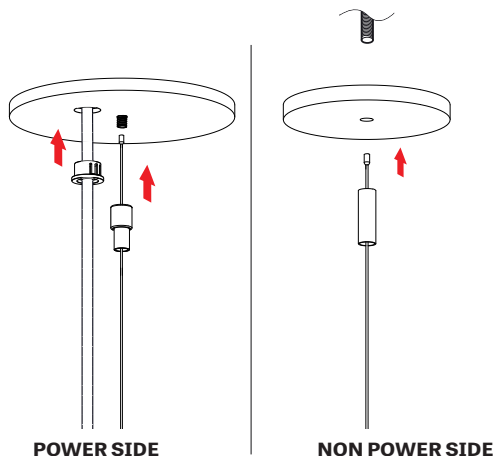


For a continuous system, repeat steps 1 to 3 for all mounting.

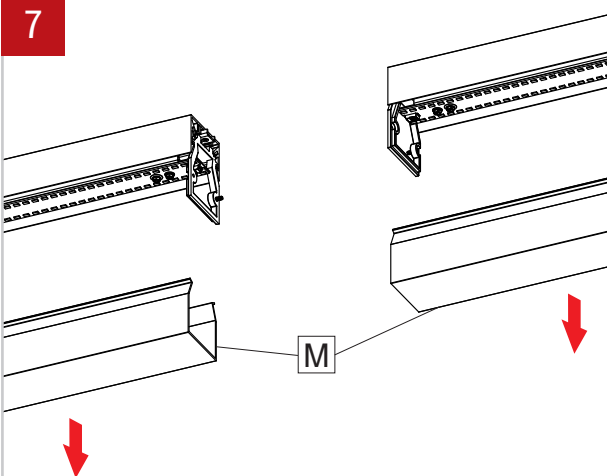


Remove lens (M) from all fixtures in the run.

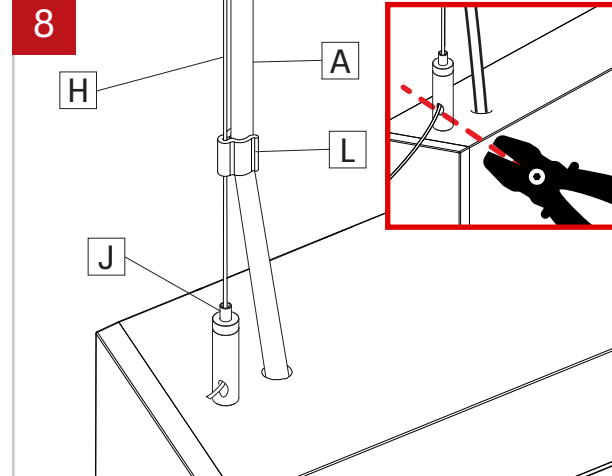


Make final adjustment of the cable (L) height by pushing the feeder tube (J) downward (as shown in step 4). Secure power cord (A) to aircraft cable with plastic clip (N).

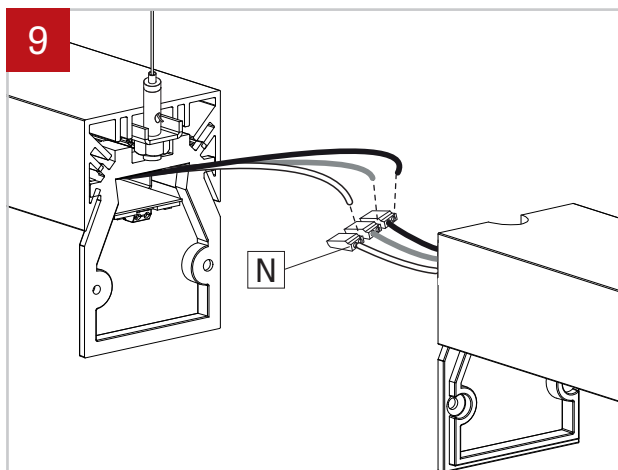

Connect wires between joining fixtures using quick connectors (N). Push wires inside second fixture.

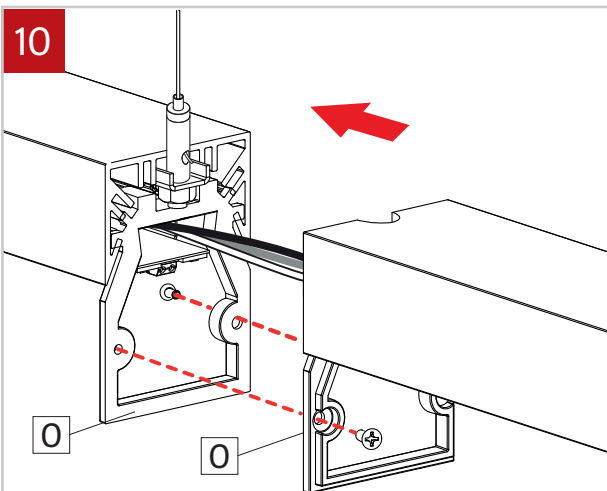

Align fixtures and attach them by fastening screws on the joiners (O). Repeat steps 11 to 14 for all other fixtures.

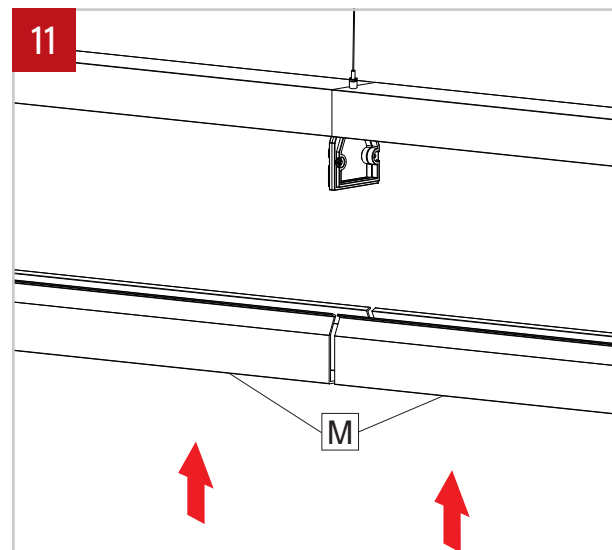

Reinstall the lens (M) back in place.