


IMPORTANT: Installation instructions are shown with Quad Narrow and applies to all Quad sizes

NOTE: Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

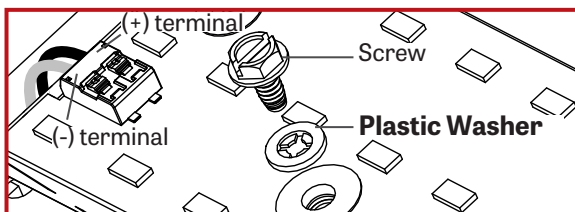


1 SINGLE FIXTURE

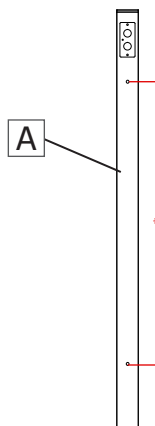


Make sure the power to the fixture (A) is turned off. Mounting points on the fixture according to client drawing [*].

2

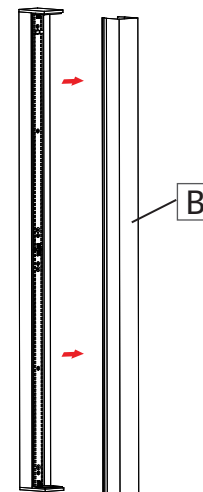


Remove lens (B) from the lamp.

3

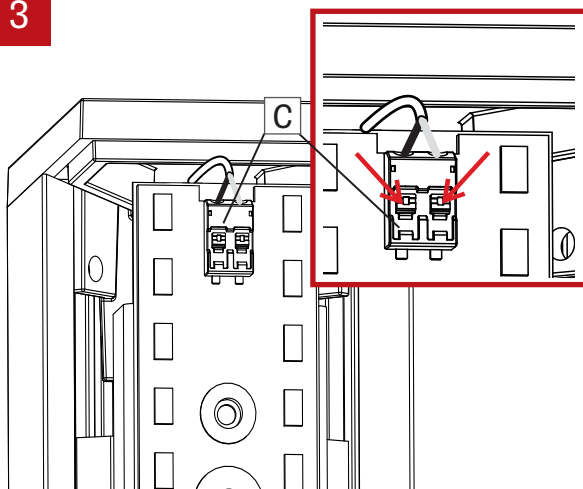


Disconnect LED molex connector (C) by taking a pointed object and pressing on the two tabs on the top.

4

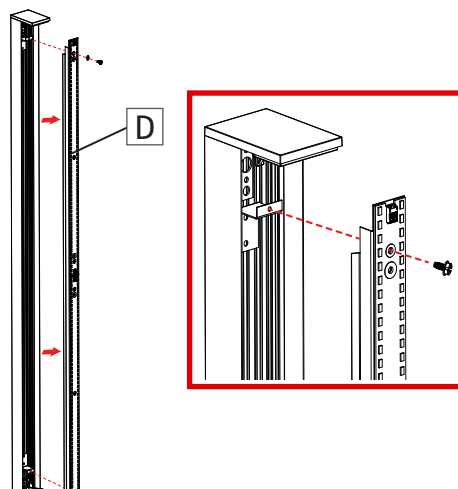


Unscrew the cartridge (D) and remove it from the fixture. Place the cartridge in a safe place.

5

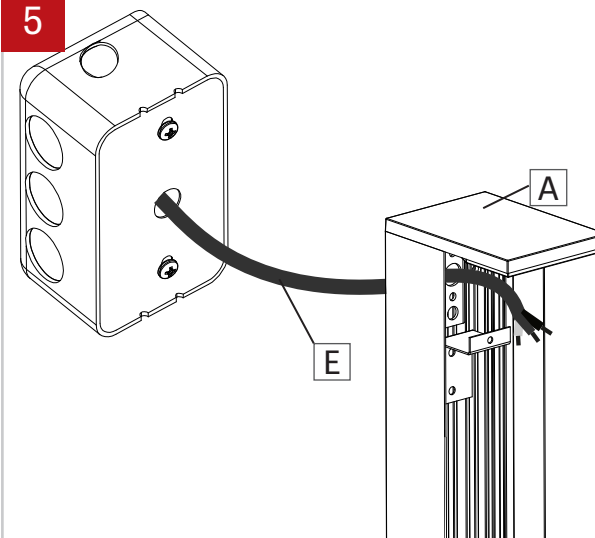


Insert wall power cable wires (E) inside the fixture (A).

6

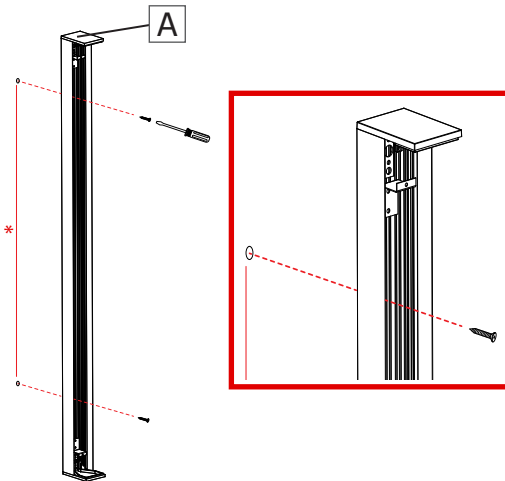


Install the fixture (A) on the wall according to the dimensions [*] given in the client drawings. Screw the fixture (A) to attach it to the wall.

7

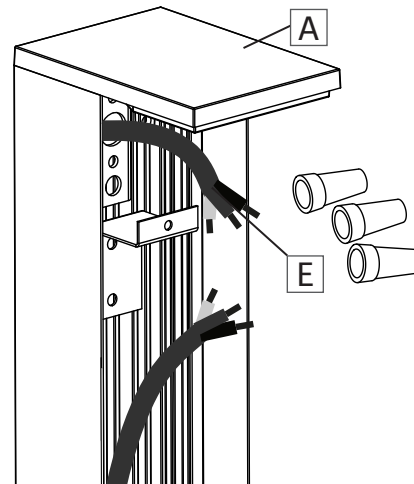


Make wire connection inside the fixture between fixture (A) and wall power cable (E).

8

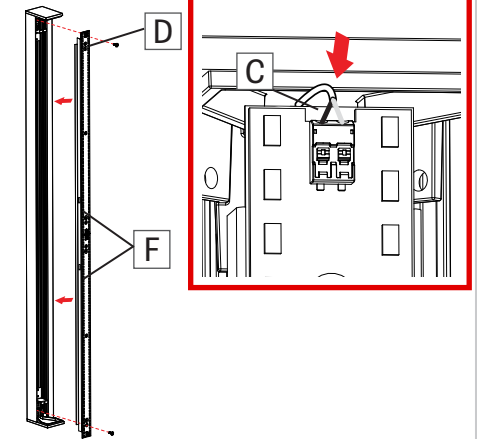

Reconnect the LED molex connector (C) to the cartridge (D). Reinstall the cartridge (D) **by using screws and plastic washers. Do not apply too much pressure.**

9

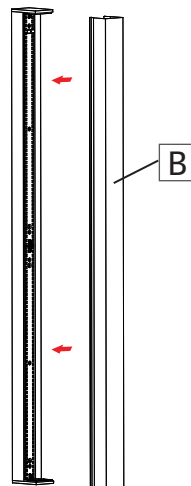

Reinstall the lens (B).