


REVEN-CAMBER FLUORESCENT

BALLAST REPLACEMENT


IMPORTANT: Installation instructions are shown with Reven and applies to Reven and Camber fixtures

1

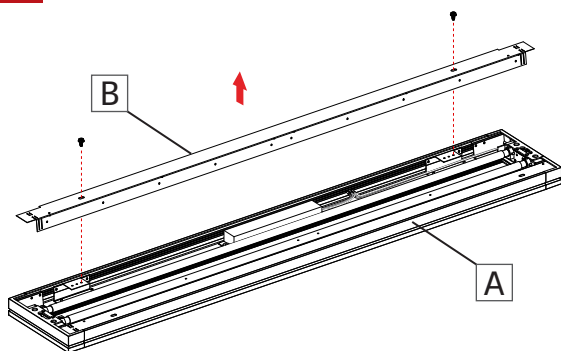


Make sure the power to the fixture (A) is turned off.
Unscrew the side reflector (B) and remove it.

2

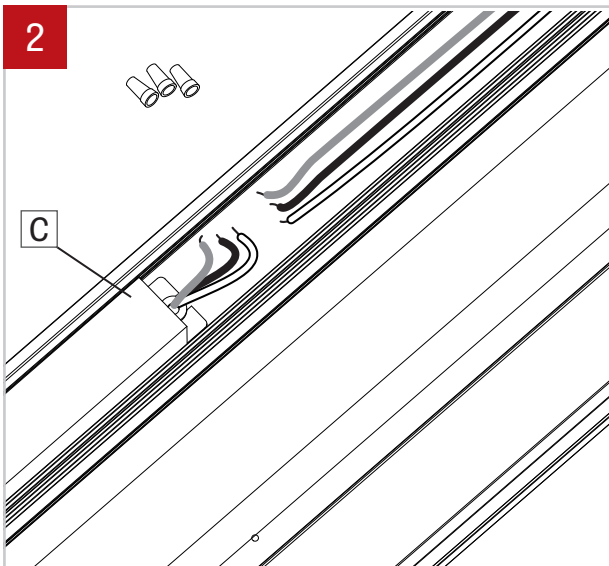


Disconnect wires from the ballast (C).

3

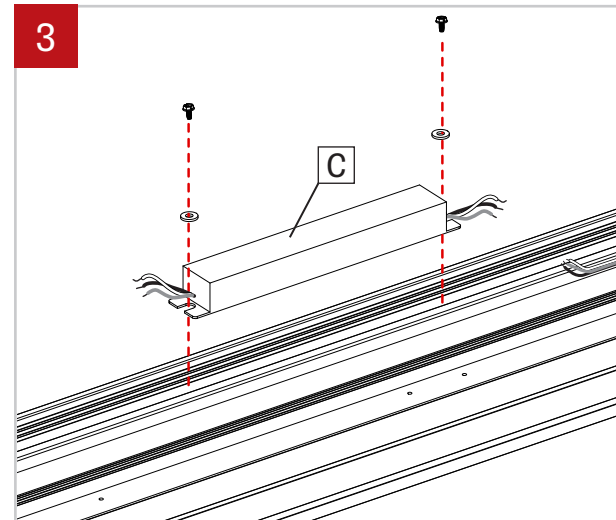

Unscrew the ballast (C) from the fixture (A).
Replace the driver and make connection with wire nuts.

4

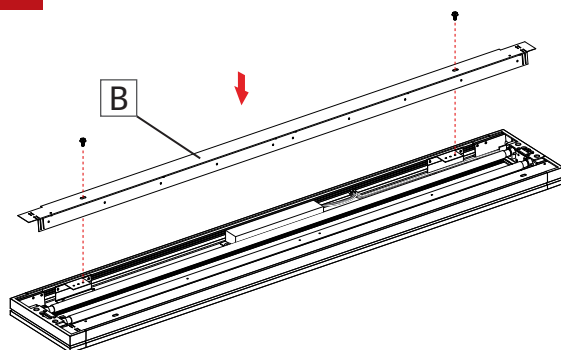

Screw the side reflector (B) back in place.