
REVEN-CAMBER FLUORESCENT


PENDANT STEM - INSTALLATION



IMPORTANT: Installation instructions are shown with Reven and applies to Reven and Camber fixtures

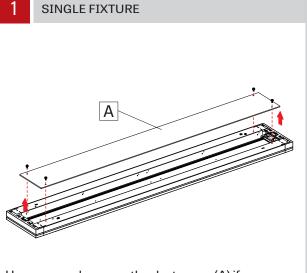


Unscrew and remove the dust cover (A) if provided.

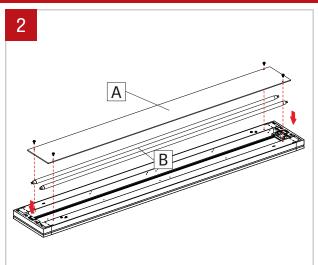


Install the lamps (B) and put back the dust cover (A) in place.


SINGLE FIXTURE POWER SIDE NON POWER SIDE C E

Make sure that the power to the fixture is turned off. Slide the slip ring (C) and the canopy (D) onto the stem (E) and leave some space. Screw the junction box crossbar (F) onto the stem (E).

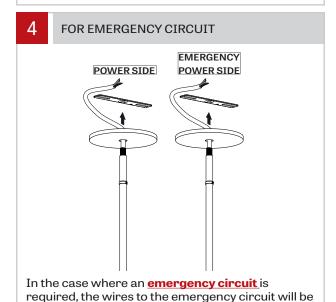

passed through a second stem.

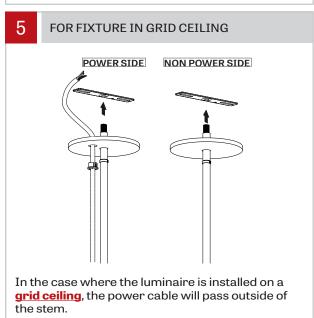

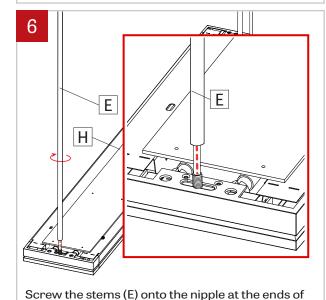

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILE NAME:REVEN-CAMBER-FLU-PENDANT-STEM-INST

the fixture (H).


November 14, 2019

Page: 1/3

REVEN-CAMBER FLUORESCENT

PENDANT STEM - INSTALLATION




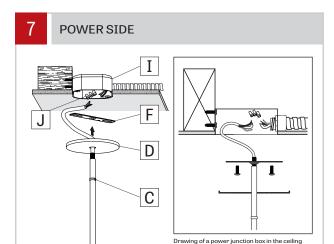



Raise the fixture and tighten the junction box crossbar (F) with screws to the junction box (I). Make wire connection with wire connectors (J). Then slide the canopy (D) and thighten the set up with the slip ring (C).


NON-POWER SIDE Trawing of a non power junction box in the ceiling

Raise the fixture and tighten the junction box crossbar (F) with screws (by others) to the junction box (I). Then slide the canopy (D) and thighten the set up with the slip ring (C).

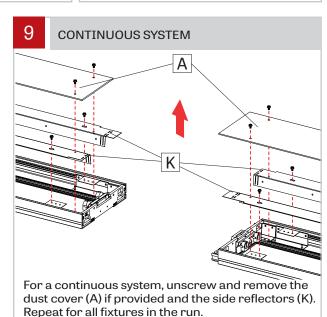

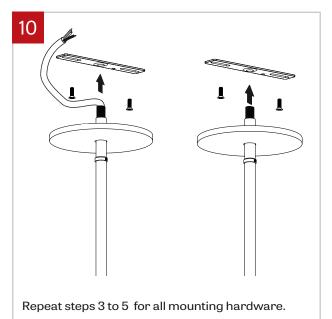

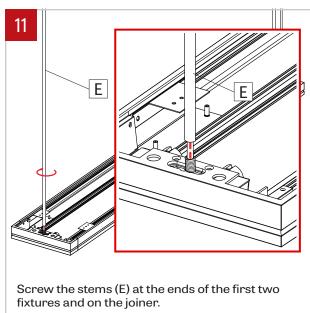

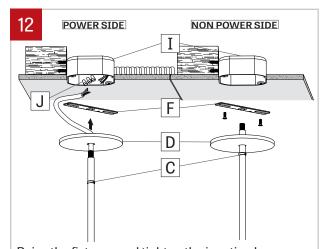

Raise the fixtures and tighten the junction box crossbars (F) with screws to the junction boxes (I). Make wire connection on the power side with wire connectors (J). Then slide the canopies (D) and thighten the sets up with the slip rings (C).



REVEN-CAMBER FLUORESCENT

PENDANT STEM - INSTALLATION



