


# REVEN-CAMBER-SMILE ICL


## LED CARTRIDGE REPLACEMENT

**IMPORTANT:** Installation instructions are shown with Reven and applies to Reven Camber and Smile fixtures


**NOTE:** Wire dimming conductors as Class 1

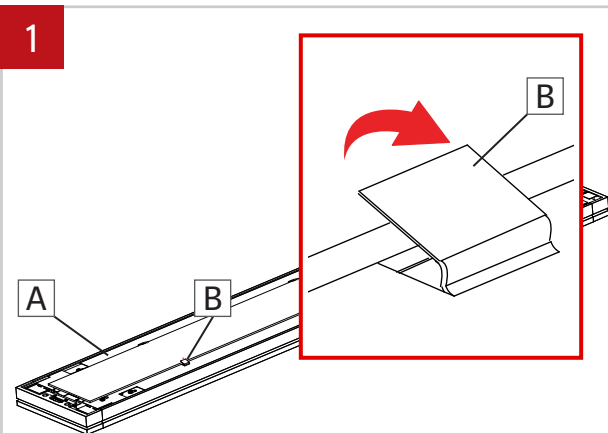


Make sure the power to the fixture (A) is turned off. Unfold the metal clips (B) to get access to the dust cover.

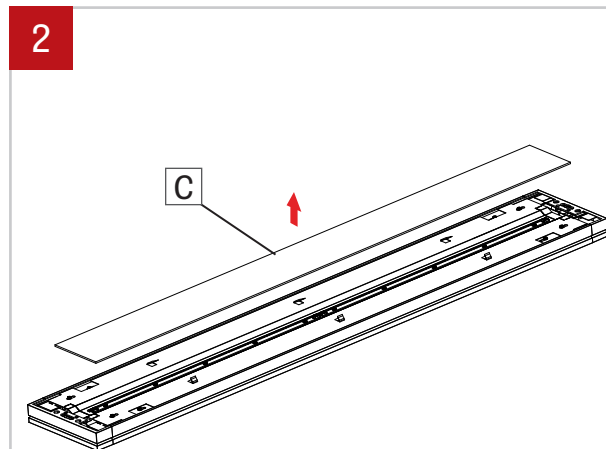


Remove the dust cover (C).

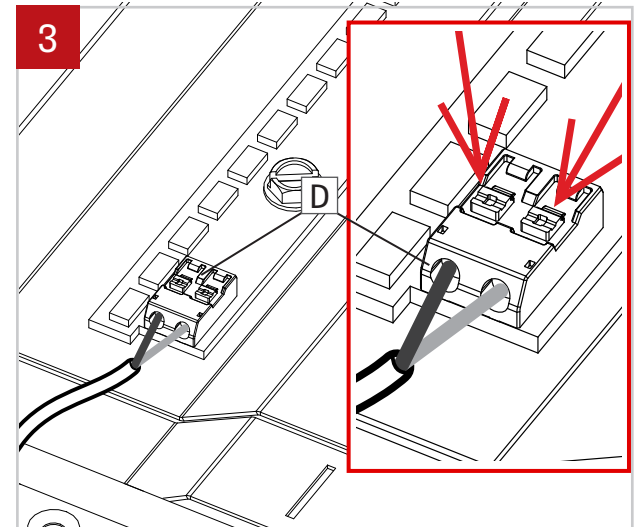


Disconnect LED molex connector (D) on the top reflector by taking a pointed object and pressing on the two tabs on the top.

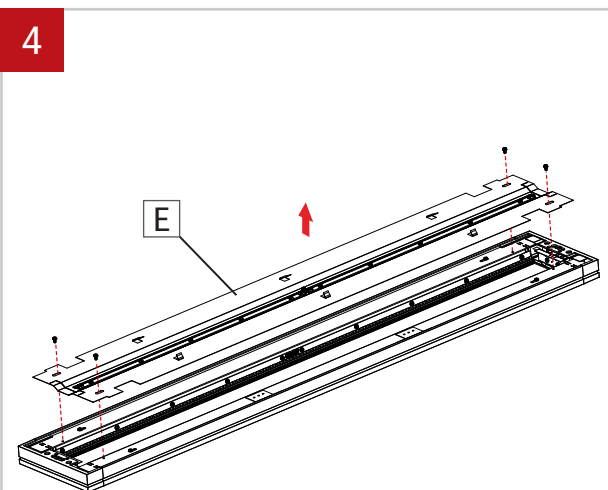

Unscrew and remove the top reflector (E).

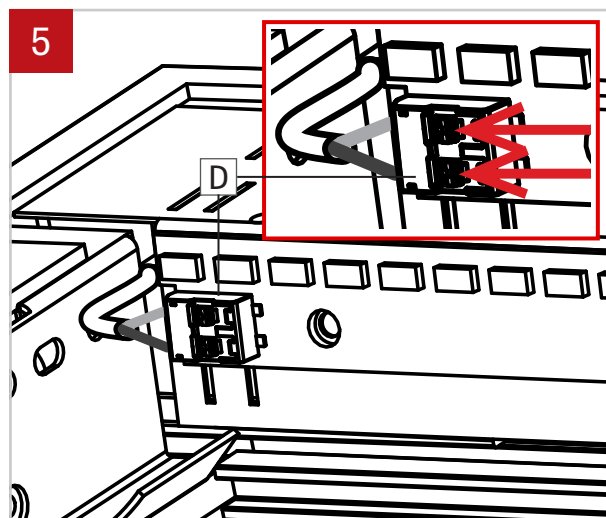

Disconnect LED molex connector (D) on the side reflectors by taking a pointed object and pressing on the two tabs on the top.

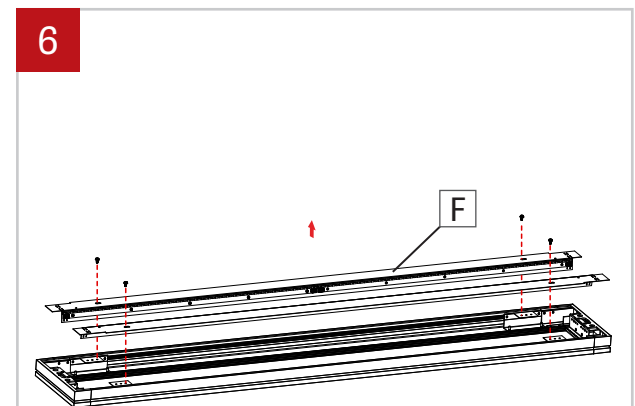

Unscrew the side reflectors (F) and remove them from the fixture.

# REVEN-CAMBER-SMILE ICL

## LED CARTRIDGE REPLACEMENT

