


REVEN-CAMBER-SMILE SIB

LED CARTRIDGE REPLACEMENT

IMPORTANT: Installation instructions are shown with Reven and applies to Reven, Camber and Smile fixtures


NOTE: Wire dimming conductors as Class 1

1

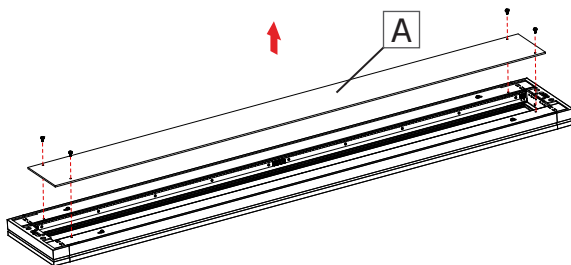


Make sure the power to the fixture is turned off. Unscrew and remove the dust cover (A) (if provided).

2

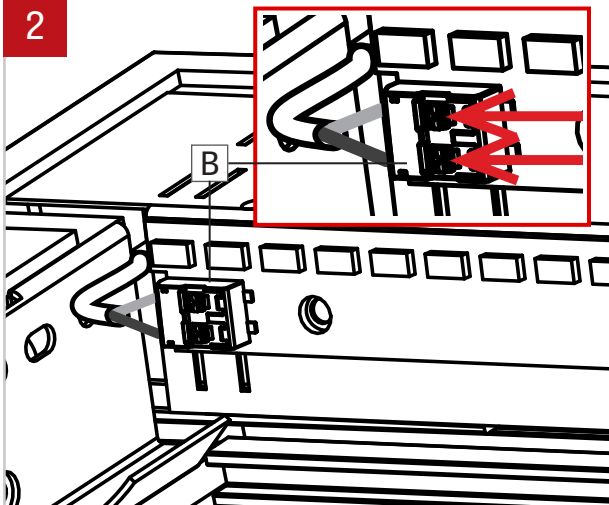


Disconnect LED molex connector (B) by taking a pointed object and pressing on the two tabs on the top.

3

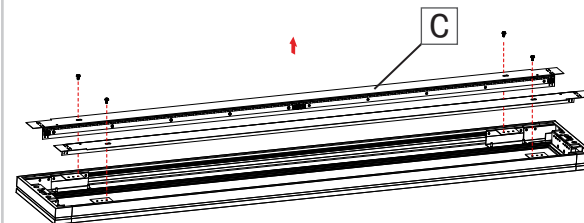


Unscrew the side reflectors (C) and remove them from the fixture.

4

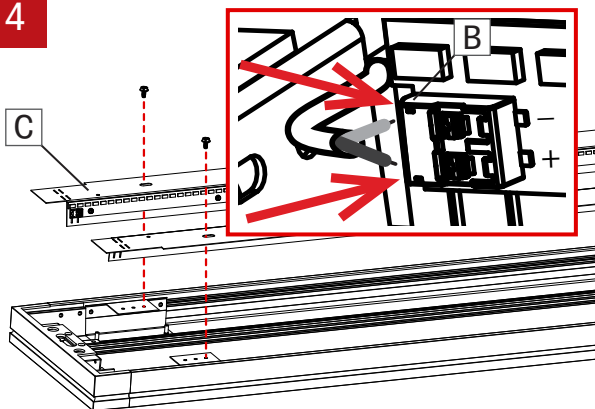

Replace the side reflectors (C) and reconnect the LED connector (B). **NOTE: connect white wire into the negative (-) terminal and the black wire into (+) positive terminal.** Make sure that the wires are not hiding any LED diode. Screw the side reflectors back in place.

5

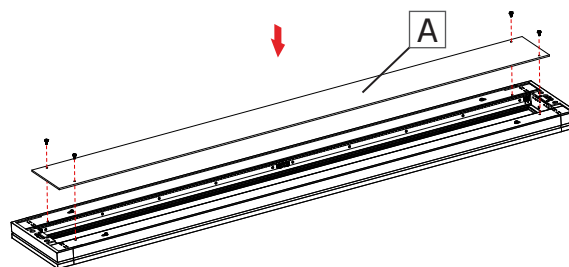

Reinstall the dust cover (A) (if provided).