

**IMPORTANT:** Installation instructions are shown with RIM 24 and applies to all RIM ROUNDS

**NOTE:** Wire dimming conductors as Class 1




This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. proper grounding is required for safety.


Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. la mise à terre électrique est obligatoire pour la sécurité.

### 1 REMOTE DRIVER BOX

Please refer to the remote driver installation sheet for more informations.

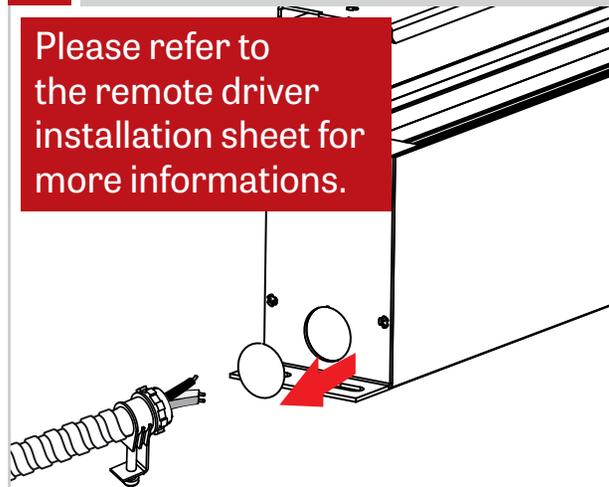


### 2

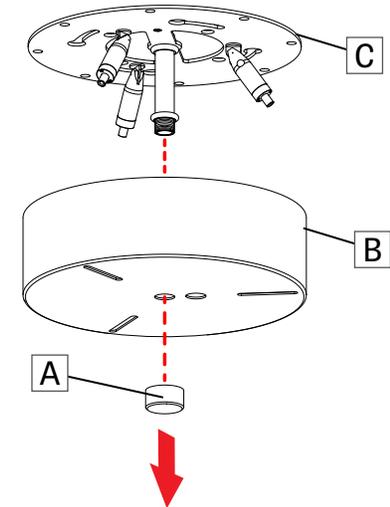


Loosen the decorative nut (A) on the canopy (B). Separate the canopy (B) from the canopy plate (C).

### 3

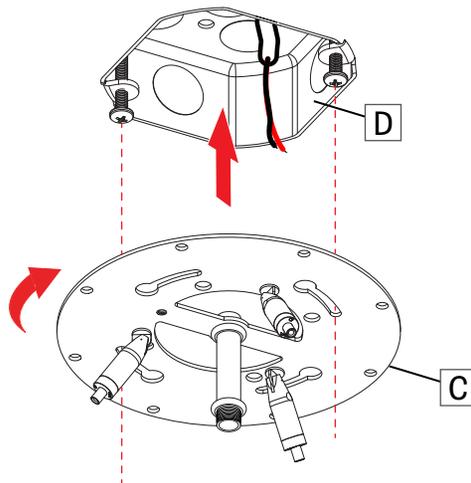


Fix the canopy plate (C) on the junction box (D).

### 4

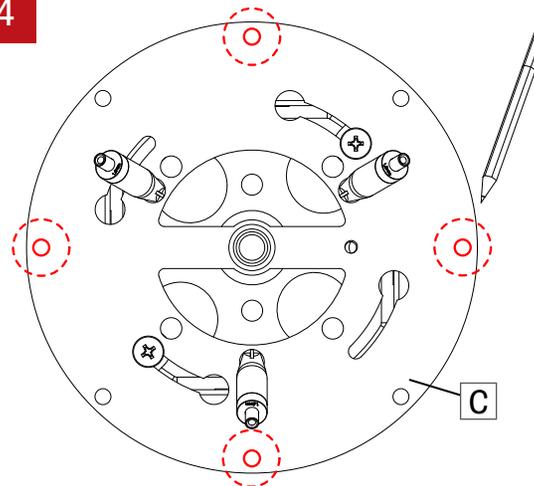

Use the canopy plate (C) as a model to draw 4 holes marked in red.

### 5

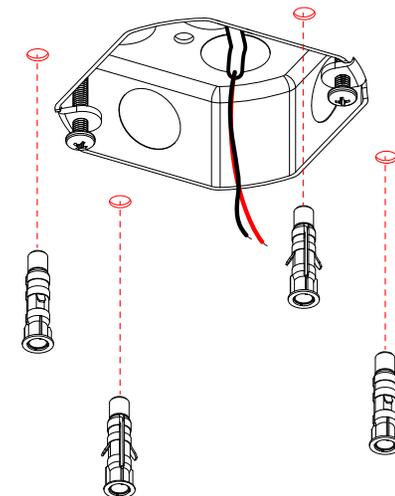


Remove the canopy plate and then drill holes (1/4" diameter) using the drawings previously marked as guide. Install #8 screw anchors.

# RIM ROUND


## PENDANT - REMOTE DRIVER BOX - AC - INSTALLATION INST.

6

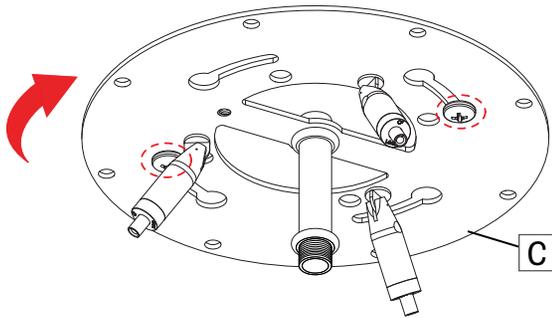


Tighten the two screws to secure the canopy (C) to the Junction box.

7

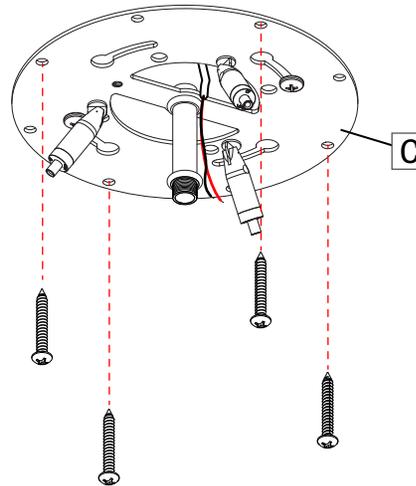


Use #8 screws to fasten the canopy (C) to the ceiling.

8

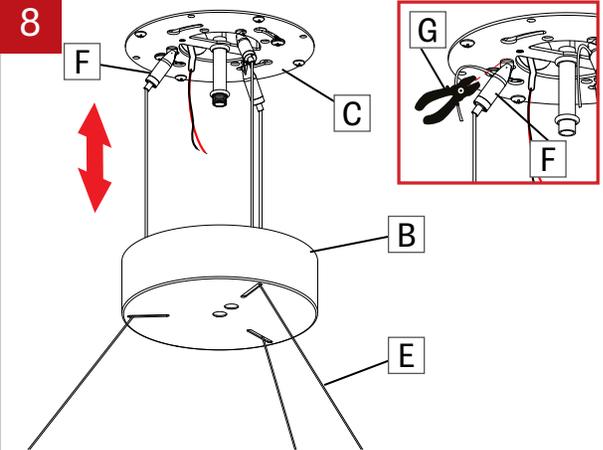


Pass the aircraft cables (E) through the canopy (B). Insert them into the grippers (F) then adjust the cables (E) by pushing the feeder tube (F). Cut the excess cable with an aircraft cable cutter (G). **RIM 36", 48" and 60" have 4 wires.**

9

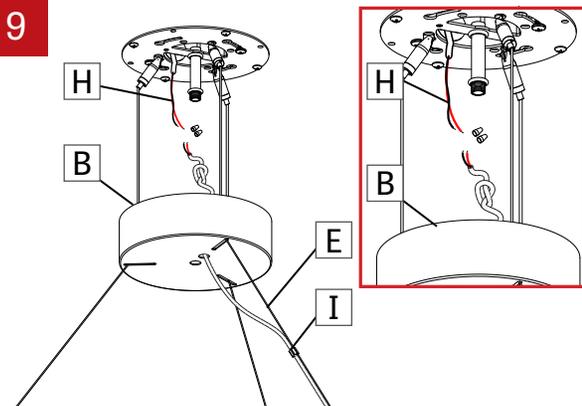

Pass the power cord into the canopy (B) and make a knot. Make electrical connections between the power cord and remote driver feed (H). **Installation may differ depending on your type of ceiling.** Secure the power cord to the aircraft cable (E) using plastic clip (I). **Warning : Power must come from Single branch circuit.**

10

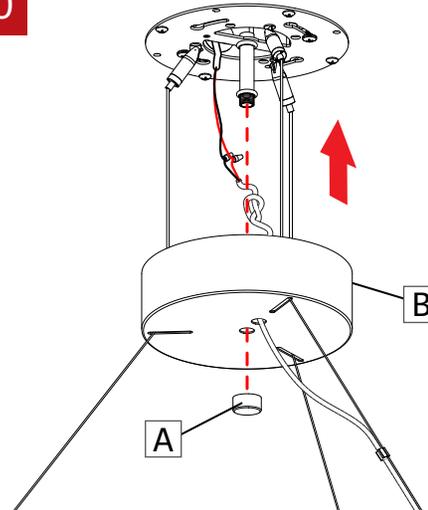

Put the canopy (B) back in place and fix using the decorative nut (A).