



NOTE: Wire dimming conductors as Class 1

1 INDIRECT

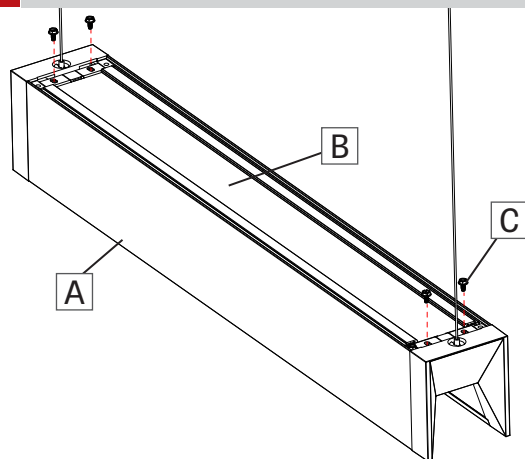


Make sure the power to the fixture (A) is turned off. Unscrew the indirect cartridge (B). Keep the screws (C) in a safe place.

2

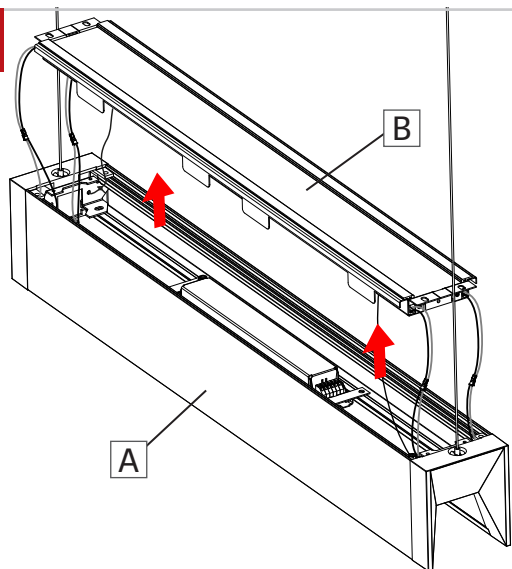


Extract the cartridges (B) from the fixture (A).

3

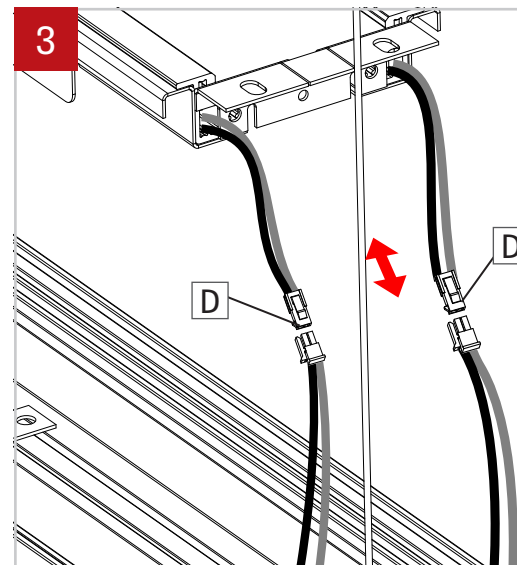


Disconnect every quick connectors (D).

4

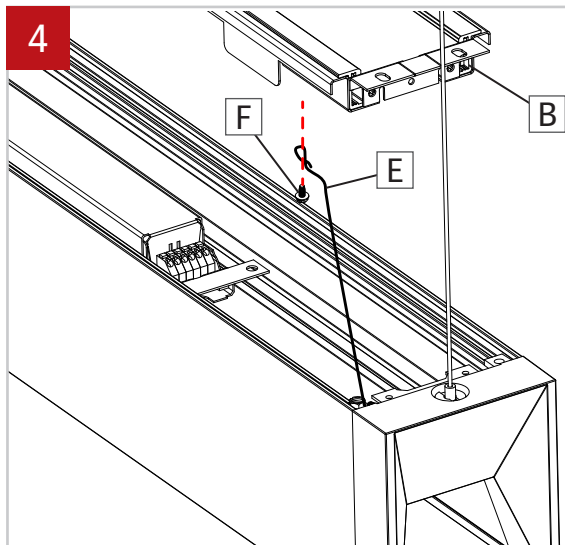


Unscrew the safety cable (E) from the cartridge (B). Keep the screws (F) in a safe place.

5

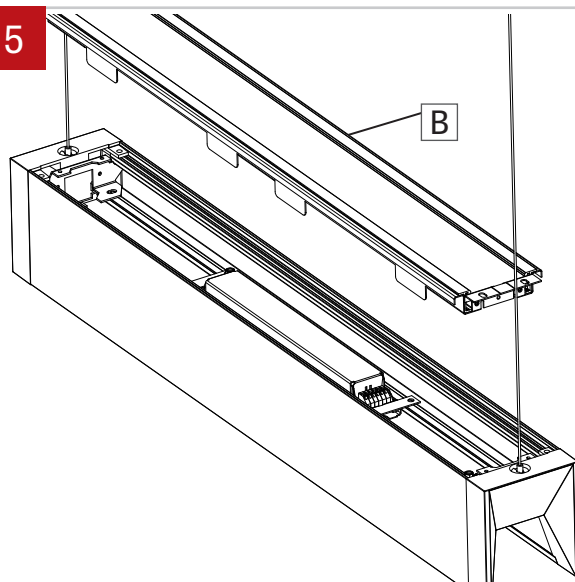


Replace the cartridge (B).


6

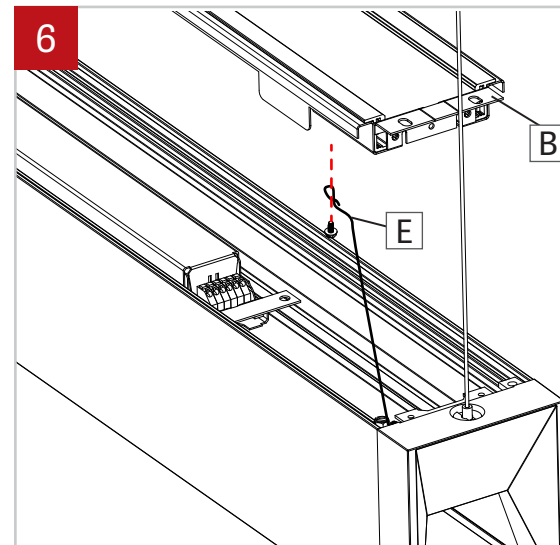


Reattach the safety cable (E) to the new cartridge (B).

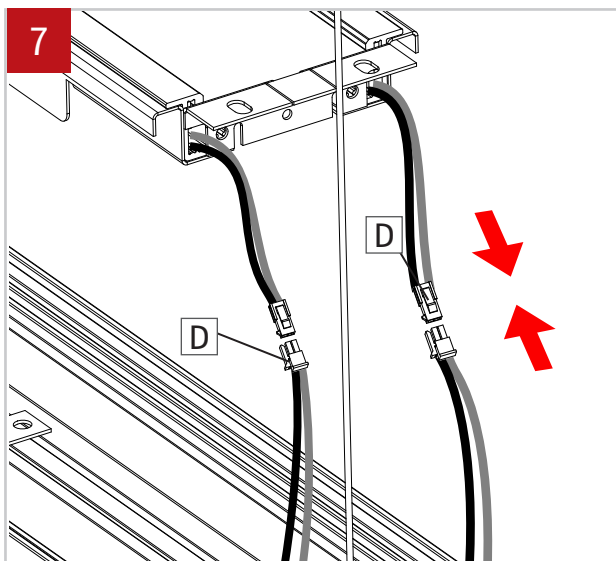


Reconnect all the quick connectors (D).

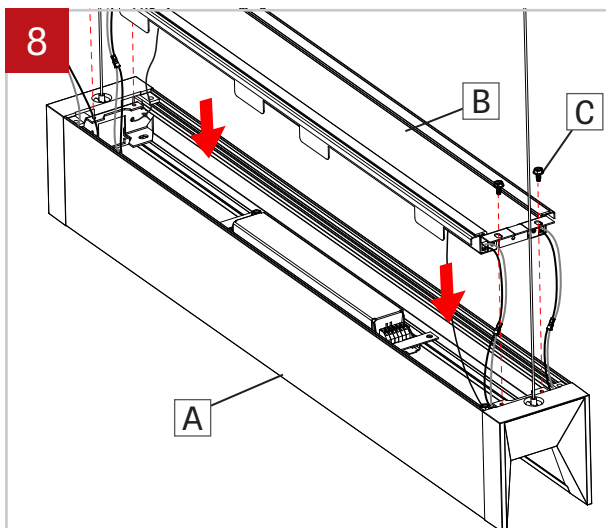


Put the new cartridges (B) back in the fixture (A). And fix it with the screws (C). Make sure that no wires or cables are in the way.

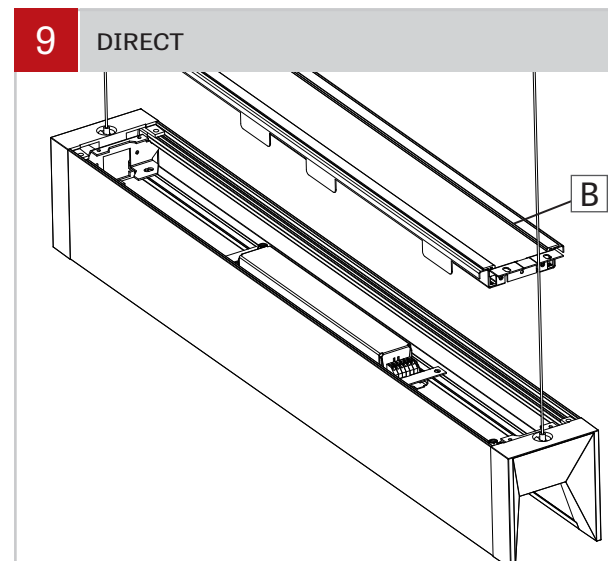


Repeat step 1 to 4 and remove the cartridge (B).

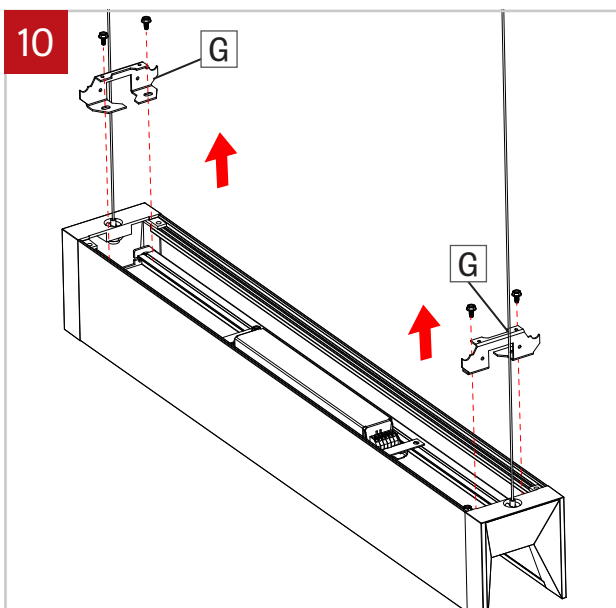

Unscrew and remove the key bracket (G). Keep the screws in a safe place.

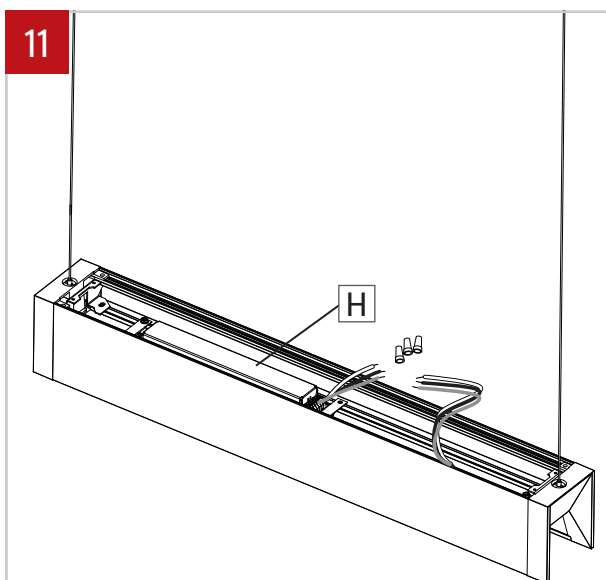

Disconnect wires from the driver (H).

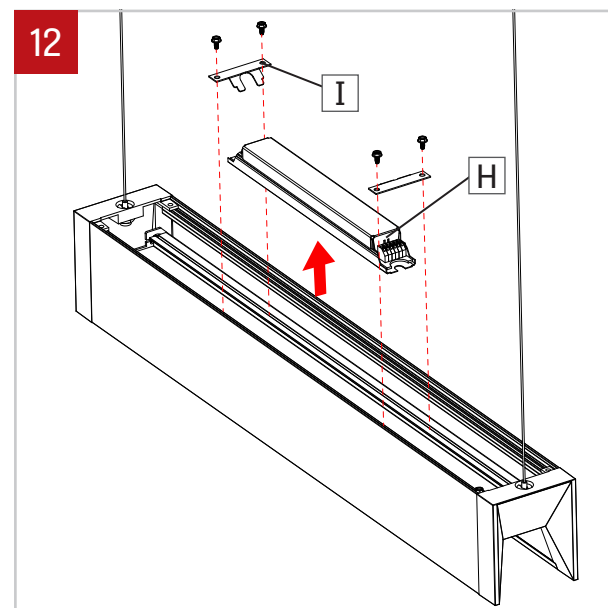

Unscrew the driver brackets (I) from the fixture and then the driver (H).

