



**NOTE:** Wire dimming conductors as Class 1

### 1 SINGLE FIXTURE

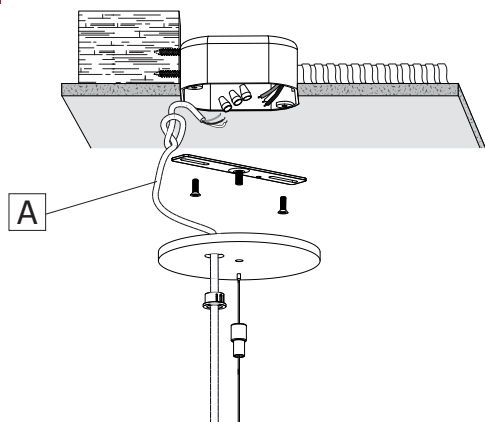


Locate ceiling mounting points according to supplied client drawing. Make a knot in the power cord (A) and then connect it to the ceiling power feed.

### 2 POWER SIDE

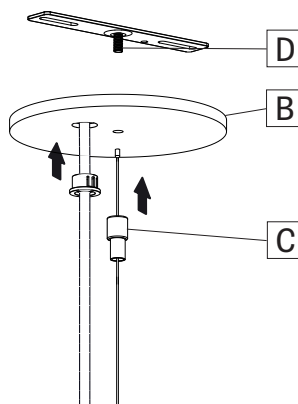


Secure canopy (B) with slip ring (C) on threaded rod (D).

### 3 NON-POWER SIDE

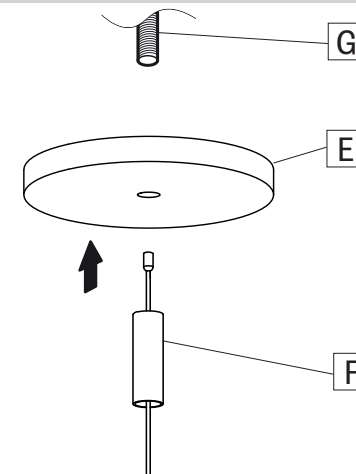


Secure canopy (E) with cable coupler (F) on crimp strud (1/4"-20) (G) (by other).

### 4

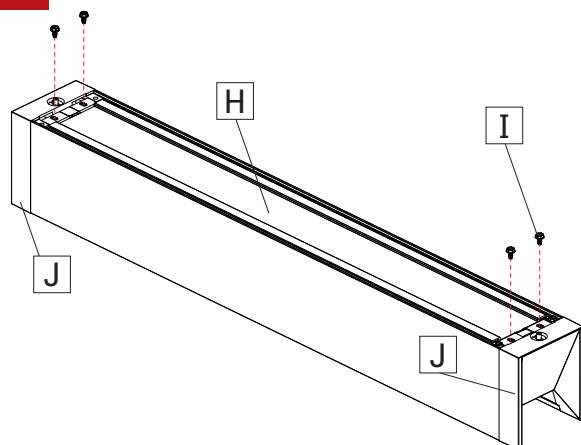


Unscrew the indirect cartridge (H). Keep the screws (I) in a safe place. (If more than one cartridge, remove only screws close to end caps (J)).

### 5

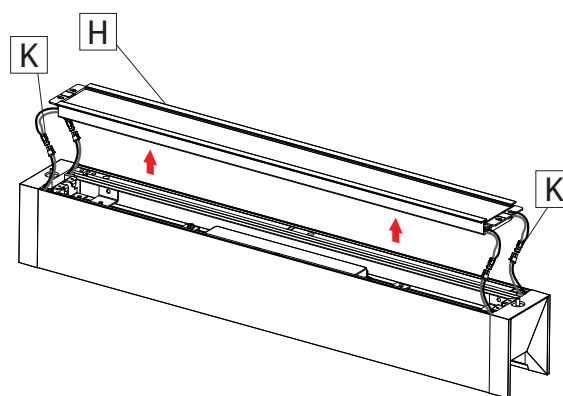

Pull off the cartridge (H) and disconnect the quick connectors (K). Keep the cartridge (H) in a safe place.

### 6

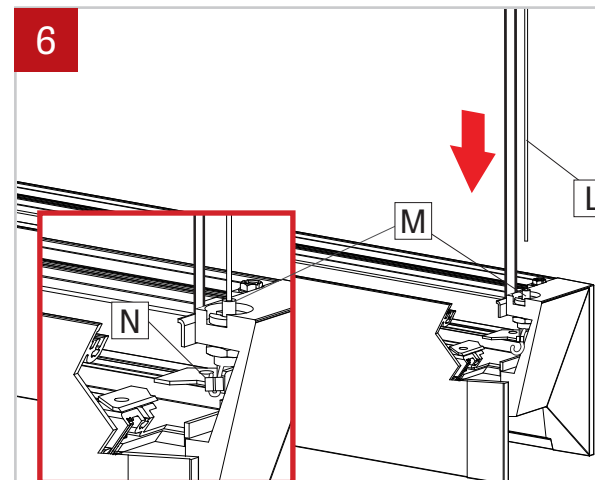

Insert the aircraft cable (L) into the cable gripper (M). Adjust the cable (L) length and secure it with the cable ferrule (N). **Cut the excess cable (L).**

