

SHELL

Linear - Pendant - Cable - Remote Driver

LUMENWERX



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Wire dimming conductors as Class 1.



Do not handle fixture by the wires.




For Shell 4FT, a minimum 50" of clearance space is required on one end for the installation.



For Shell 8FT & 12FT, a minimum 50" of clearance space is required on both ends for the installation.


1 INSTALL THE REMOTE DRIVER BOX.

Please refer to the remote driver box installation sheet for more information.

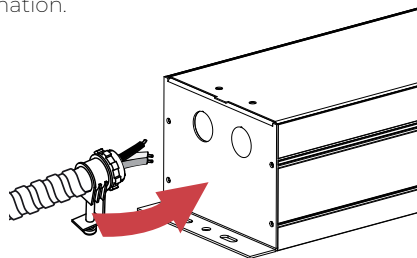



2 DISASSEMBLE THE POWER SIDE CANOPY.

Detach the canopy [A] and the cone [B] from the cross-bracket [D] and lower it along the aircraft cable [C].

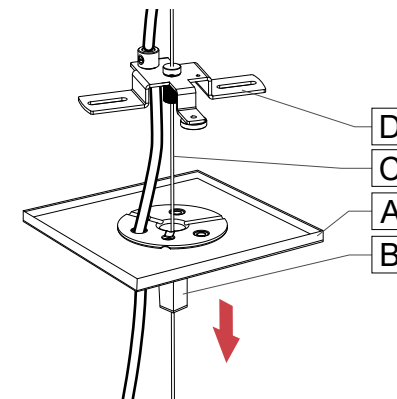

3 INSTALL THE CROSS-BRACKET.


Install the cross-bracket [D] on the J-box [E] with screws [F]. Adjust the aircraft cable [C] length by pushing the feeder tube [G]. Tighten the cable holder screw [H] to secure the power cord [I].

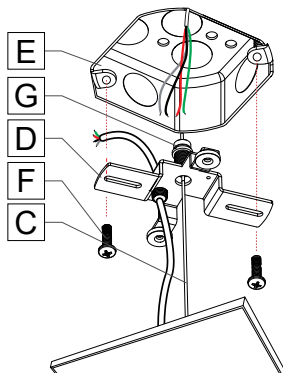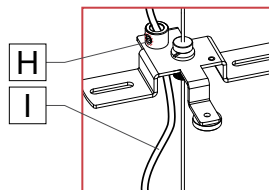

4 MAKE ELECTRICAL CONNECTION.

Make low voltage electrical connection between the fixture wires [I] and the remote driver wires [J] using wire nuts [K].

Warning: Power must come from single branch circuit.

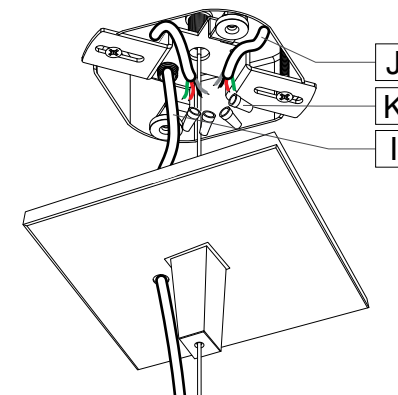


SHELL

Linear - Pendant - Cable - Remote Driver

LUMENWERX


5 INSTALL THE CANOPY.

Attach the canopy [A] and the cone [B] on the magnetic cross-bracket [D].

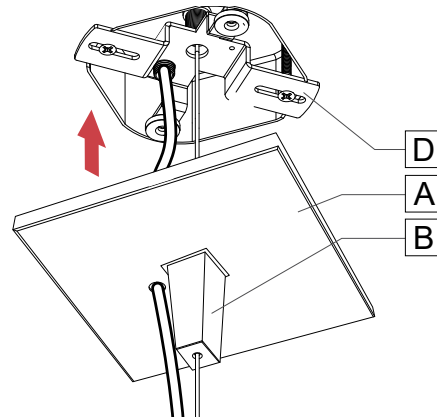

6 ATTACH CLIPS.

Secure the power cord [I] to the aircraft cable [C] with plastic clips [L].

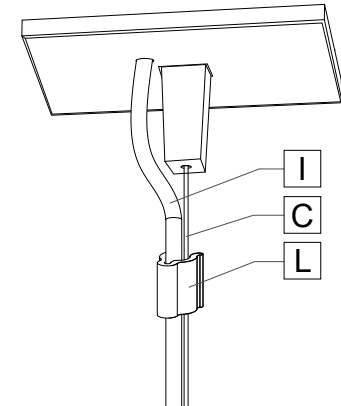

7 INSTALL NON-POWER SIDE CANOPIES.

To install non-power side canopies, repeat steps 2, 3 & 5.

