

# SHELL

## Linear - Pendant - Stem - Canopy Driver

LUMENWERX



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Wire dimming conductors as Class 1.



Do not handle fixture by the wires.





For Shell 4FT, a minimum 50" of clearance space is required on one end for the installation.



For Shell 8FT & 12FT, a minimum 50" of clearance space is required on both ends for the installation.


### 1 INSTALL THE STEM ON THE FIXTURE.

Pass the wires through the stem [A]. Screw the stem [A] into the fixture [B].

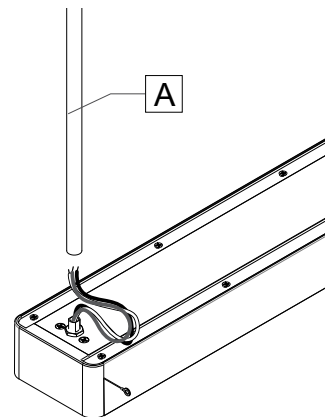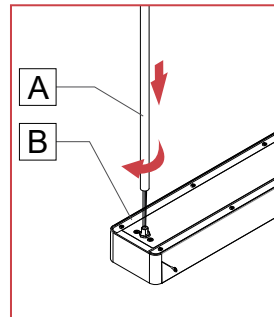


### 2 DETACH THE POWER SIDE CANOPY.

Detach the canopy [C] from the driver box [D] and slide it over the stem [A].

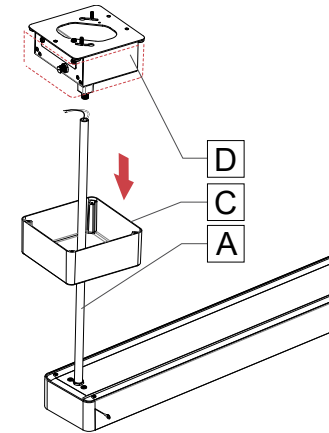


### 3 REMOVE THE J-BOX PLATE.

Untighten the hex nuts [E] and remove the J-box plate [F] from the driver box [D].

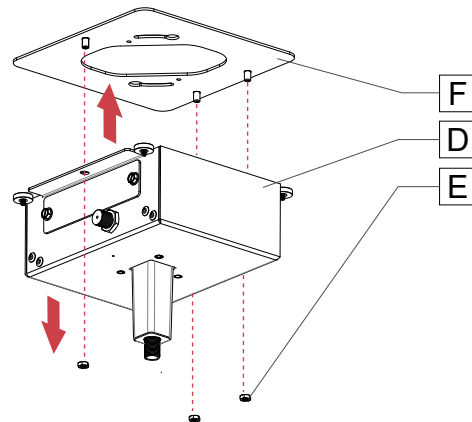

### 4 INSTALL THE J-BOX PLATE.

Install the J-box plate [F] to the J-box [G] with screws [H].


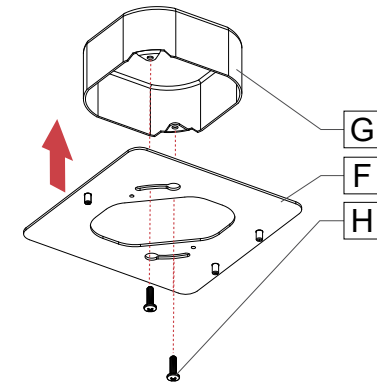


# SHELL

## Linear - Pendant - Stem - Canopy Driver


### 5 INSTALL THE STEM ON THE CANOPY.

Pass the fixture wires [J] through the canopy cone [I]. Screw the stem [A] on the canopy cone [I].

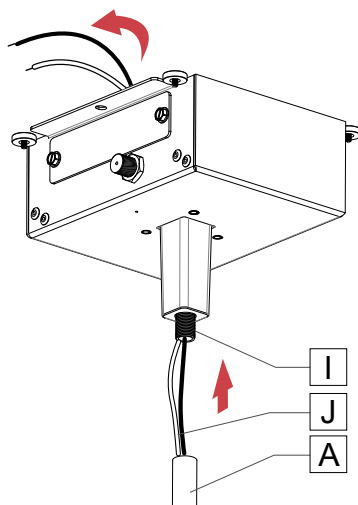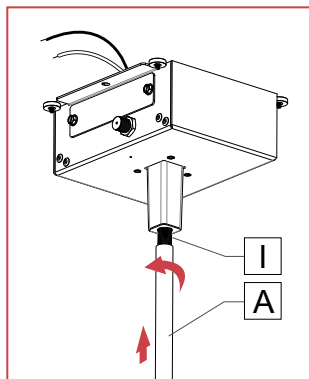

### 7 INSTALL THE DRIVER BOX.

Install the driver box [D] on the J-box plate [F] with hex nuts [E].

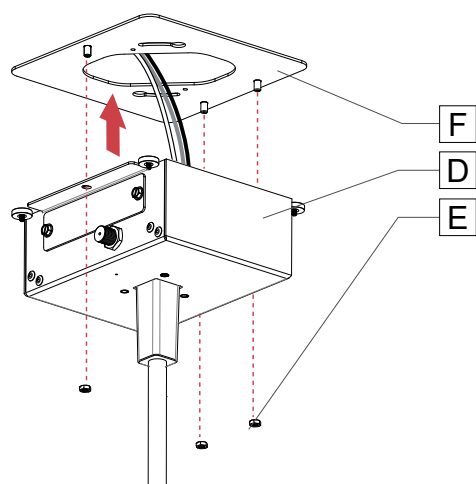


### 6 MAKE ELECTRICAL CONNECTION.

First make low voltage electrical connection between the fixture wires [J] and the driver wires [K] using wire nuts [L].


Then connect the driver [M] to the main power [N] from the building using wire nuts [L].

**Warning:** Power must come from single branch circuit.

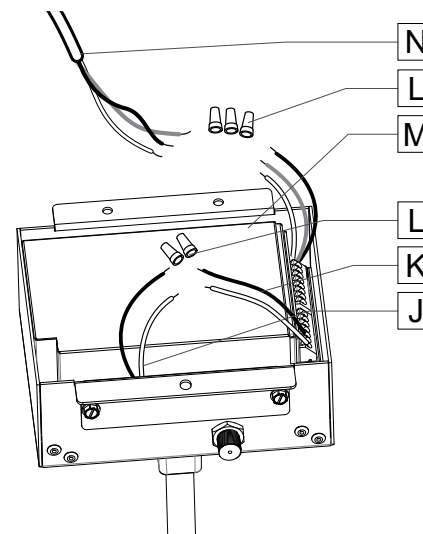

### 8 INSTALL THE CANOPY.

Slide the canopy [C] over the driver box [D] until its magnets reach the J-box plate [F].

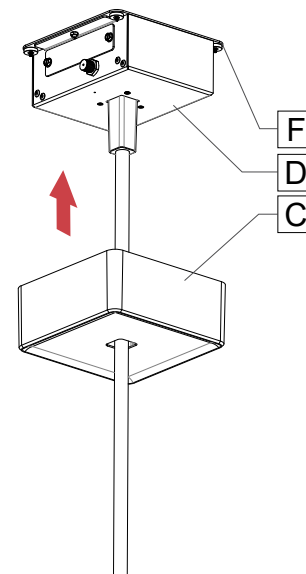


# SHELL

## Linear - Pendant - Stem - Canopy Driver


LUMENWERX

### 9 INSTALL NON-POWER SIDE STEMS AND CANOPIES.


Screw the stem [O] into the fixture [B].

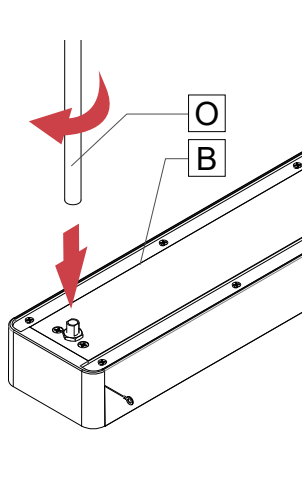

Lower the canopies [P] and the canopy cones [Q] along the stem [O].

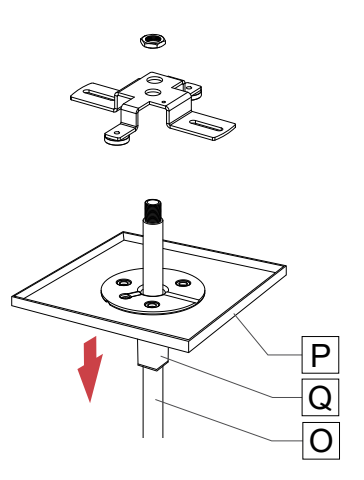

Install the cross-bracket [R] on the J-box [S] using the screws [T].

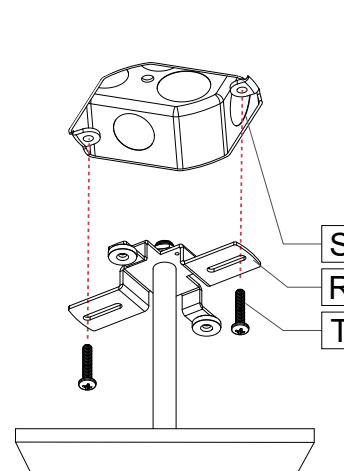

Attach the canopy [P] and the canopy cone [Q] on the magnetic cross-bracket [R].

