PENDANT STEM - REMOTE DRIVER - INST





IMPORTANT: Installation INST. are shown with SHELL 12" (Do not handle fixture by the wires)

NOTE: Wire dimming conductors as Class 1


1 REMOTE DRIVER BOX

Please refer to the remote driver installation sheet for more informations.

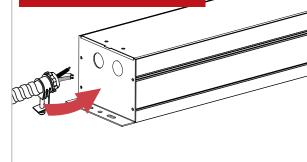


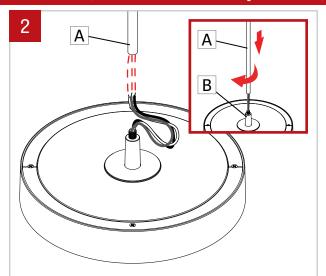


Pass the wires through the stem(A). Assemble the stem (A) into the cone (B) by screwing it.

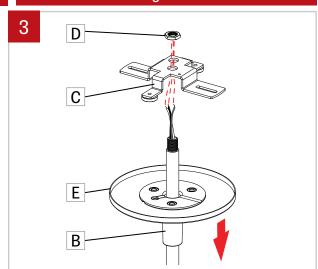


Pass the wires through the middle hole of the cross-bracket (C) and nut (D). Lower the canopy (E) and the cone (B) along the stem(C).

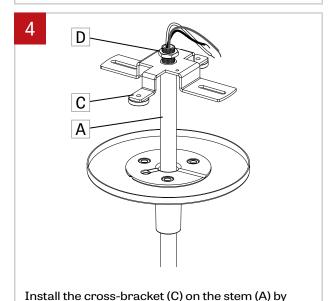

using the nut (D).

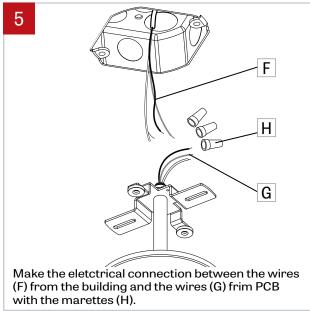

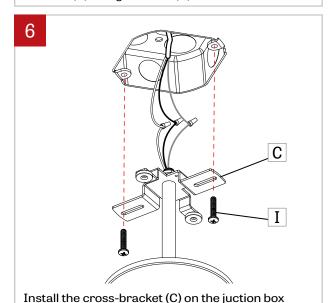

with screws (I).

LumenWerx ULC. reserves the right to change or modify product specifications without notification

SHELL ROUND

PENDANT STEM - REMOTE DRIVER - INST



