



NOTE: Installation instructions are shown with Togo 24


NOTE: Wire dimming conductors as Class 1

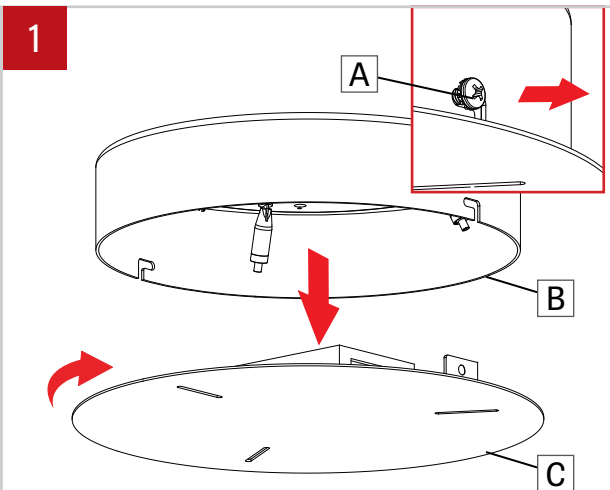


Slightly loosen the screws (A) on the side of the canopy (B). Remove the canopy plate (C).

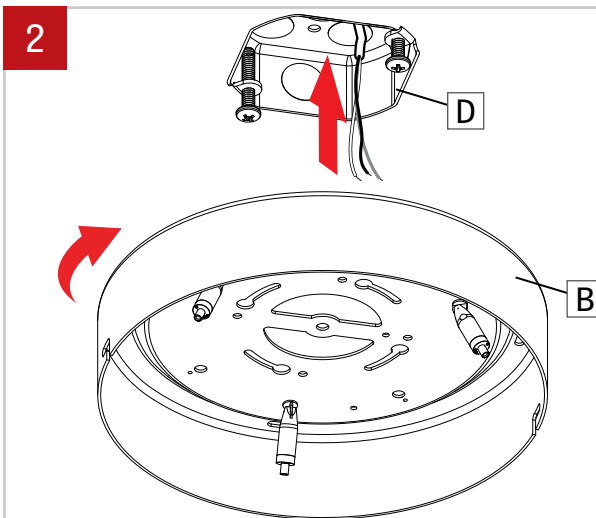


Place the canopy (B) on the junction box (D).

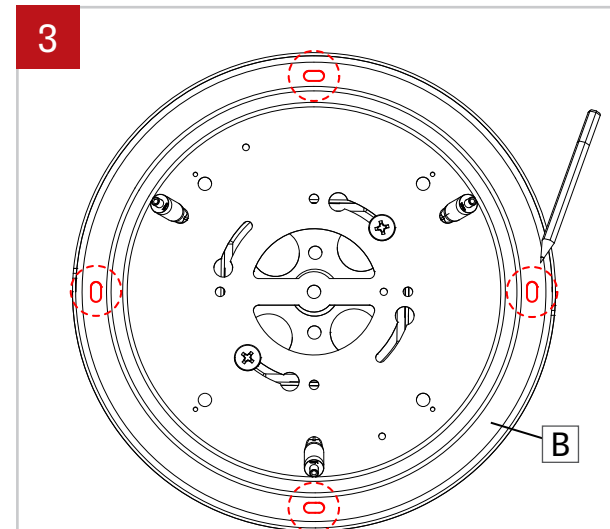


Use the canopy plate (B) as a model to mark 4 drill holes.

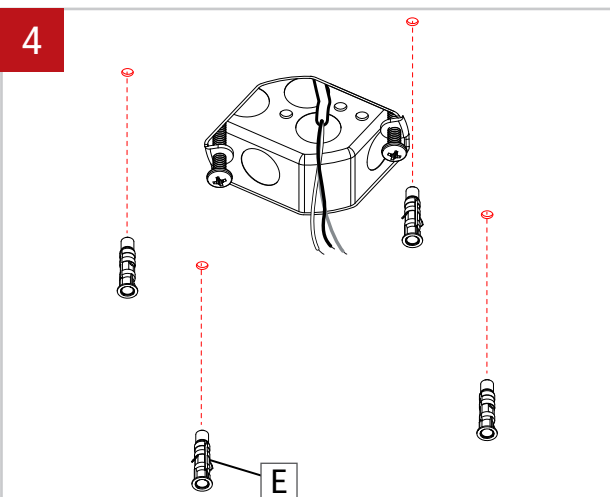

Remove the canopy. Drill holes (1/4" diameter) following the drill holes. Install #8 screw anchors (E).

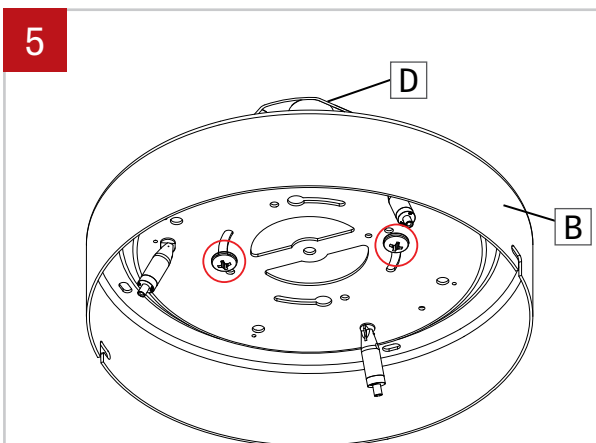

Tighten screws to secure the canopy (B) to the junction box (D).

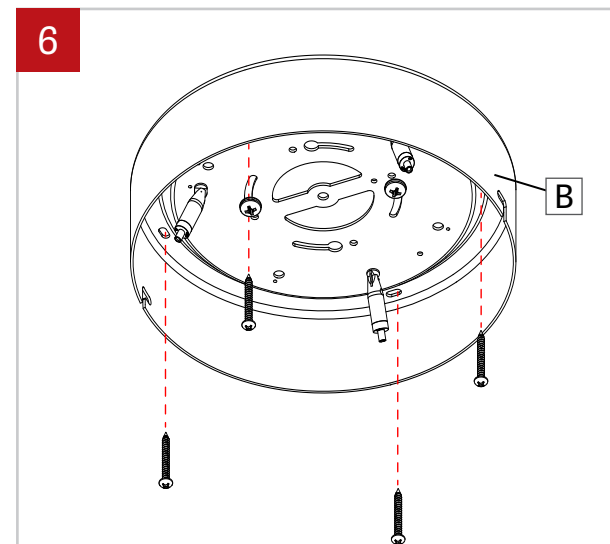

Use screws to fasten the canopy (B) to the ceiling.

