


NOTE: Installation instructions are shown with Togo 24


NOTE: Wire dimming conductors as Class 1

1 REMOTE DRIVER BOX

Please refer to the remote driver installation sheet for more informations.

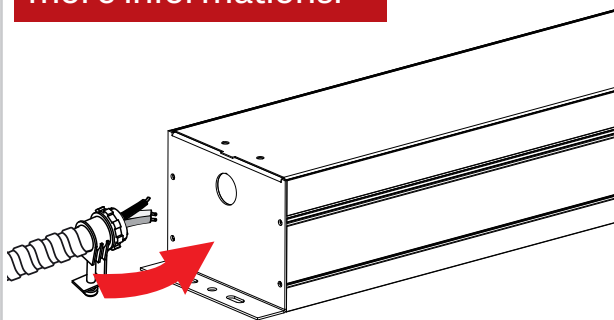


2

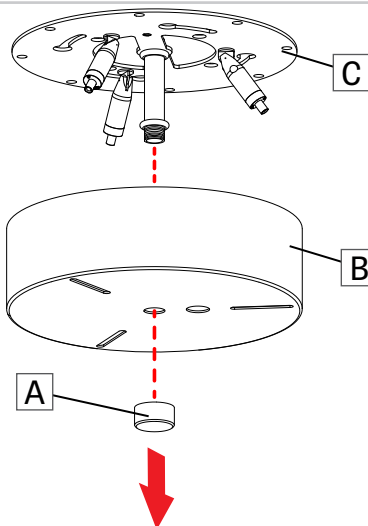


Loosen the decorative nut (A) on the canopy (B). Separate the canopy (B) from the canopy plate (C).

3

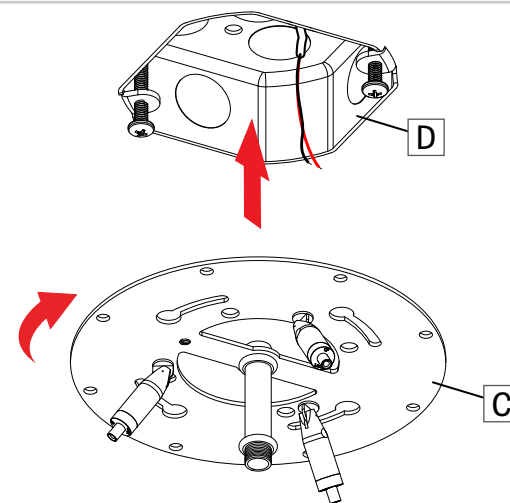


Place the canopy plate (C) on the junction box (D).

4

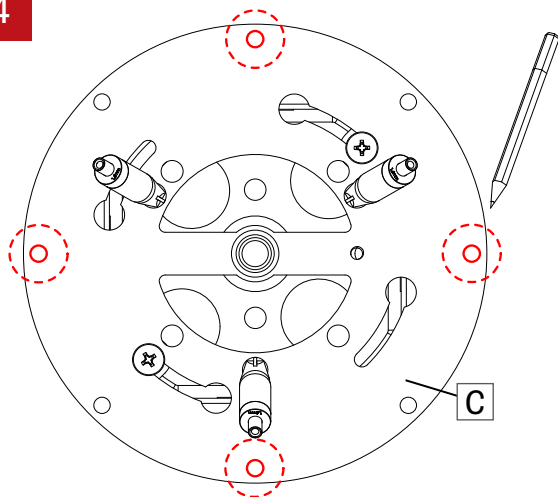


Use the canopy plate (C) as a model to mark 4 drill holes.

5

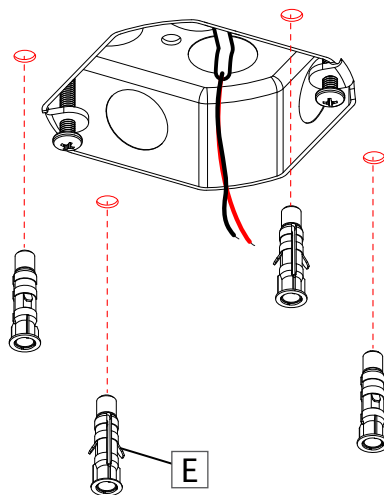


Remove the canopy plate. Drill holes (1/4" diameter) following the drill holes. Install #8 screw anchors (E).

6

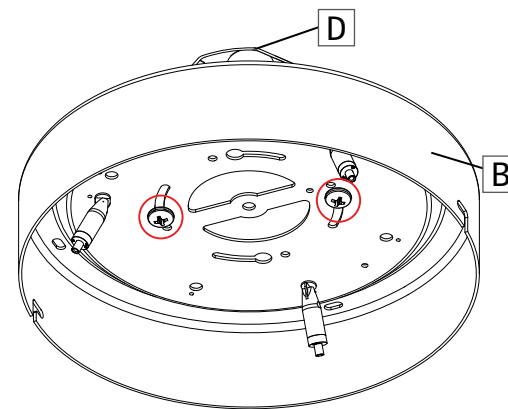


Tighten #8 screws to secure the canopy (B) to the junction box (D).

7

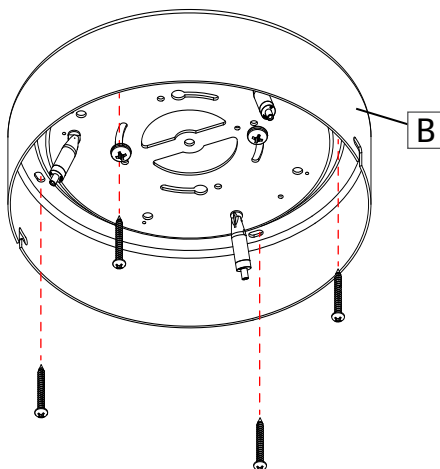


Use screws to fasten the canopy (B) to the ceiling.

8

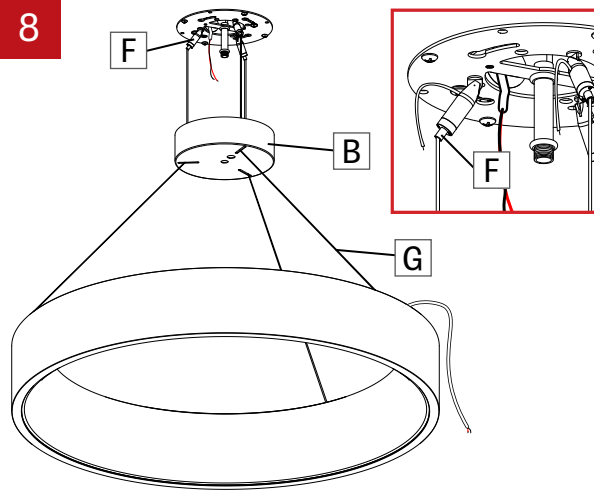


Pass all cables (H) through the canopy (B). Insert them into the grippers (F). Adjust the cables (G) by pushing the feeder tube (F). **Togo 36" and 48" have 4 wires.**

9

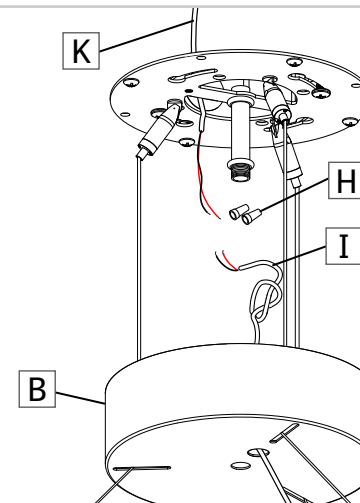


Pass the power cord (I) into the canopy (B) and make a knot. Make electrical connections between the power cord (I) and remote driver feed (K) with electrical marettes (H).

10

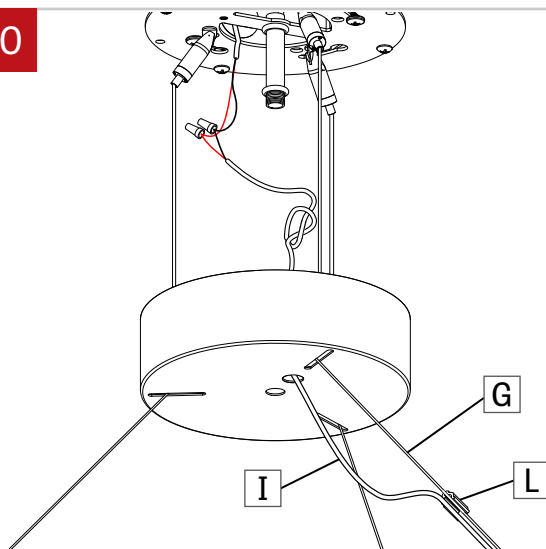

Secure the power cord (I) to the aircraft cable (G) with a plastic clip (L).

11

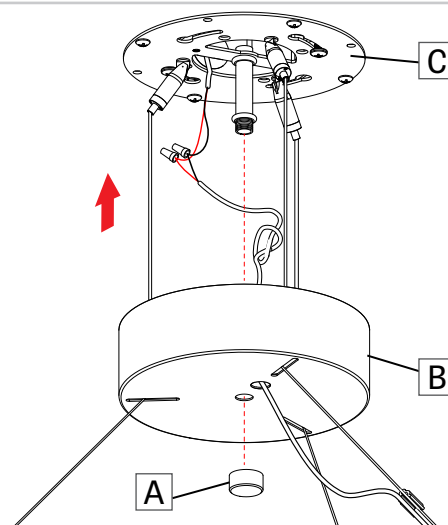

Fix the canopy (B) to the canopy plate (C) using the decorative nut (A).