


NOTE: Installation instructions are shown with Togo 24


NOTE: Wire dimming conductors as Class 1

1 REMOTE DRIVER BOX

Please refer to the remote driver installation sheet for more informations.

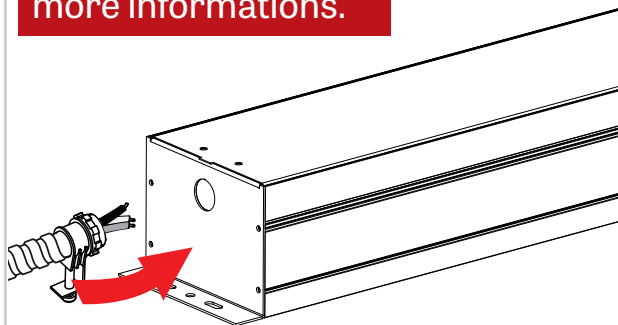


2

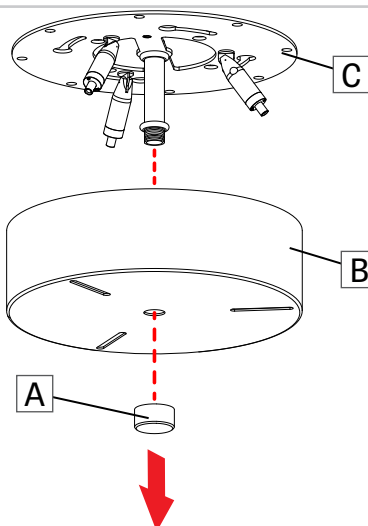


Loosen the decorative nut (A) on the canopy (B).
Separate the canopy (B) from the canopy plate (C).

3

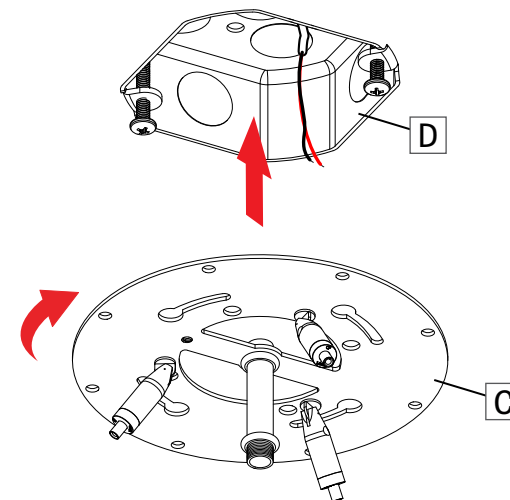


Place the canopy plate (C) on the junction box (D).

4

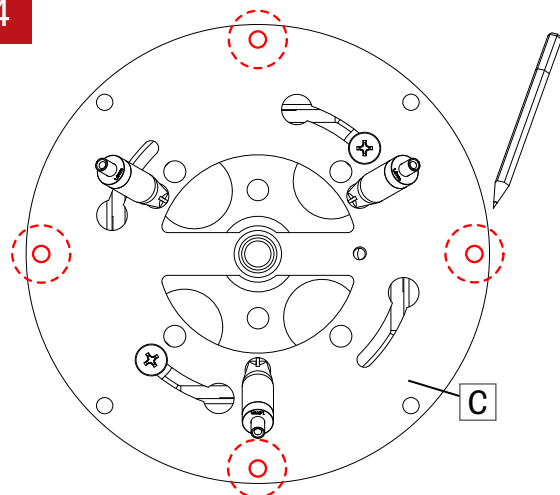


Use the canopy plate (C) as a model to mark 4 drill holes.

5

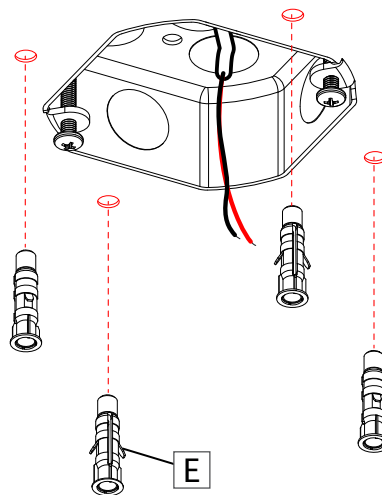


Remove the canopy plate. Drill holes (1/4" diameter) following the drill holes. Install #8 screw anchors (E).

6

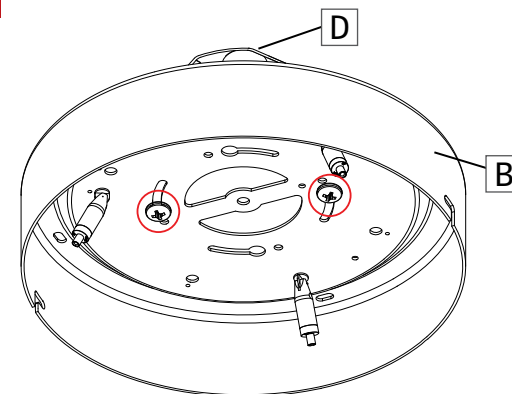


Tighten screws to secure the canopy (B) to the junction box (D).

7

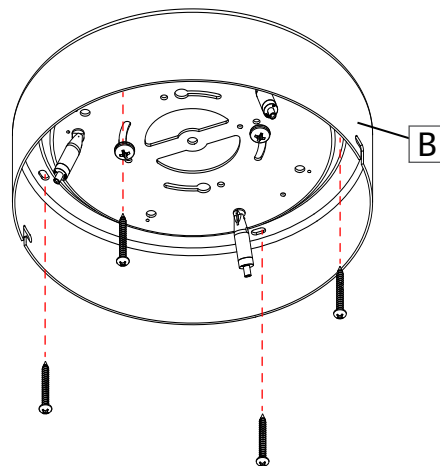


Use screws to secure the canopy (B) on the ceiling.

8

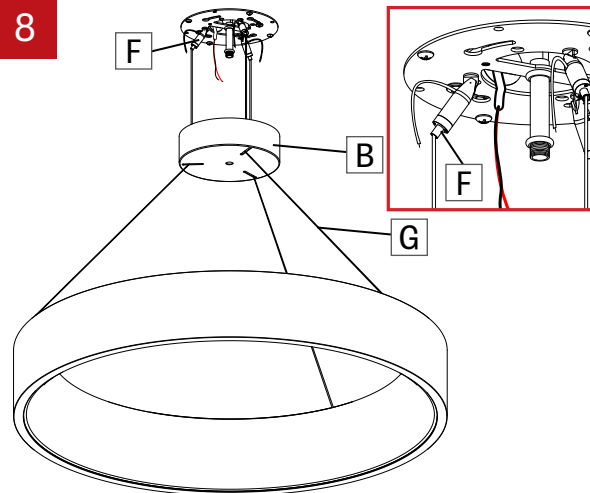


Pass all cables (H) into the canopy (B). Insert them into the grippers (F). Adjust the cables (G) by pushing the feeder tube (F). **Togo 36" and 48" have 4 wires.**

9

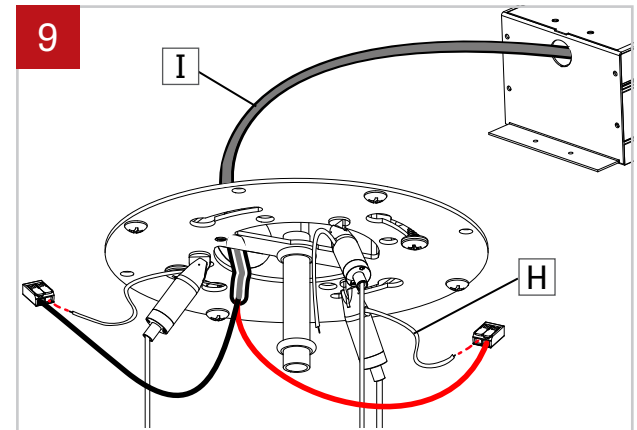

Make electrical connections between SPC (Suspension Power Over Cable) (H) and the remote driver feed (I). **Notes: Make sure that you are connecting the negative (-) aircraft cable (as mark on the fixture) to the black wire and the positive (+) aircraft cable (as mark on the fixture) to the red wire.**

10

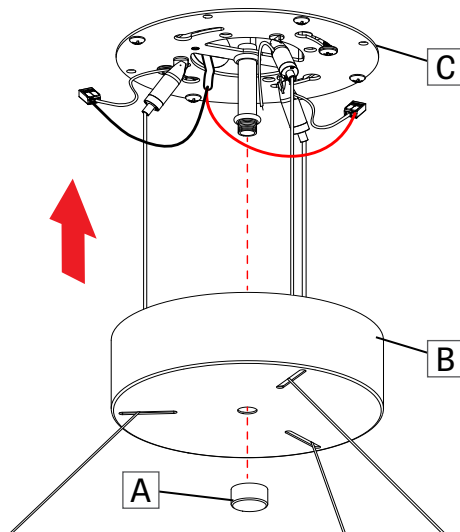

Fix the canopy (B) to the canopy plate (C) using the decorative nut (A).