



NOTE: Wire dimming conductors as Class 1

1

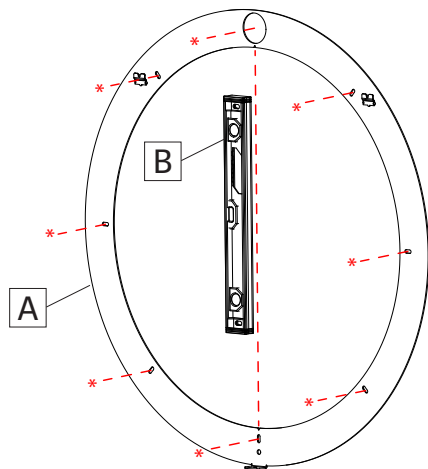


Place the wall mount bracket (A) in center with level (B). Mark the mounting points (*) of the fixture on the wall.

2

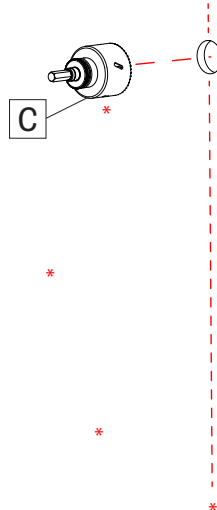


Using a 1 5/8" hole saws (C), cut out an opening in the drywall for wiring.

3

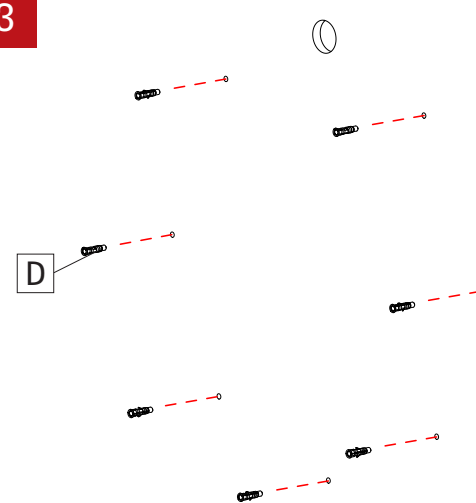


Predrill 1/4" holes for #8 screw drywall anchors (not supplied) (D).

4

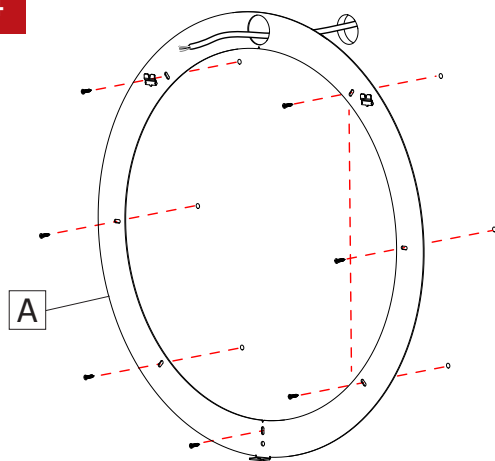


Align the wall mount bracket (A) with the straight line marked. Screw them into the drywall anchors.

5

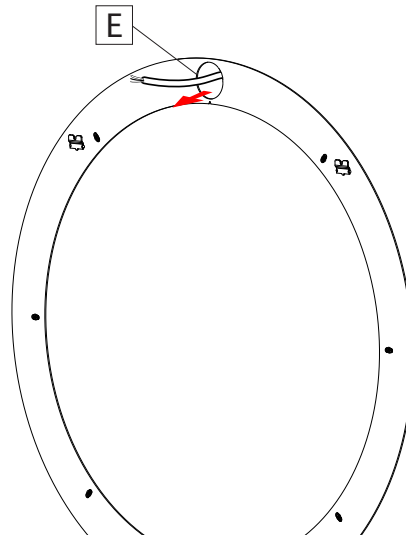

Pull out the Power cable (E) out of cut out in the wall.

6

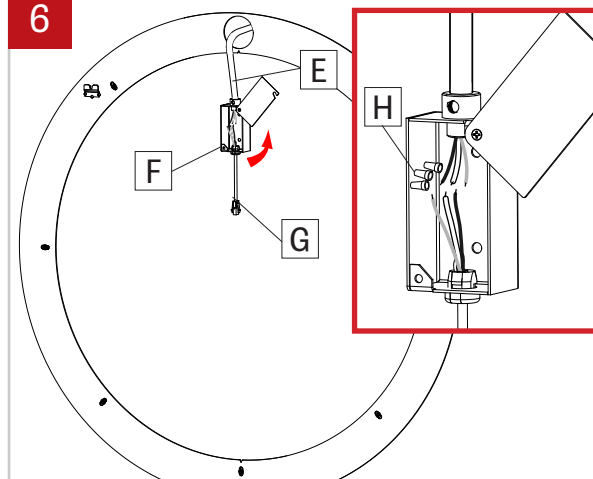

Unscrew the small Junction box (F). Make electrical connections between power cable (E) and junction box quick connector (G) with electrical marettes (H).

NOTE: Wire dimming conductors as Class 1

