

UBIK TROFFER

Recessed - Driver Replacement - Integral

LUMENWERX

 This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.


 Wire dimming conductors as Class 1.

1 DISCONNECT ELECTRICAL CONNECTIONS.

Caution: Make sure the electrical power is turned off.



Pull down the diffuser [A] to access quick connectors [B].

Disconnect quick connectors [B] between the drivers and the diffuser.

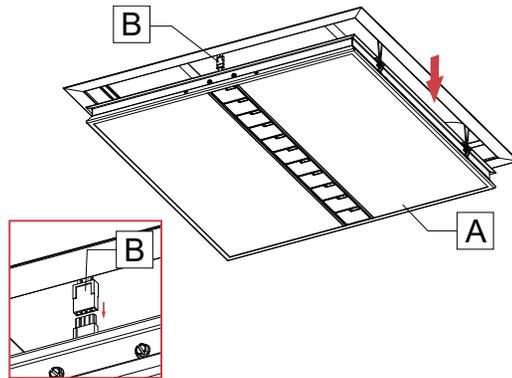


2 REMOVE DIFFUSER.

One side at a time, squeeze the springs [C] to release them from the brackets. Once all the springs [C] have been released, slowly lower the diffuser [A].

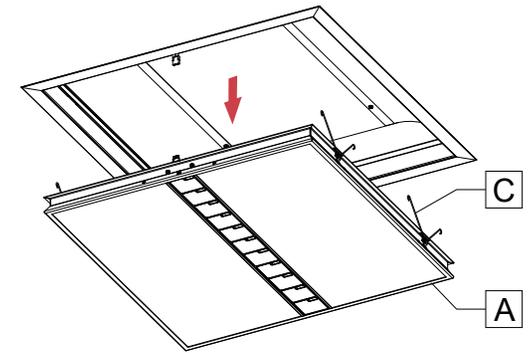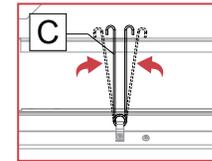


3 REMOVE REFLECTORS.

Unscrew and remove the reflector [D] on the side of the driver that needs to be replaced.

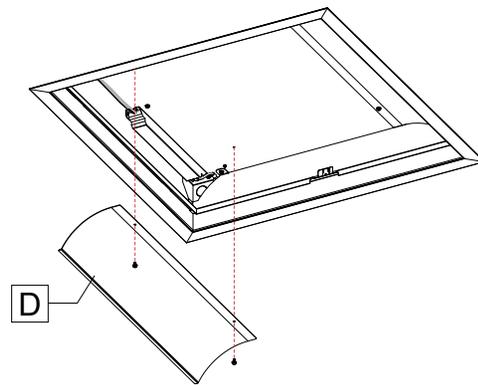

4 REPLACE DRIVERS.

Disconnect wires between the driver [E] and the electrical feed [F]. Unscrew the driver [E] from the housing. Replace the driver and reconnect the wires with wire nuts [G].

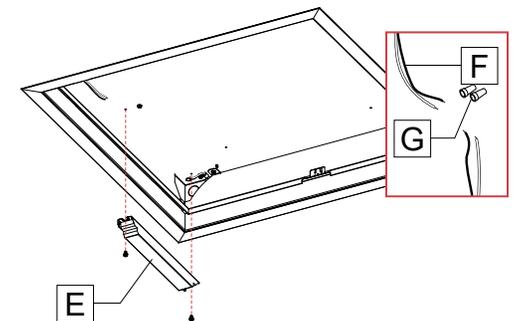


UBIK TROFFER

Recessed - Driver Replacement

LUMENWERX

5 REINSTALL REFLECTORS.


Screw the reflector back in place [D].

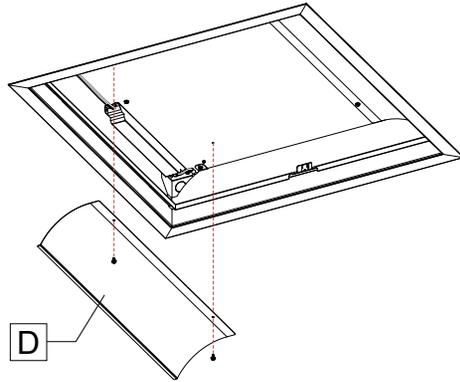

6 SECURE DIFFUSER.

Lift the diffuser [A].

One side at a time, squeeze, align and insert the springs [C] into the brackets that are further inside the housing [H].

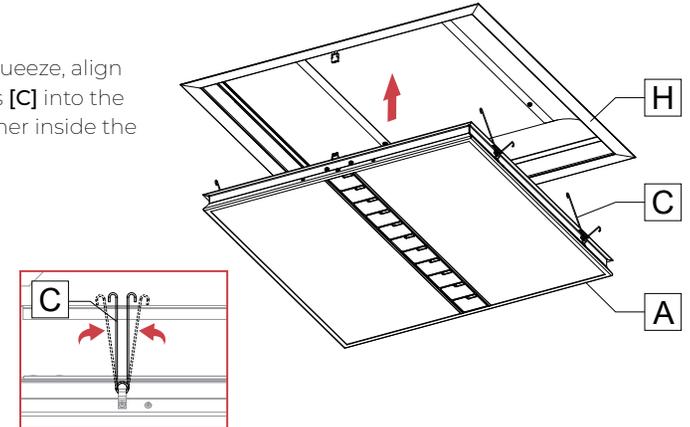

7 MAKE ELECTRICAL CONNECTIONS AND REINSTALL DIFFUSER.

Make wire connections between the drivers and the diffuser by connecting quick connectors [B].

Gently push the quick connectors [B] back into the opening and push the diffuser back into the housing.

Caution: Do not pinch quick connectors [B] or wires between diffuser [A] and housing [H].

