#### DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS

SINGLE FIXTURE




IMPORTANT: Installation instructions are shown with Via Perimeter 3 and applies to all Via Perimeter sizes



Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure.

Make sure to reconnect the wires to the LED boards correctly.

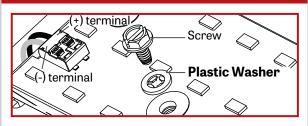


lens tool

В


3

Prepare the area and mark the mounting point location where the fixture is going to be installed according to the dimensions [\*] in the client drawings.

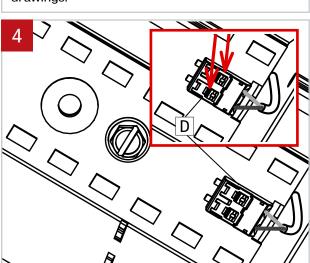


Disconnect LED molex connector (D) by taking a pointed object and pressing on the two tabs on the top.

### NOTE: Wire dimming conductors as Class 1

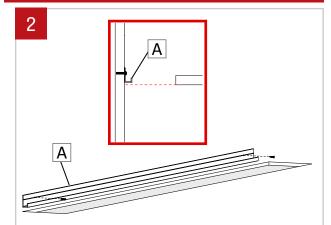

Locate the J-Bar (A) position using provided client drawing. Install wall bracket to wall. Align with structural stud or use drywall anchors when needed. For sleeve adjustment, please refer to end-sleeve installation sheet.

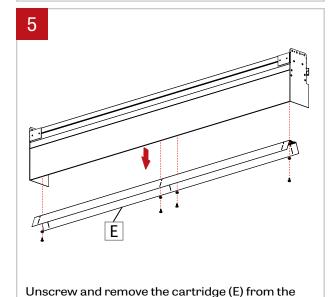

Remove lens (B) from the fixture (C) with the included lens tool.

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILE NAME:VIA-PERIMETER-DRYWALL-TRIMLESS-INST

fixture.


March 8, 2022

Page: 1/5




#### DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS


# LUMENWERX W W W . L U M E N W E R X . C O M

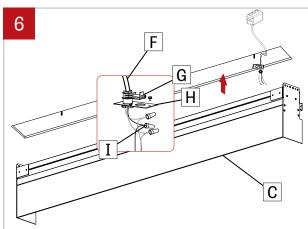


Install power cable (F) (by other) through the BX connector (G) (by other) and install onto the power plate (H) provided. Make electrical connections between power cable (F) and fixture cables using electrical marettes (I). Reinstall the power plate (H) to the fixture (C).

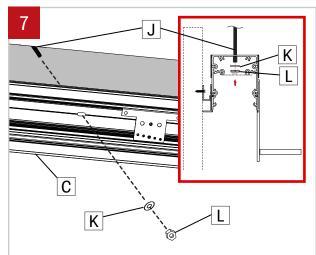

Insert fixture (C) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (C). Put washers (K) and tighten nuts (L) to secure the fixture (C).

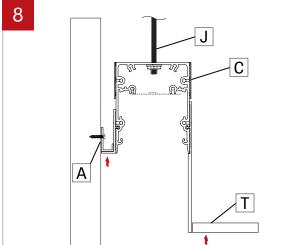


Adjust the fixture (C) to the threaded rods (J). On wall side, the fixture (C) must touch the J-Bar (A). On ceiling side, flange need to be flush with the tile (T).

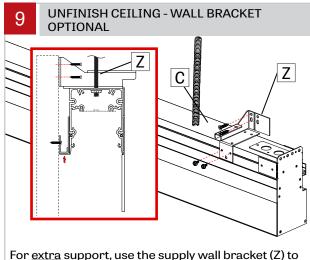


For <u>extra</u> support, use the supply wall bracket (2) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

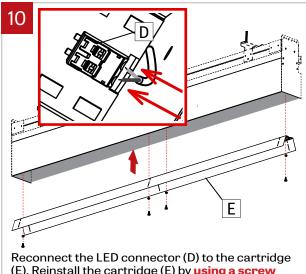


Reconnect the LED connector (D) to the cartridge (E). Reinstall the cartridge (E) by **using a screw** with plastic washer. Do not apply too much pressure.

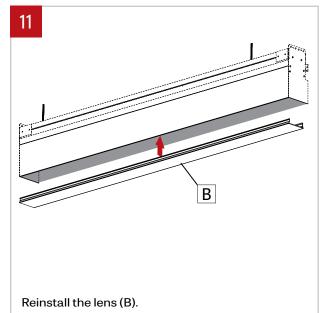




#### DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS




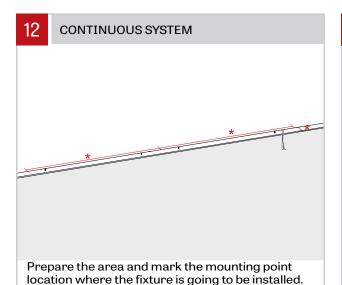



according to the dimensions [\*] in the client


drawings.

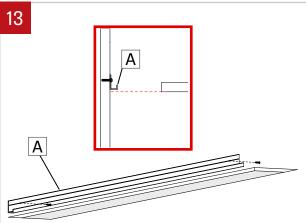


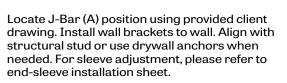

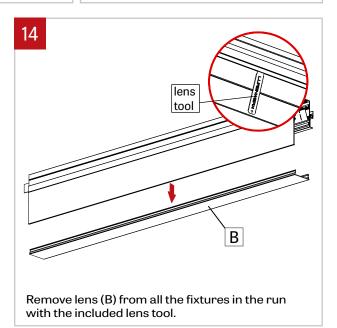

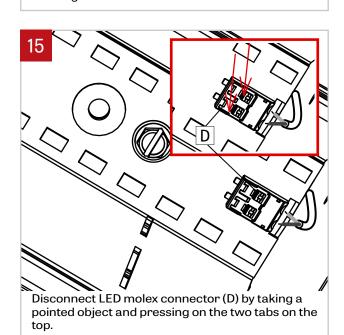

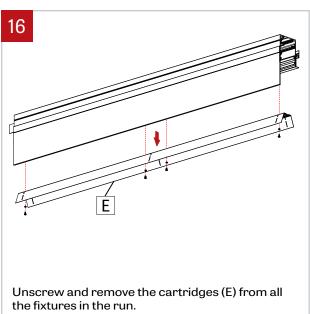

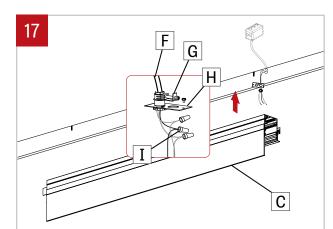


Install power cable (F) (by other) through the BX connector (G) (by other) and install onto the power plate (H) provided. Make electrical connections between power cable (F) and first fixture cables using electrical marettes (I). Reinstall the power plate (H) to the first fixture (C).




#### DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS


# LUMENWERX W W W . L U M E N W E R X . C O M

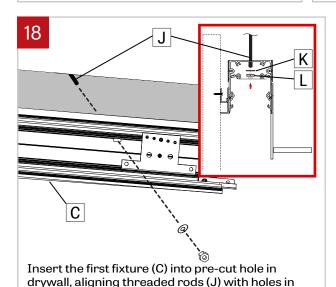

top of fixture (C). Put washers (K) and tighten nuts


(L) to secure the fixture (C).

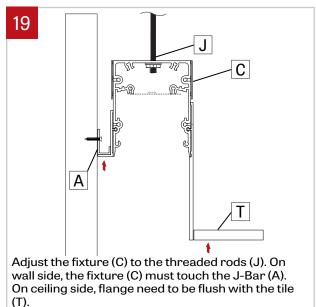


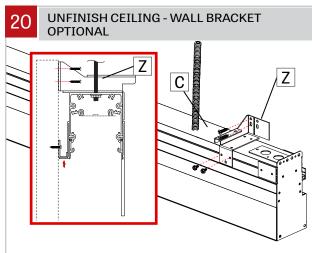


For <u>extra</u> support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

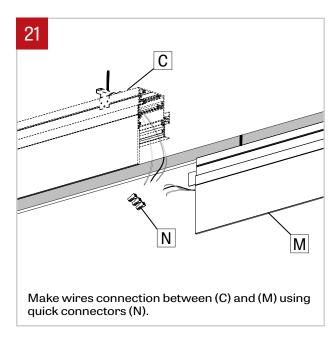

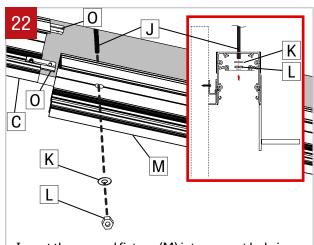

Insert the second fixture (M) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (M) and with the first fixture (C) with aligning brackets (O). Put washers (K) and tighten nuts (L) to secure the fixture (M).

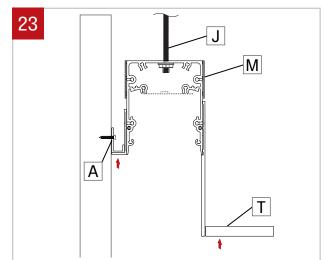


Adjust the second fixture (M) to the threaded rods (J). On wall side, the fixture (M) must touch the J-Bar (A). On ceiling side, flange need to be flush with the tile (T).



#### **DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS**



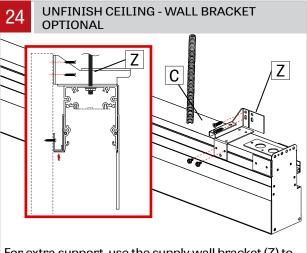

For  $\underline{extra}$  support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

