DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS





NOTE: Wire dimming conductors as Class 1

1


Reflector must be reinstalled with the screw <u>and</u> plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

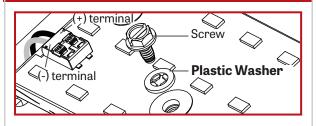


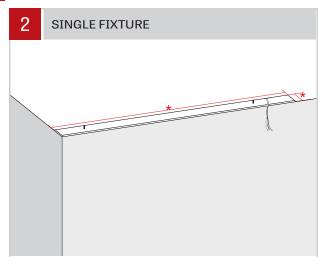


Prepare the area and mark the mounting point location where the fixture is going to be installed according to the dimensions [*] in the client drawings.

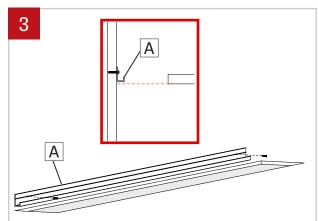


Locate the J-Bar (A) position using provided client drawing. Install wall bracket to wall. Align with structural stud or use drywall anchors when needed. For sleeve adjustment, please refer to end-sleeve installation sheet.

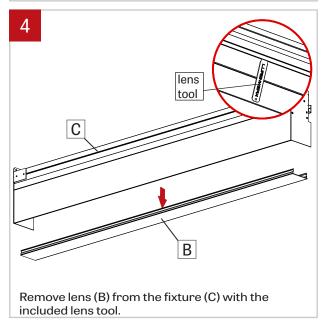

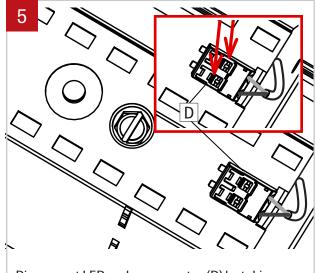

Disconnect LED molex connector (D) by taking a pointed object and pressing on the two tabs on the top.

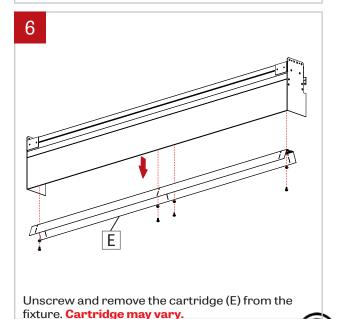


_C. || F

November 16, 2019


Page:1/5

DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS




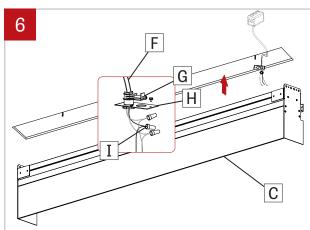

Install power cable (F) (by other) through the BX connector (G) (by other) and install onto the power plate (H) provided. Make electrical connections between power cable (F) and fixture cables using electrical marettes (I). Reinstall the power plate (H) to the fixture (C). Numbers of wires may vary.

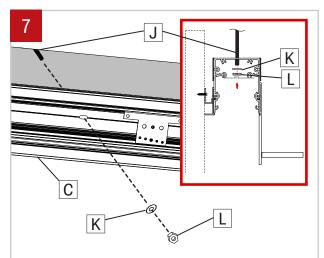


Insert fixture (C) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (C). Put washers (K) and tighten nuts (L) to secure the fixture (C).

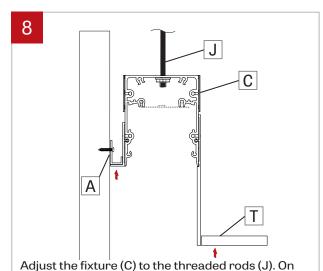


wall side, the fixture (C) must touch the J-Bar (A).


On ceiling side, flange need to be flush with the tile

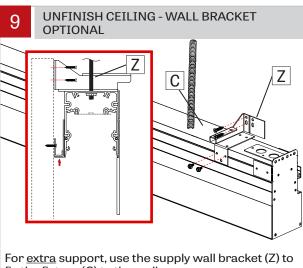

fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

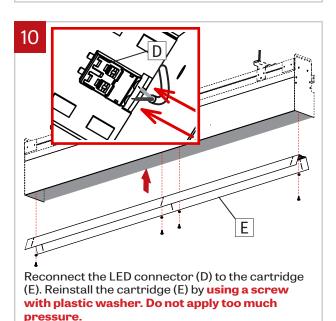

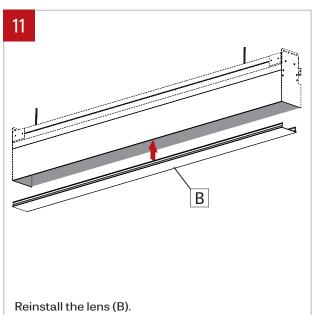





drawings.


DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS




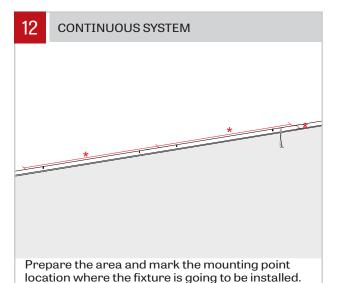


according to the dimensions [*] in the client

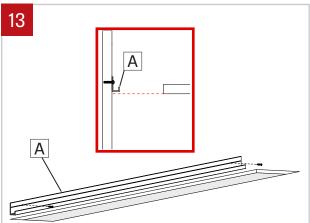




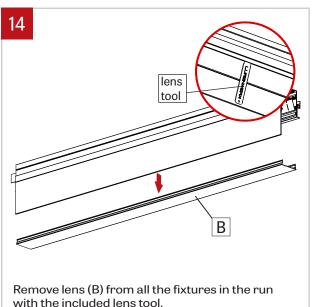

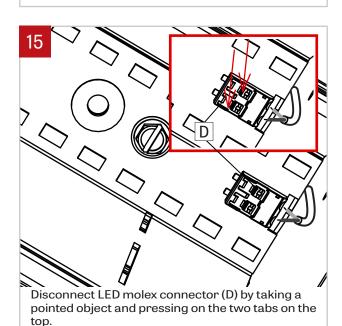



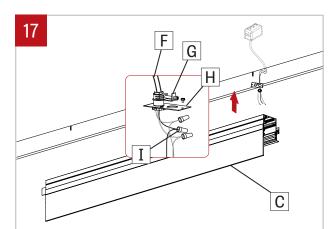


Install power cable (F) (by other) through the BX connector (G) (by other) and install onto the power plate (H) provided. Make electrical connections between power cable (F) and first fixture cables using electrical marettes (I). Reinstall the power plate (H) to the first fixture (C).

DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS


(T).




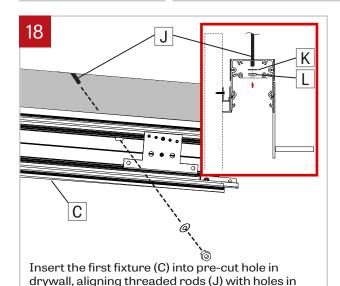

top of fixture (C). Put washers (K) and tighten nuts


(L) to secure the fixture (C).

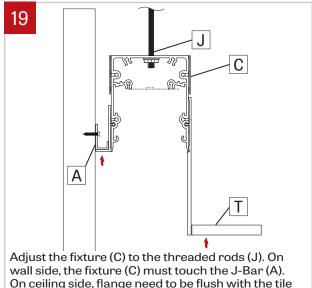


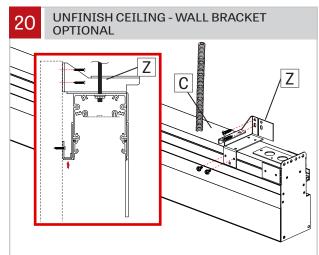


For <u>extra</u> support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

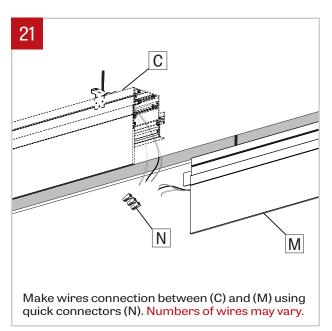

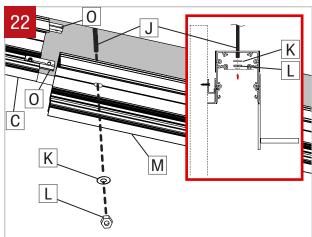

Insert the second fixture (M) into pre-cut hole in drywall, aligning threaded rods (J) with holes in top of fixture (M) and with the first fixture (C) with aligning brackets (O). Put washers (K) and tighten nuts (L) to secure the fixture (M).

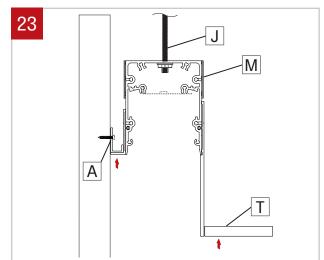


Adjust the second fixture (M) to the threaded rods (J). On wall side, the fixture (M) must touch the J-Bar (A). On ceiling side, flange need to be flush with the tile (T).



DRYWALL TRIMLESS - INSTALLATION INSTRUCTIONS



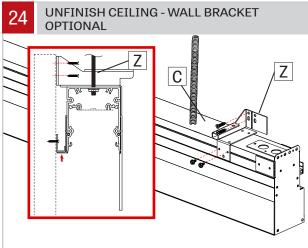

For <u>extra</u> support, use the supply wall bracket (Z) to fix the fixture (C) to the wall.

- 1. Screw the bracket (Z) to the fixture (C).
- 2. Screw the fixture(C) with the bracket(Z) to the wall.

