PENDANT INDIRECT CABLE - INSTALLATION INSTRUCTIONS

Α

SINGLE FIXTURE

מממממממממממ





NOTE: Wire dimming conductors as Class 1



Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure


Make sure to reconnect the wires to the LED boards correctly




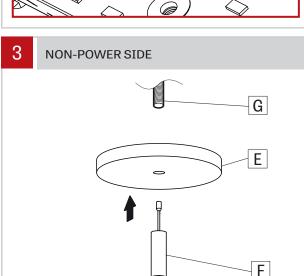


Secure canopy (E) with cable coupler (F) on crimp

strud (1/4"-20) (G) (by other).

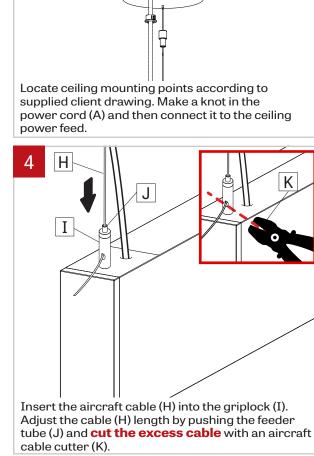

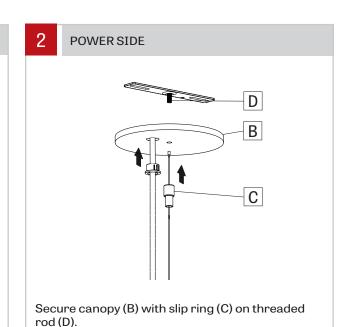

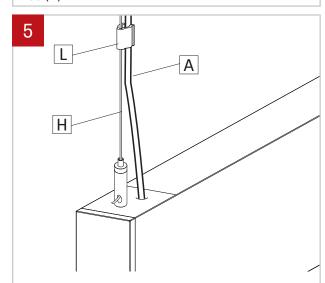



Secure power cord (A) to aircraft cable (H) with

plastic clip (L).


PENDANT INDIRECT CABLE - INSTALLATION INSTRUCTIONS



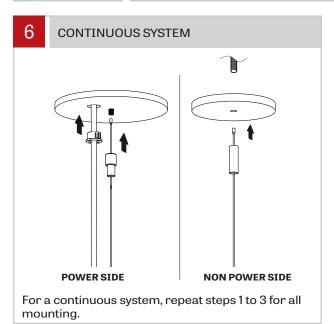


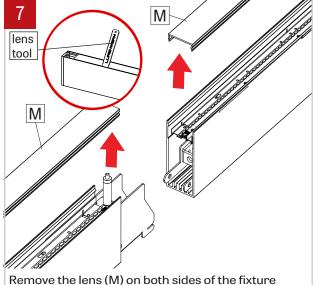



with the included lens tool.

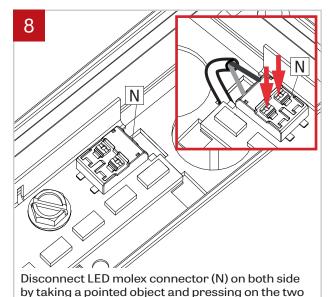

tabs on the top.

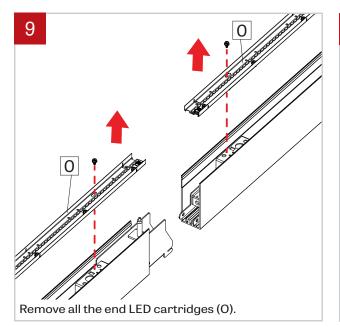

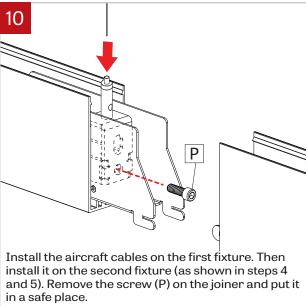


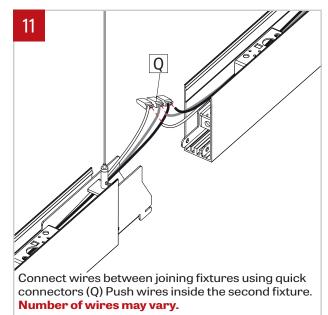


VIA 1.5

PENDANT INDIRECT CABLE - INSTALLATION INSTRUCTIONS




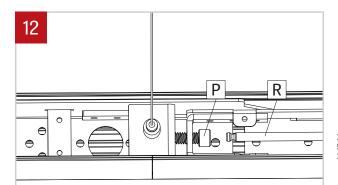

Join fixtures using align pins as guide. Put back in place the provided screw (P) (using 3/16" Ball-End Screwdriver (R) provided). Make sure that no wires are placed in between the extrusions, preventing the fixtures to be joined. Tight the screw (?) to pull the extrusions together. Repeat steps 13 to 15 for all others fixtures in the run.

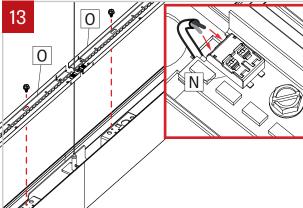

Reinstall the cartridges (O) and reconnect the LED molex connector (N). NOTE: connect black wire into the negative (-) terminal and the white wire into (+) positive terminal. Make sure that the wires are not hiding any LED diode. Screw the cartridge back in place by using screw with plastic washer (for direct only). Do not apply too much pressure.

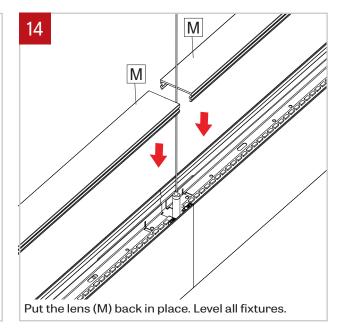



November 15, 2019