



**NOTE: Wire dimming conductors as Class 1**

## 1 SINGLE FIXTURE

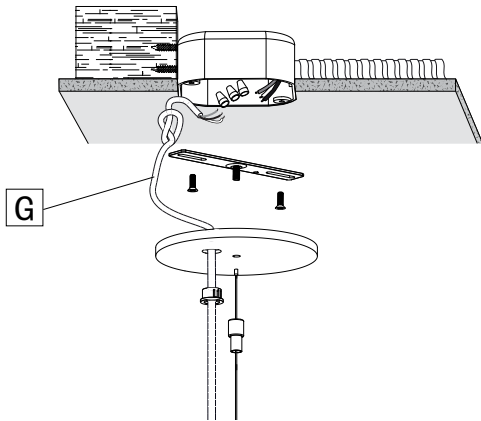


Locate ceiling mounting points according to supplied client drawing. Make a knot in the power cord (G) and then connect it to the ceiling power feed.

## 2 POWER SIDE

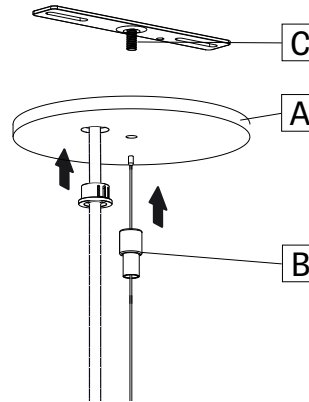


Secure canopy (A) with slip ring (B) on threaded rod (C).

## 3 NON-POWER SIDE

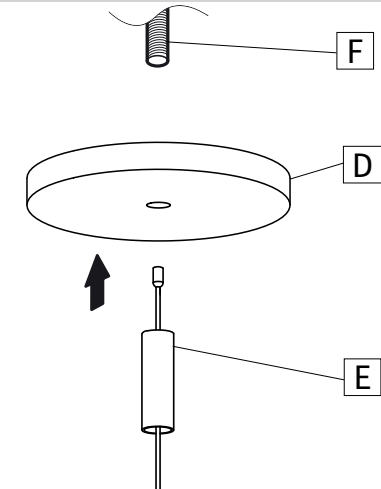


Secure canopy (D) with cable coupler (E) on crimp strud (1/4"-20) (F) (by other).

## 4

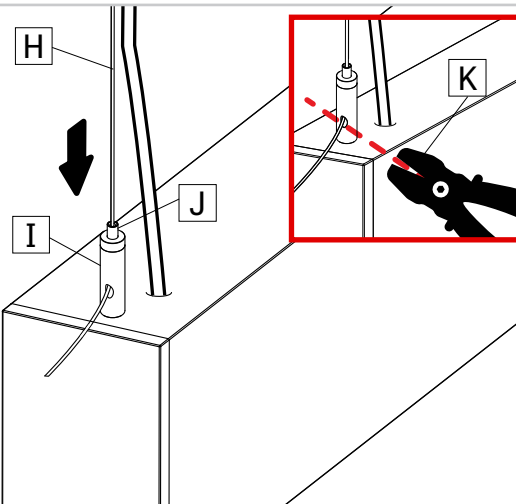

Insert the aircraft cable (H) into the griplock (I). Adjust the cable (H) length by pushing the feeder tube (J) and **cut the excess cable** with an aircraft cable cutter (K).


## 5

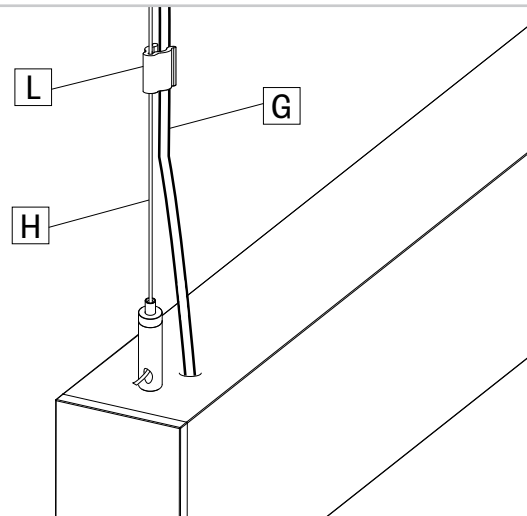

Secure power cord (G) to aircraft cable (H) with plastic clip (L).

## 6

### CONTINUOUS SYSTEM

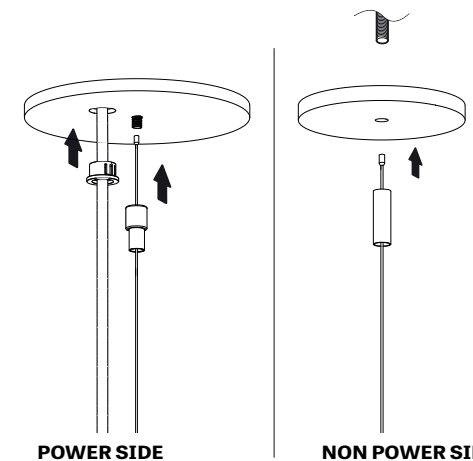

For a continuous system, repeat steps 1 to 3 for all mounting.

