

VIA SPLASH




NOTE: Wire dimming conductors as Class 1

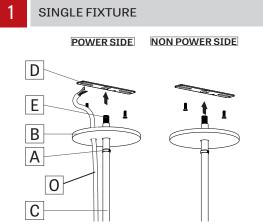



Make sure that the power to the fixture is turned off. Slide the slip ring (A) and the canopy (B) onto the stem (C) and leave some space. Screw the junction box crossbar (D) with the threaded rods (E) onto the stem (C). Wet-location power-cord is supplied by us (O).

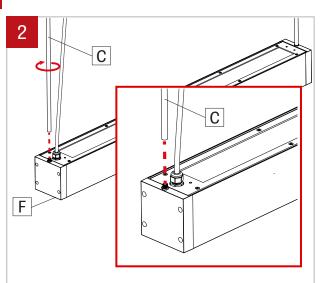


Screw the stems (C) onto the nipple at the ends of the fixture (F).

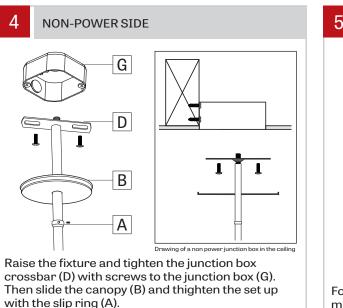

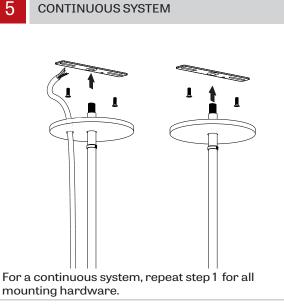

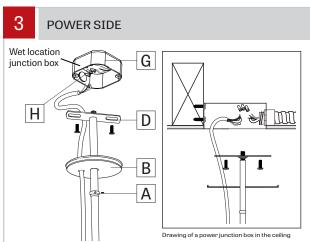

Raise the fixture and tighten the junction box crossbar (D) with screws to the junction box (G). Make wire connection with wire connectors (H). Then slide the canopy (B) and thighten the set up with the slip ring (A).

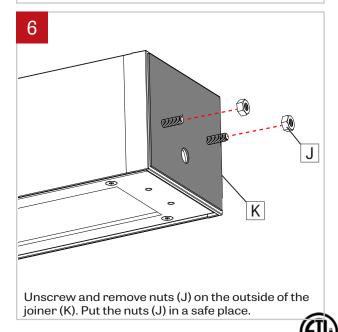


www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC. || FILENAME: VIASPLASH-DIRECT-INDIRECT-PENDANT-STEM-INST || November 16, 2019


Page: 1/2

VIA SPLASH


PENDANT STEM - INSTALLATION INSTRUCTIONS



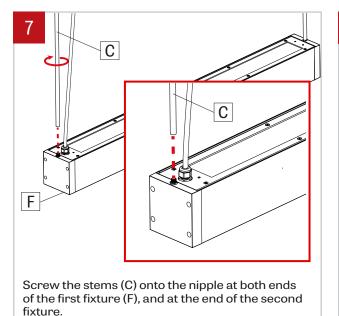


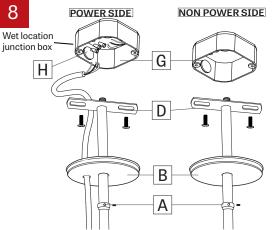



Raise the first fixture and tighten the junction box crossbars (D) with screws to the junction boxes (G). Make wire connection on the power side with wire connectors (H). Then slide the canopies (B) and thighten the sets up with the slip rings (A).

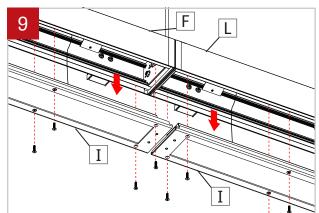

Unscrew and lower the lens frames (I) of the two fixtures retained by security cables. Push the wires of the second fixture (L) inside the first fixture (F) through the holes of the end caps. Align the second fixture (L) to the screws of the joiner of the first fixture (F). Attach the end of the second fixture (L) to the ceiling as shown in step 7-8.

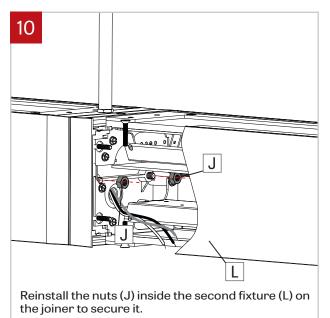

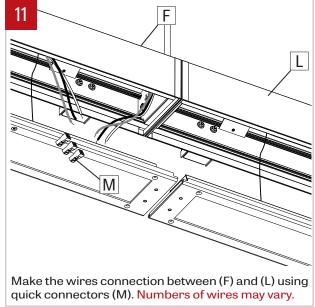

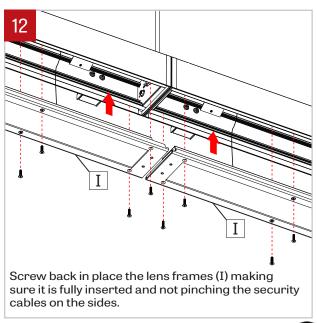



Page: 2 / 2

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 🛛 All rights are reserved to LumenWerx ULC. | FILE NAME:VIASPLASH-DIRECT-INDIRECT-PENDANT-STEM-INST | November 16, 2019