


VIA WET FLUORESCENT

BALLAST REPLACEMENT INSTRUCTION


NOTE: Wire dimming conductors as Class 1

1

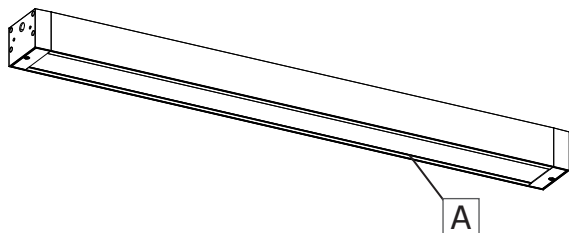


Make sure the power to the fixture (A) is turned off.

2

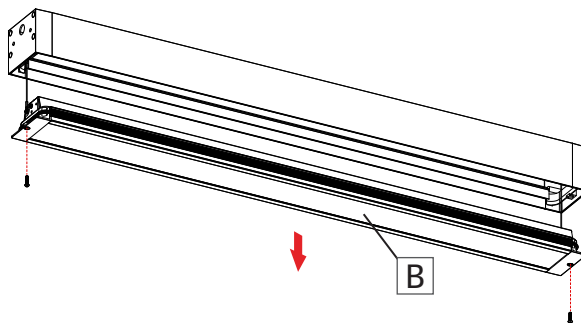


Unscrew and lower the lens frame (B) retained by security cables.

3

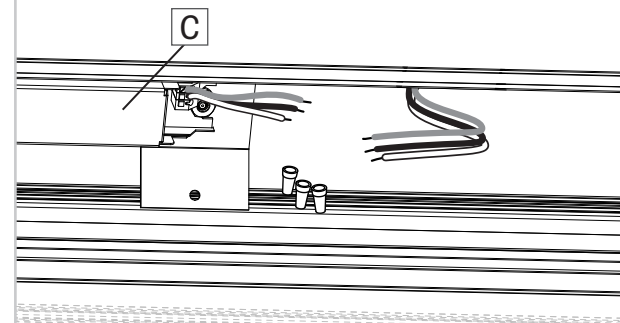


Disconnect wires from the ballast (C).

4

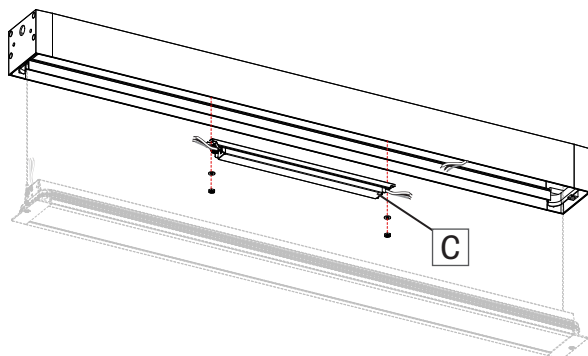

Unscrew the ballast (C) from the fixture. Replace the ballast and make connection with wire nuts.

5

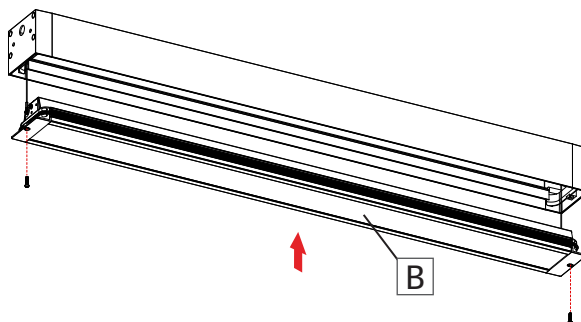

Screw back in place the lens frame (B) making sure not pinching the security cables on the sides.