


VIA WET FLUORESCENT

LAMP REPLACEMENT INSTRUCTION


NOTE: Wire dimming conductors as Class 1

1

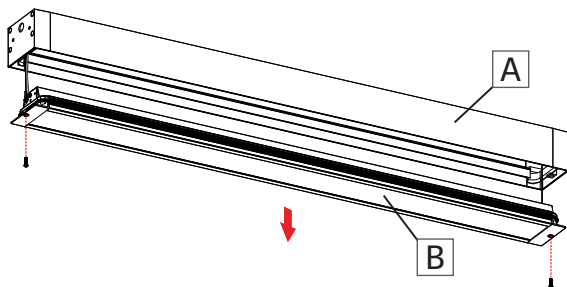


Make sure the power to the fixture (A) is turned off. Unscrew and lower the lens frame (B) retained by security cables.

2

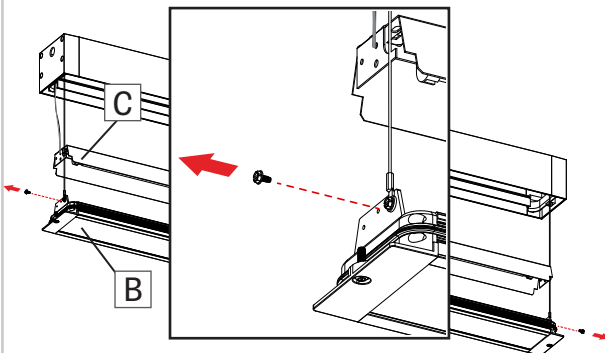


Unscrew the reflector (C) from both side of the lens frame (B) and delicately lift it.

3

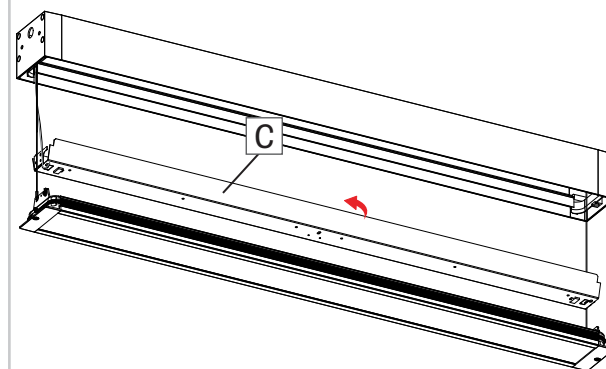


Rotate the reflector (C) to get access to the lamp.

4

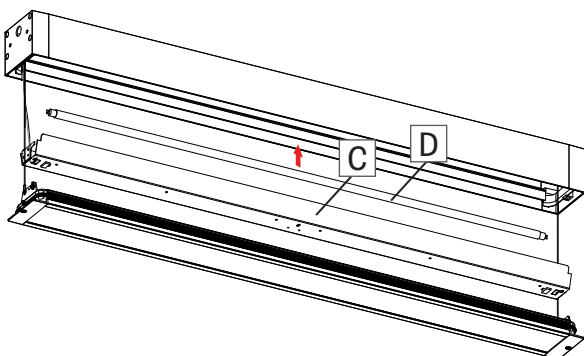


Replace the lamp (D) inside the reflector (C).

5

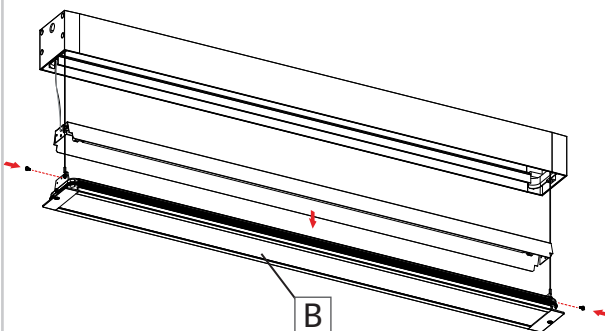

Screw the reflector back on the lens frame (B).

6

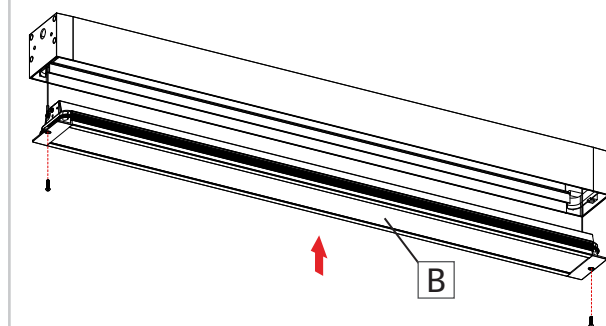

Screw back in place the lens frame (B) making sure not pinching the security cables on the sides.