


VIA WET FLUORESCENT

PENDANT STEM - INSTALLATION


NOTE: Wire dimming conductors as Class 1

1 SINGLE FIXTURE

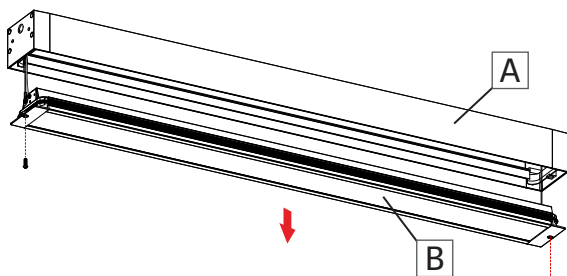


Make sure the power to the fixture (A) is turned off. Unscrew and lower the lens frame (B) retained by security cables. **Fixture must be installed with lens facing down.**

2

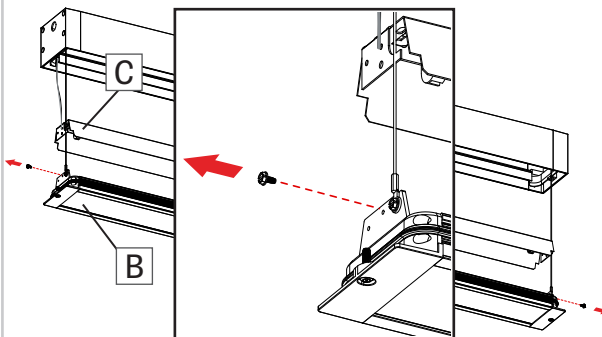


Unscrew the cartridge (C) from both side of the lens frame (B) and delicately lift it.

3

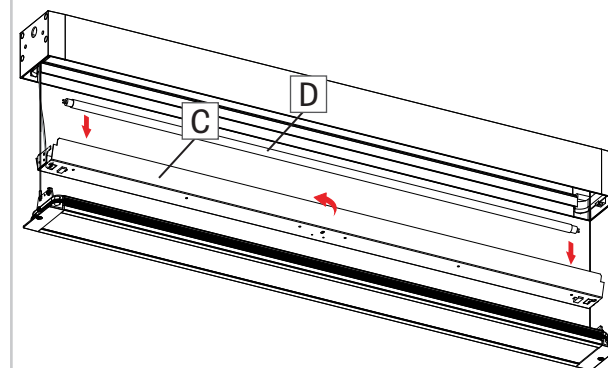


Rotate the cartridge (C) and install the lamp (D).

4

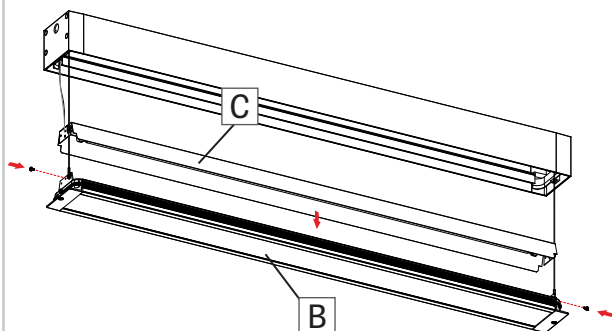


Screw the cartridge (C) back on the lens frame (B).

5

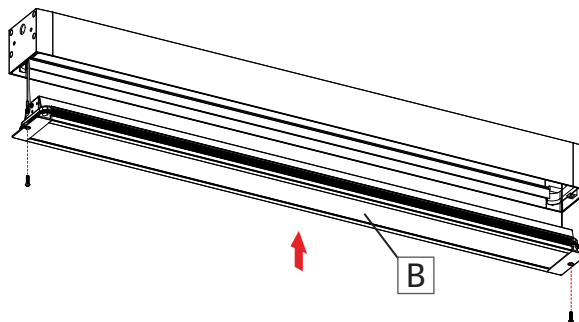

Screw back in place the lens frame (B) making sure not pinching the security cables on the sides.


6

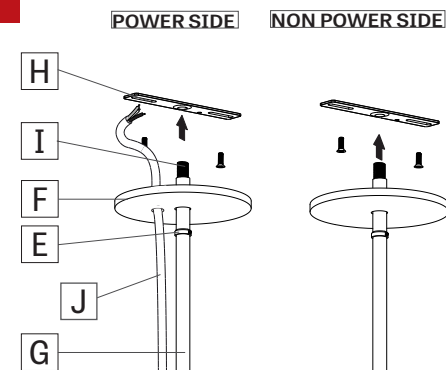


Slide the slip ring (E) and the canopy (F) onto the stem (G) and leave some space. Screw the junction box crossbar (H) with the threaded rods (I) onto the stem (G). Wet-location power-cord is supplied by us (J).

VIA WET FLUORESCENT


PENDANT STEM - INSTALLATION

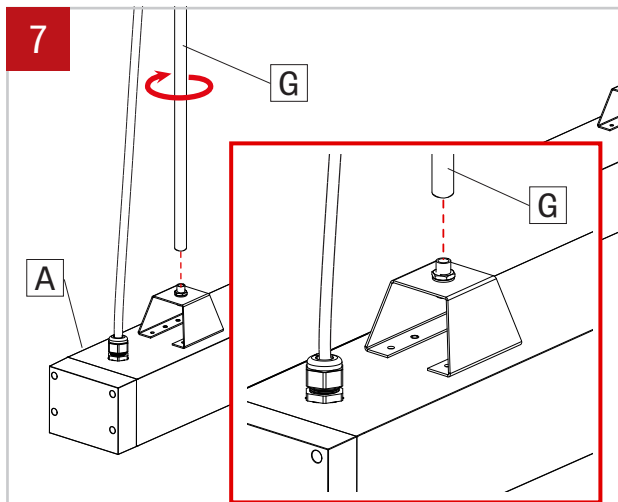


Screw the stems (G) onto the nipple at the ends of the fixture (A).

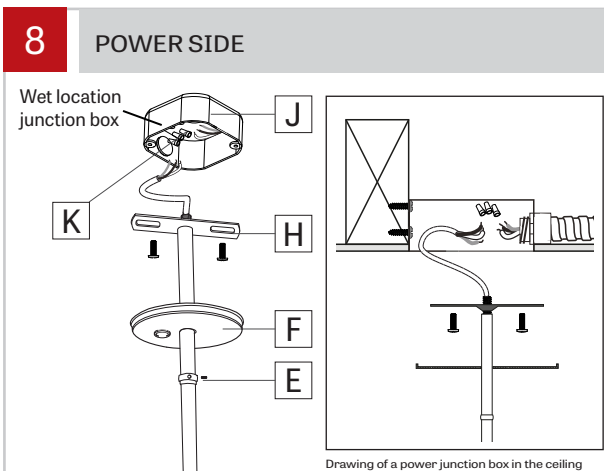


Raise the fixture and tighten the junction box crossbar (H) with screws to the junction box (J). Make wire connection with wire connectors (K). Then slide the canopy (F) and tighten the set up with the slip ring (E).

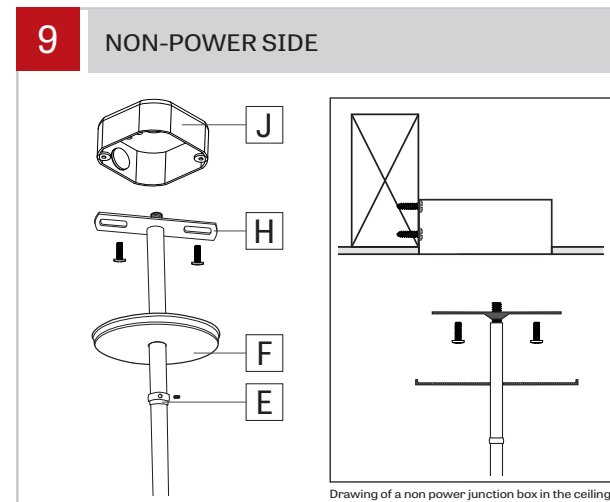


Raise the fixture and tighten the junction box crossbar (H) with screws to the junction box (J). Then slide the canopy (F) and tighten the set up with the slip ring (E).

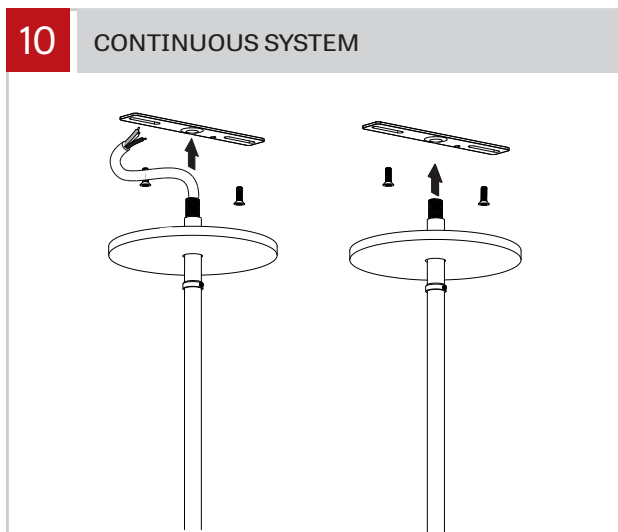

For a continuous system, repeat step 6 for all mounting hardware.

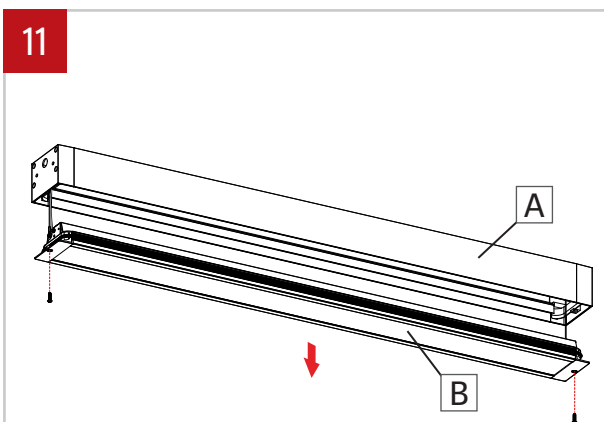


Unscrew and lower the lens frame (B) retained by security cables.

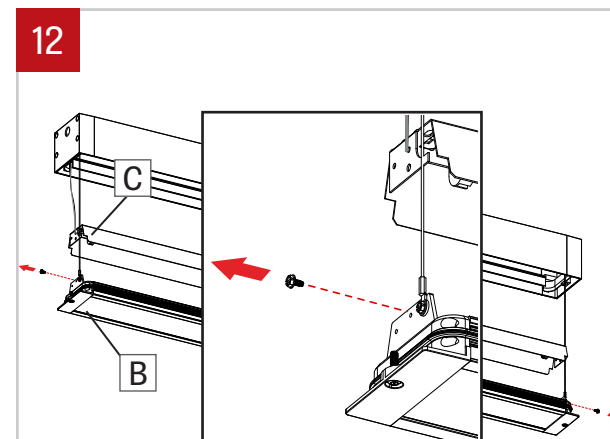


Unscrew the cartridge (C) from both side of the lens frame (B) and delicately lift it.

13

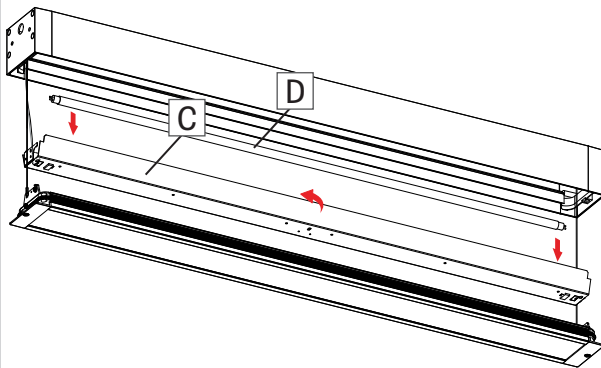


Rotate the cartridge (C) and install the lamp (D).

14

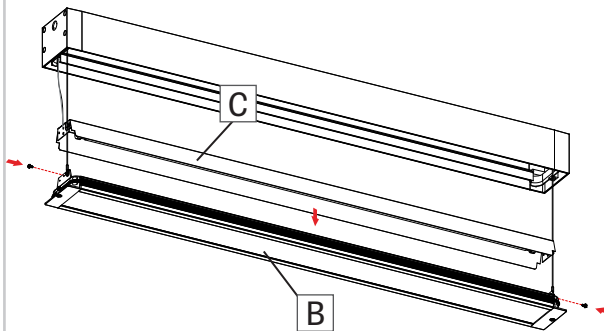


Screw the cartridge (C) back on the lens frame (B). Repeat steps 11 to 14 for all fixtures in the run.

15

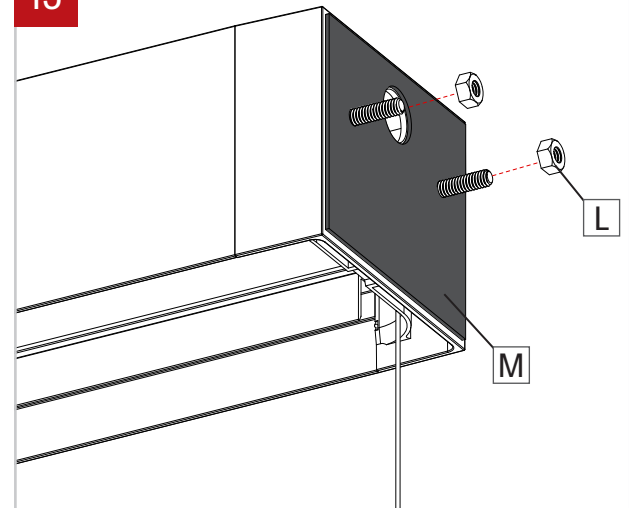


Unscrew and remove nuts (L) on the outside of the joiner (M). Put the nuts (L) in a safe place.

16

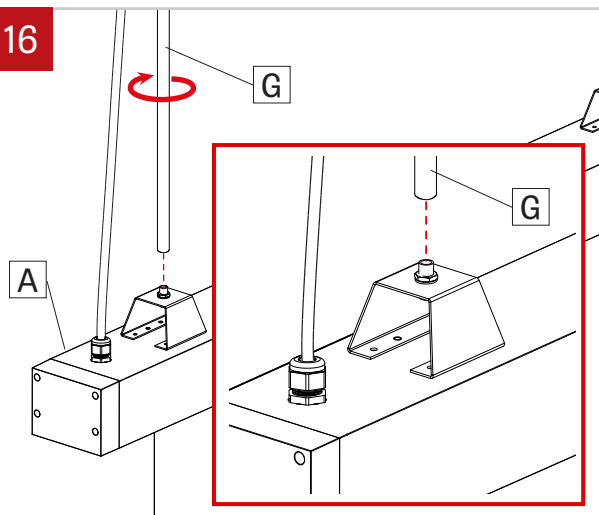


Screw the stems (G) onto the nipple at the ends of the fixture (A).

17

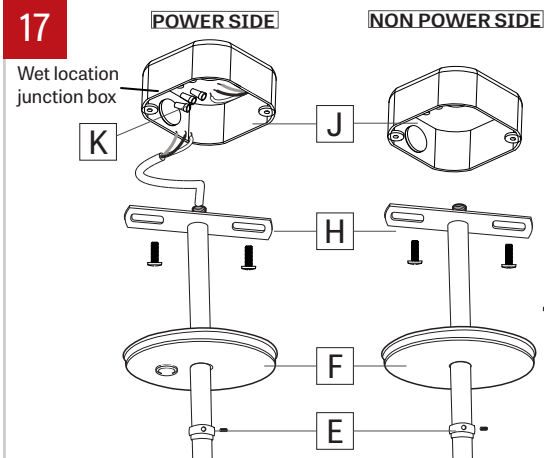

Raise the first fixture and tighten the junction box crossbars (H) with screws to the junction boxes (J). Make wire connection on the power side with wire connectors (K). Then slide the canopies (F) and tighten the sets up with the slip rings (E).


18

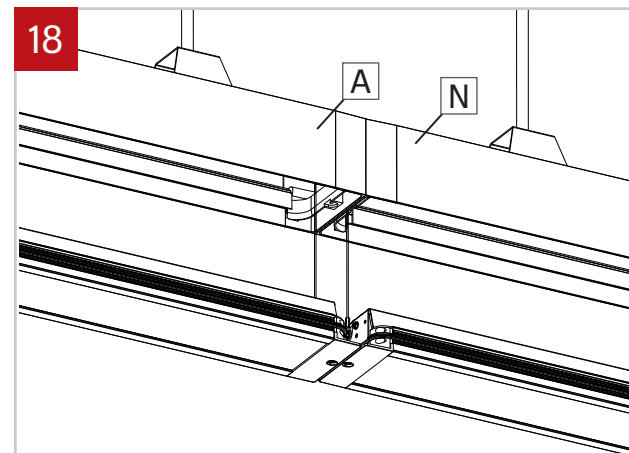


Push the wires of the second fixture (N) inside the first fixture (A) through the holes of the end caps. Align the second fixture (N) to the screws of the joiner of the first fixture (A). Attach the second fixture (N) to the ceiling as shown in step 17.

VIA WET FLUORESCENT


PENDANT STEM - INSTALLATION

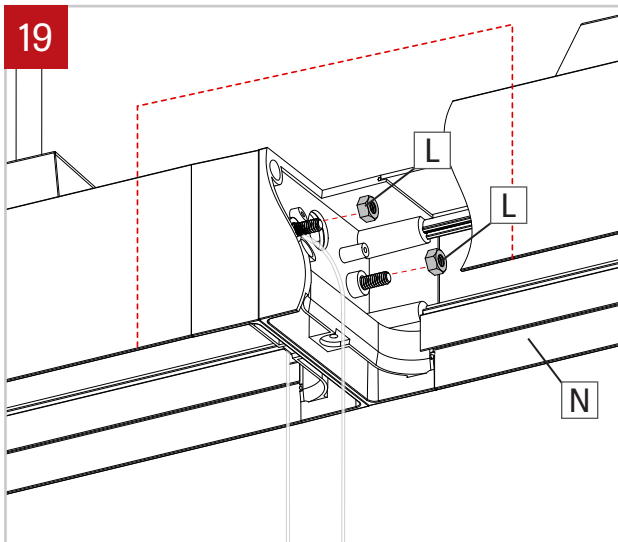

Reinstall the nuts (L) inside the second fixture (N) on the joiner to secure it.

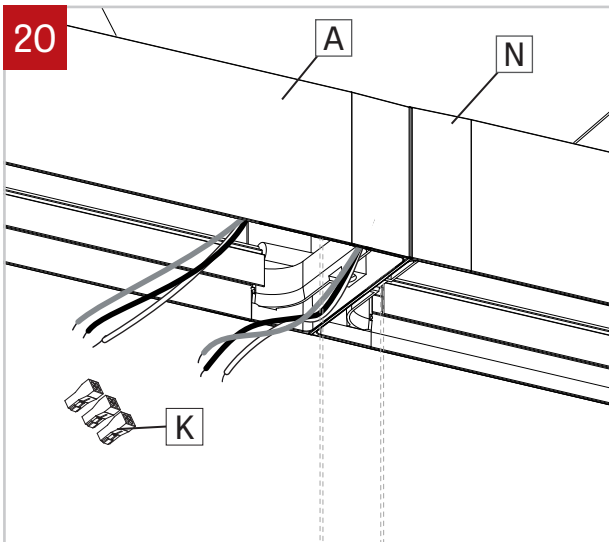

Make the wires connection between (A) and (N) using quick connectors (K).

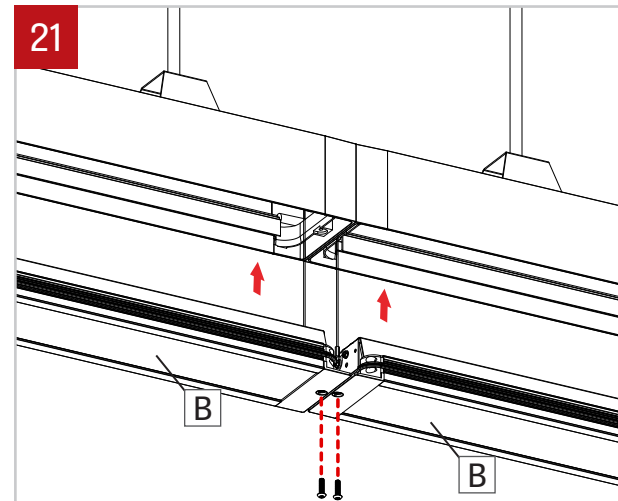

Screw back in place the lens frames (B) making sure not pinching the security cables on the sides.