
VIA WET


SURFACE MOUNT + END FEED - INSTALLATION INSTRUCTIONS




NOTE: Wire dimming conductors as Class 1



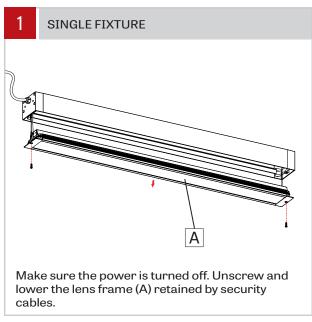


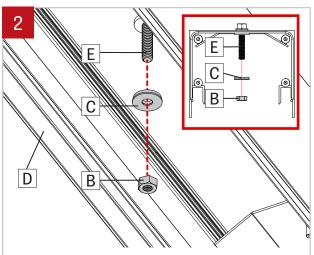



Remove the nuts (B) and the washers (C) (that are steel +rubber bonded together) inside the fixture (D). Put them in a safe place. Finally remove the screws (E) that won't be needed anymore.

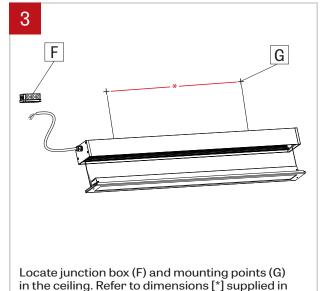

client drawings.

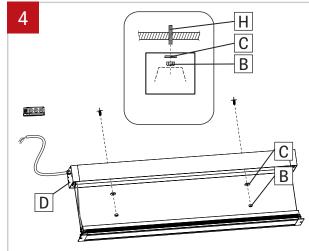

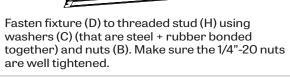

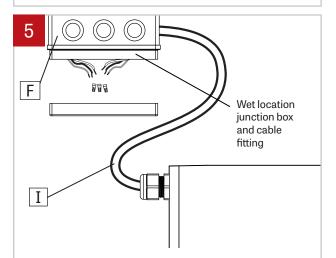

Make electrical connections between the main power and the 2FT long white power-cord (I) of the fixture inside wet location junction box (F). Screw back junction box cover.

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILE NAME:VIAWET-SURFACE-END-FEED-MOUNT-INST


November 16, 2019

Page: 1/3


VIA WET

SURFACE MOUNT + END FEED - INSTALLATION INSTRUCTIONS




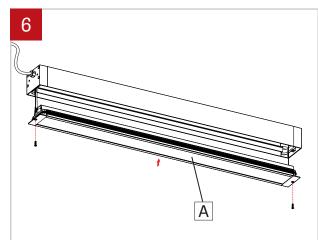


Screw back in place the lens frame (A) making sure not pinching the security cables on the sides. Make sure all the screws are well tightened and the metal frame is slightly regressed inside the aluminum housing.

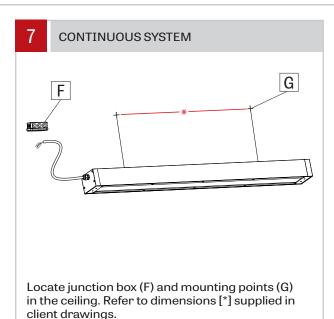




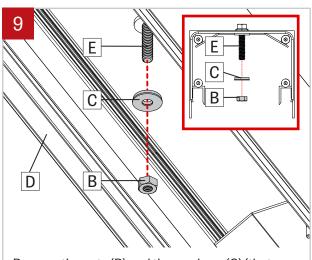

Remove the nuts (B) and the washers (C) (that are steel +rubber bonded together) inside the fixture (D). Put them in a safe place. Finally remove the screws (E) that won't be needed anymore.

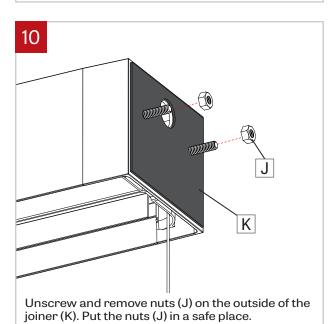

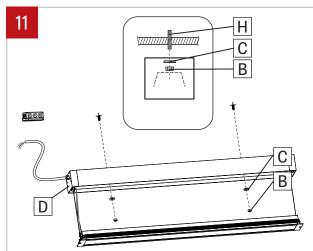


Fasten the first fixture (D) to threaded stud (H) using washers (C) (that are steel + rubber bonded together) and nuts (B). Make sure the 1/4"-20 nuts are well tightened.





VIA WET

SURFACE MOUNT + END FEED - INSTALLATION INSTRUCTIONS



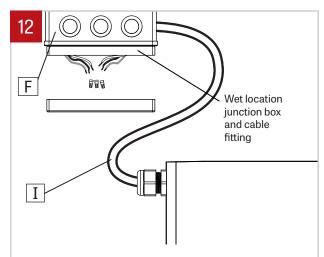

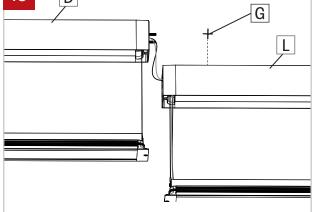


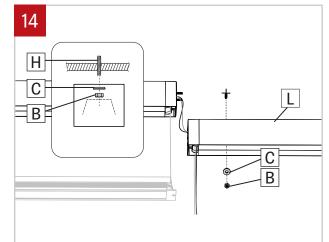

Make electrical connections between the main power and the 2FT long white power-cord (I) of the fixture inside wet location junction box (F). Screw back junction box cover.


Locate mounting points (G) of the second fixture (L) and push the wires inside the first fixture (D) through the end cap holes. Align the second fixture (L) to the screws of the joiner of the first fixture (D) and install it.


Fasten the second fixture (L) to threaded stud (H) using washers (C) (that are steel +rubber bonded together) and nuts (B). Make sure the 1/4"-20 nuts are well tightened.

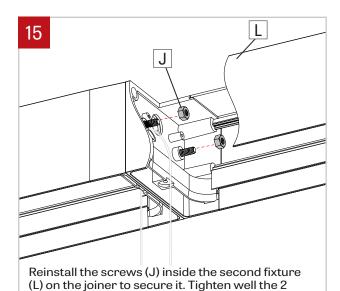

joining screws and make sure the joining gasket is

well compressed between the 2 extrusions.

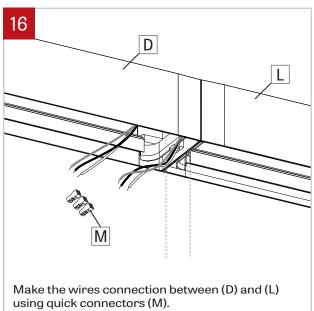

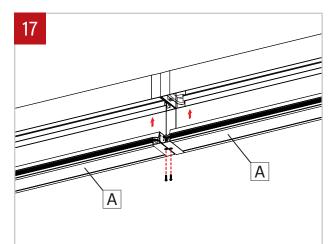

Screw back in place the lens frame (A) making sure not pinching the security cables on the sides. Make sure all the screws are well tightened and the metal frame is slightly regressed inside the aluminum housing.

