


PENDANT CONCRETE - INSTRUCTIONS





NOTE: Wire dimming conductors as Class 1

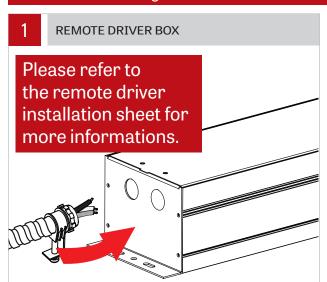


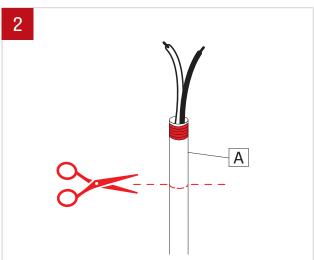



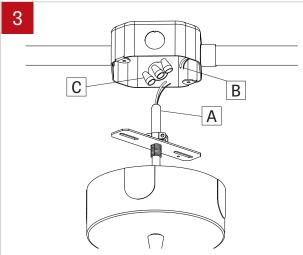



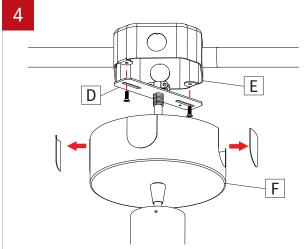

Fix the Cross bar (D) to the Junction box (E) using screws. Punch out the knock outs of the Canopy (F) to allow the conduits to fit.

