



NOTE: Wire dimming conductors as Class 1

1 REMOTE DRIVER BOX

Please refer to the remote driver installation sheet for more informations.

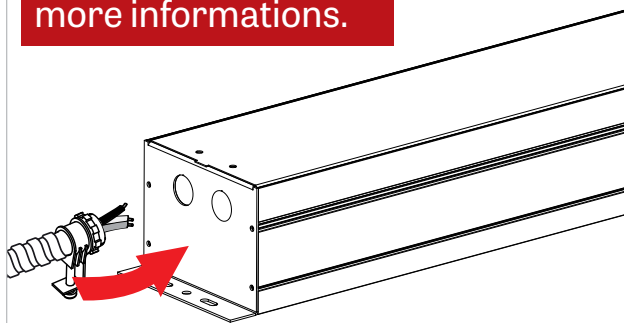


2

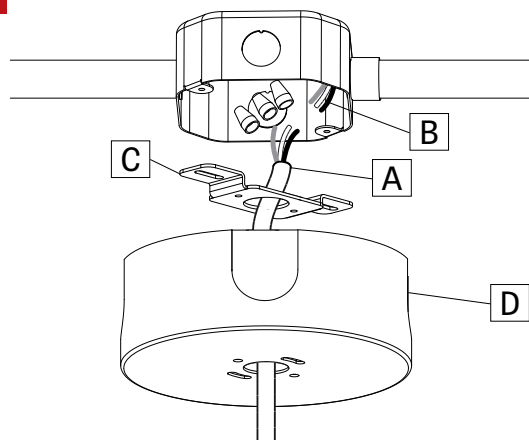


Connect the Fixture cable (A) to the Main power (B) and Fix Crossbar (C) to the Junction box (D) with screws.

3

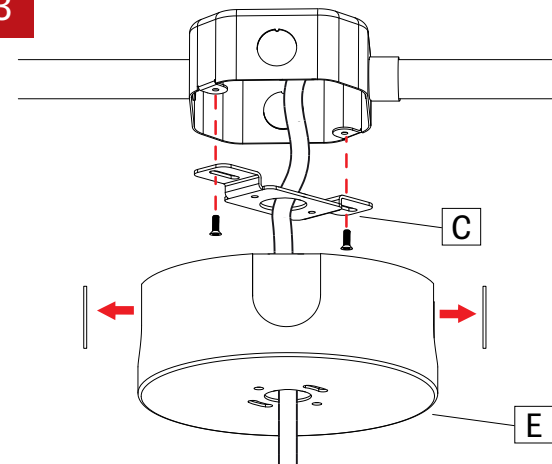


Fix the Canopy (E) onto the Crossbar (C) with screws. Punch out the knock outs of the Canopy (E) to allow the conduits to fit.

4

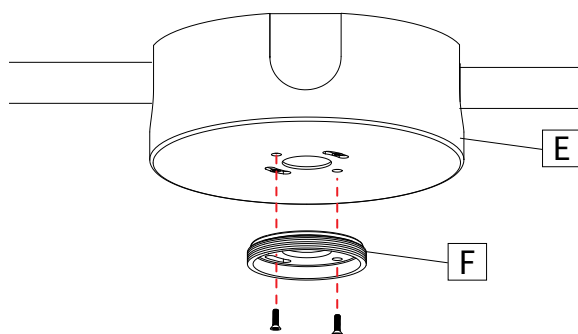


Install the Threaded Adapter (F) onto the Canopy (E) with screws.

5

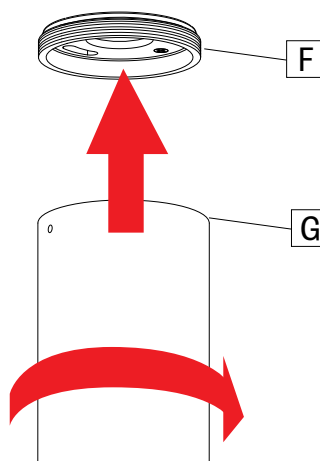

Thread the Fixture (G) onto the Threaded Adapter (F).

6

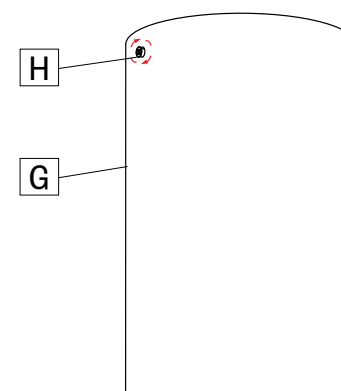

Lock the Fixture (G) onto the Threaded Adapter with the Set Screw (H).