



**NOTE:** Wire dimming conductors as Class 1

1

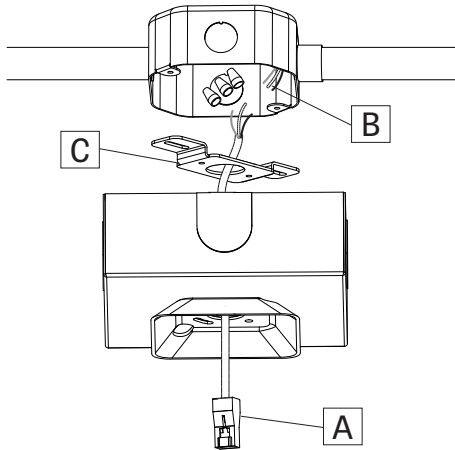


Connect the Fixture cable (A) to the Main power (B) and Fix Crossbar (C) to the Junction box (D) with screws.

2

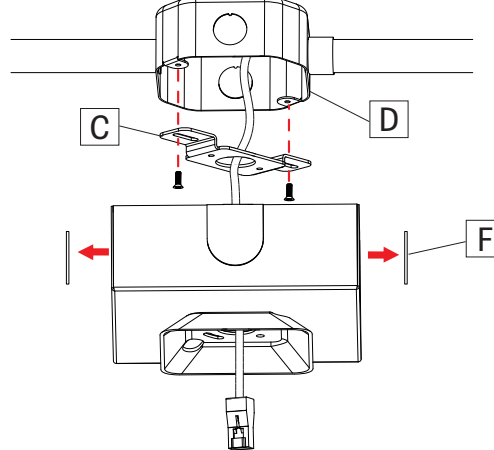


Punch out the knock outs of the Canopy (F) to allow the conduits to fit. Fix the Crossbar (C) onto the Junction box (D).

3

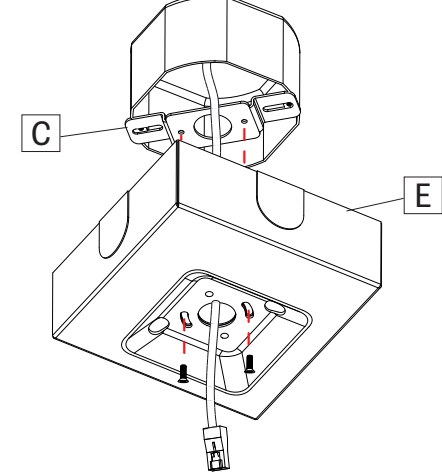


Fix the Canopy (E) onto the Crossbar (C) with screws.

4

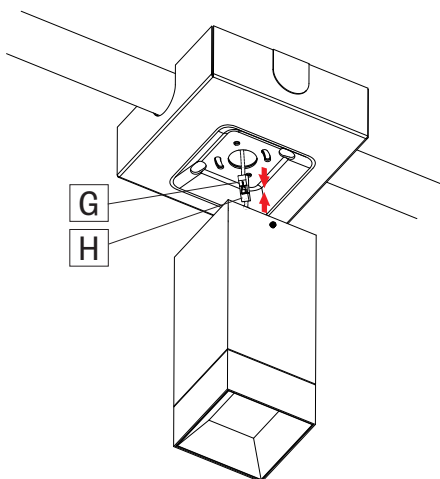

Connect the Main power Quick Connector (G) and the Fixture Quick Connectors (H).

5

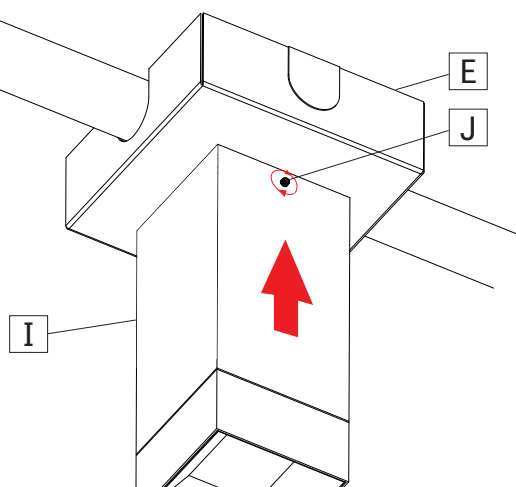

Fix the Fixture (I) onto the Canopy (E) with the set screws (J)