



NOTE: Wire dimming conductors as Class 1

1

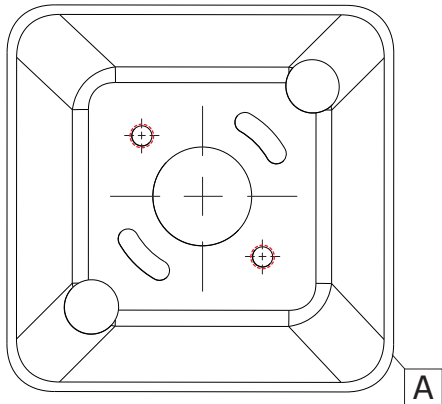


Use the mounting adapter (A) as a model to mark 2 mounting points.

2

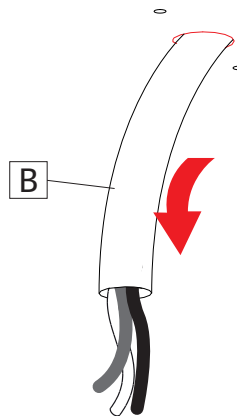


Drill the hole for the BX cable (B) to pull through the hole.

3

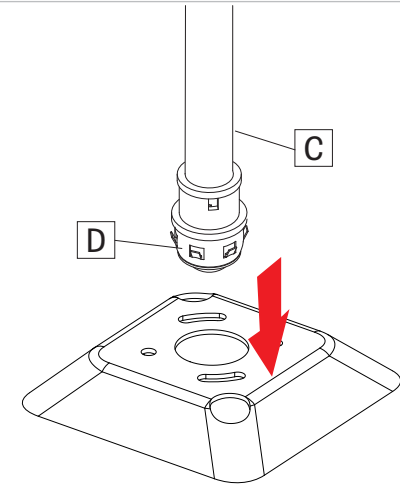


Bring the power (C) through the drywall opening. Connect to provided adapter (D).

4

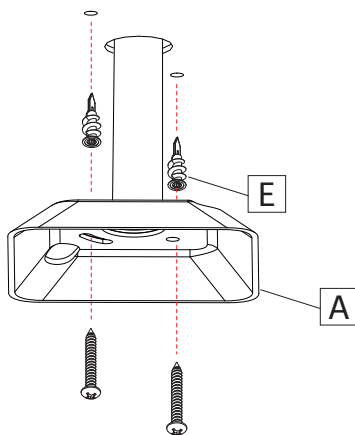


Drill the mounting point following the marks. Install screw anchors (E). Install the Mounting adapter (A) with screws into the screw anchors.

5

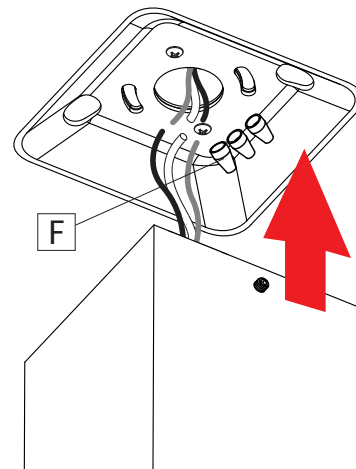

Make connection between the BX Cable and the Fixture power with marettes (F)

6

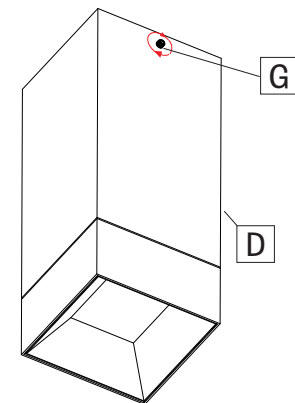

Secure the Fixture (D) onto the Mounting adapter (A) with set screw (G).