



SURFACE MOUNT DRYWALL - INSTALLATION INSTRUCTIONS




NOTE: Wire dimming conductors as Class 1

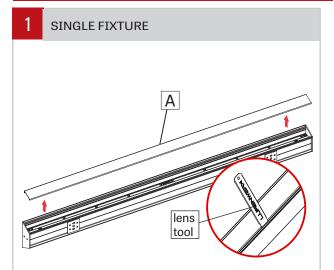


Remove the top lens (A) using the included lens tool.

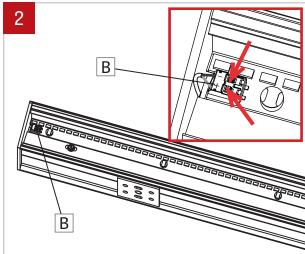


Disconnect LED molex connector (B) by taking a pointed object and pressing on the two tabs on the top.

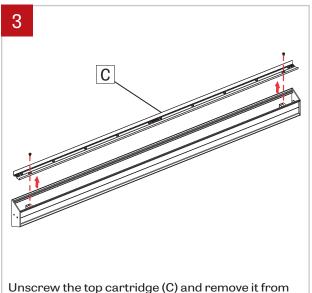


the fixture.

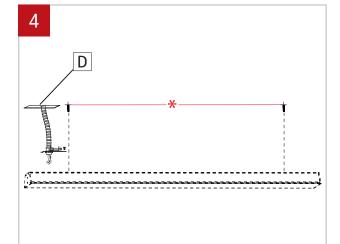

Locate junction box (D) and mounting points (*) in the ceiling. Refer to dimensions supplied in client drawings.

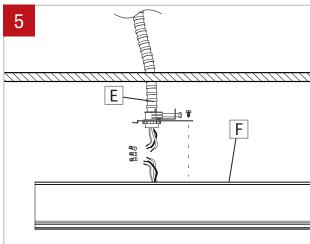

Make electrical connections between main power (E) and fixture (F) (connect the wires with the same colors together).

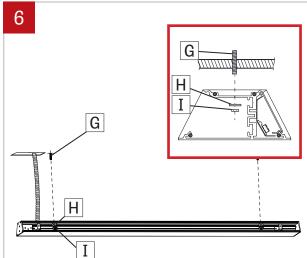

Fasten fixture to threaded stud (G) using washer (H) and nuts (I). (If there's no threaded stud present, the fixture can be screwed directly onto the ceiling).

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILE NAME:WALO-LED-SURFACE-DRYWALL-MOUNT-INST

November 16, 2019

Page: 1 / 4




WALO


run.


SURFACE MOUNT DRYWALL - INSTALLATION INSTRUCTIONS




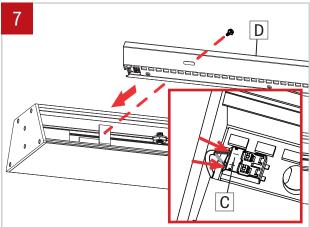



Put the cartridge (D) back in place and reconnect the LED molex connector (C). **NOTE: connect black wire into the negative (-) terminal and the white wire into (+) positive terminal.** Make sure that the wires are not hiding any LED diode. Screw the cartridge (D) back in place.

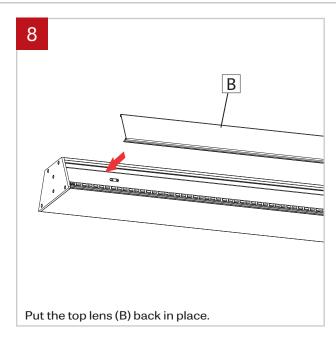

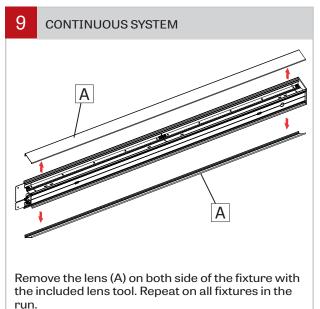

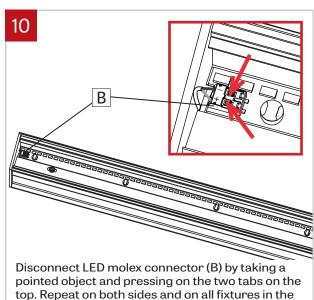

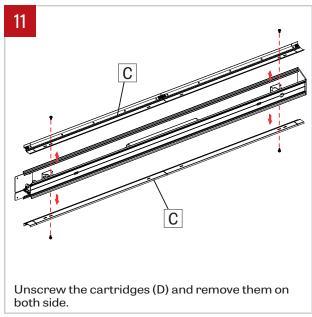

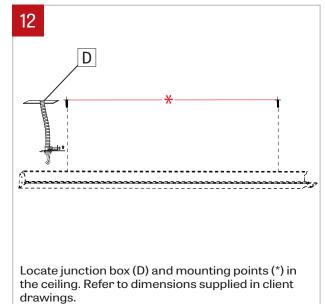




WALO


colors together).


SURFACE MOUNT DRYWALL - INSTALLATION INSTRUCTIONS




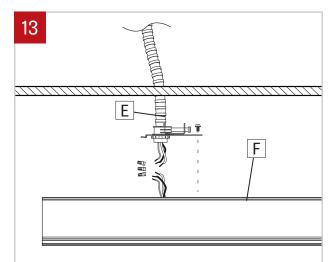



Make electrical connections between main power (E) and fixture (F) (connect the wires with the same

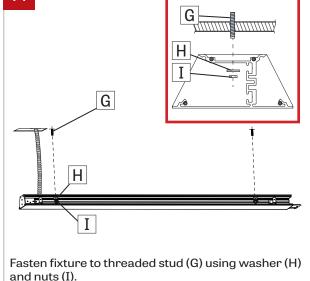

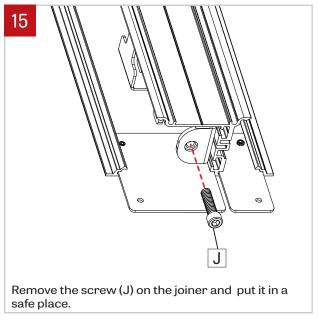

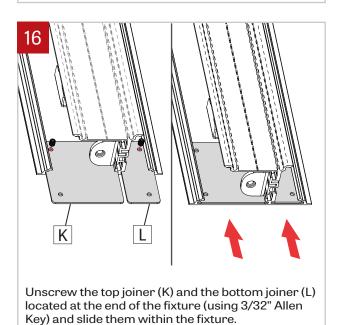

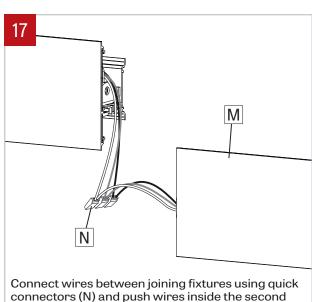

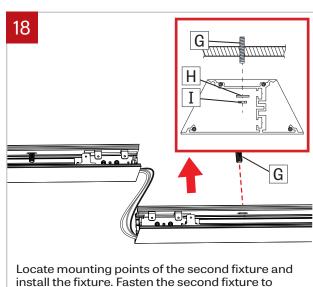

threaded stud (G) using washers (H) and nuts (I)


without overtighten.

fixture (M).


WALO

SURFACE MOUNT DRYWALL - INSTALLATION INSTRUCTIONS




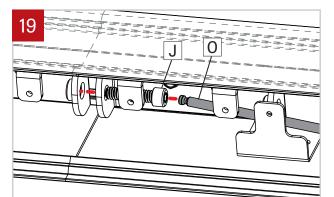



Join fixtures using align pins as guide. Put back in place the provided screw (J) (using 3/16" Ball-End Screwdriver (O) provided). Make sure that no wires are placed in between the extrusions, preventing the fixtures to be joined. Tight the screw (J) to pull the extrusions together. Repeat steps 15 to 19 for all other fixture. Then tighten all washers and nuts on threaded studs to secure the fixtures.

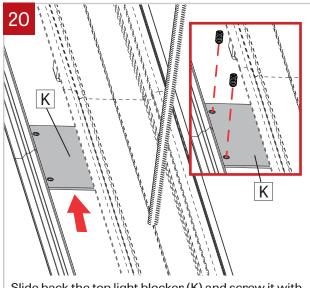


Slide back the top light blocker (K) and screw it with set screws.

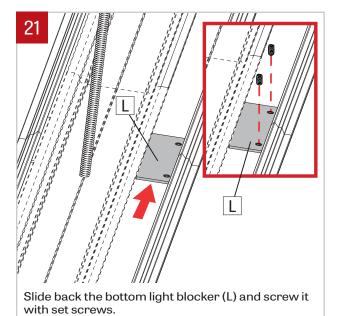

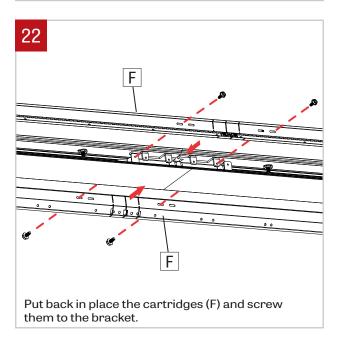

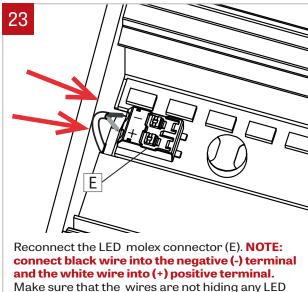

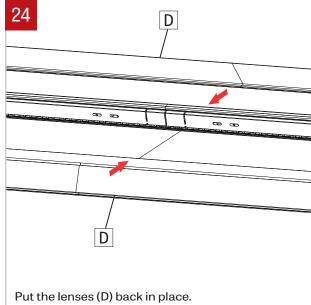



diode.