

INSTALLATION INSTRUCTIONS



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Disconnect power before installation or servicing.



Do not cover the light element lens or heatsink with any materials or adhesive tapes when the fixture is powered.



Handle the LED cartridge carefully during removal and installation. Tools must not touch the LED chips. Contact may result in damage and LED failure.



Wire dimming conductors as Class 1.



A luminaire with more than one power supply connection means shall be connected to only one branch circuit.



For luminaires specified as recessed, clearance between the sides of the luminaire and parts of the building must be 1/2" minimum; clearance to insulating materials to be 3" minimum, unless luminaire is IC rated.



For luminaires installed in wet locations, properly seal all mounting and electrical points.



Warranty claims will not be accepted if incorrect driver or light element is used.

SINGLE FIXTURE



For electrical connections, please refer to the [wiring diagram guide](#).



For remote driver box installation instructions, please refer to the [remote driver installation sheet](#).



Electrical connections must be done before drywall ceiling is installed.



1 MAKE ELECTRICAL CONNECTIONS.


Connect the remote driver to the main power and bring the remote driver cable close to the installation site.

Unfasten the screw and pivot the low-voltage connection box **[A]** cover. Pass the remote driver cable **[B]** (by others) through the cable connector (by others), and install onto the low-voltage connection box **[A]**.

Inside the low-voltage connection box make electrical connections between the remote driver cable **[B]** and the low-voltage connection box cable using wire nuts **[C]** (by others).

Close the low-voltage connection box **[A]**.

Note: Number of wires may vary.

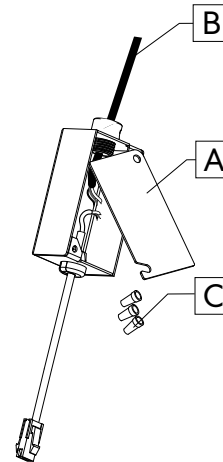


2 INSTALL CEILING.

Locate fixture and power feed position in the ceiling.

Cut a small opening in the drywall and bring the cable from the low-voltage connection box through the ceiling opening.


Install the ceiling.

Note: Opening should be narrower than fixture.

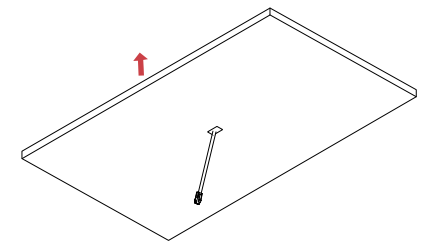


3 INSTALL CLIPS.

Trace a reference line to position the clips **[D]**. Install clips to the ceiling with screws (by others).

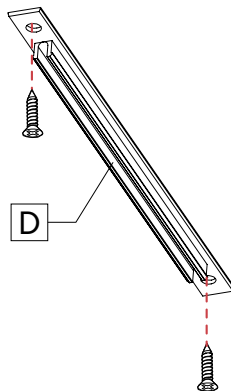

4 CONNECT FIXTURE.


Connect the low-voltage connection box **[A]** to the fixture cable **[E]** with quick connectors.

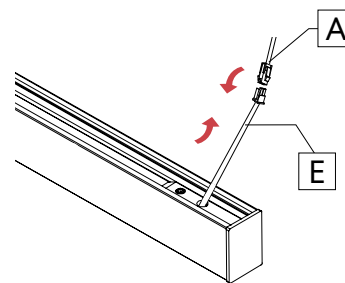

5 MOUNT FIXTURE.

Snap the fixture to the ceiling-mounted clips.

Note: Gently pull down on the fixture to verify that the brackets are properly seated in the grooves.

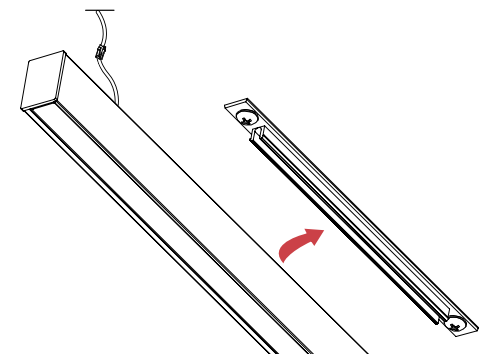

CONTINUOUS RUN

- 1** FOR A CONTINUOUS RUN, FOLLOW STEPS **1 - 5** FROM THE SINGLE FIXTURE INSTRUCTIONS FOR ALL FIXTURES IN THE RUN.
POSITION FIXTURE END CAPS IN A DIRECT END-TO-END CONFIGURATION.

