

VOILÀ 2




## NOTE: Wire dimming conductors as Class 1

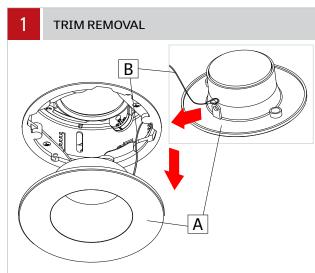


For trim installation, detach trim (A) and unhook trim from safety wire (B). Safely store it on the side.

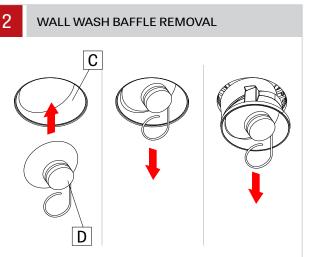


For trimless wall wash installation, detach baffle (C) by using provided suction tool (D). Stick tool on baffle lens and pull.

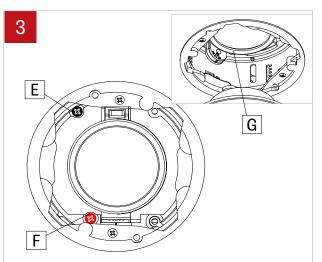

Slightly unscrew white screw (E) and red screw (F) located inside to allow rotation of the adjusting mechanism (G).

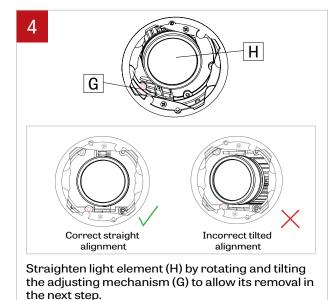


Push tab (I) on the side of the light element (H) to release it from the adjusting mechanism (G). Slide light element (H) from the track system (J).

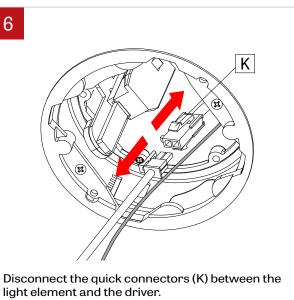


www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to LumenWerx ULC. FILE NAME:VOILA2-RECESSED-OPTIC-REPLACEMENT-INST December 24, 2019 Page: 1/3

VOILÀ 2




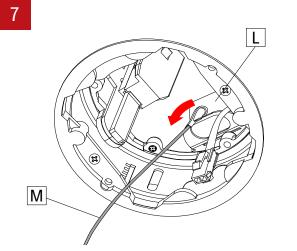


Pull the driver (L) towards the opening. Unhook safety cable (M) of light element from driver (L). Safely store light element on the side.

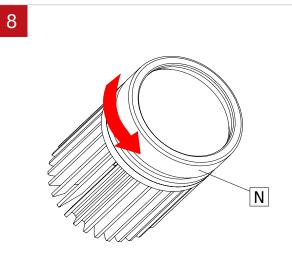



Unscrew lens cover (N) from heatsink of light element.

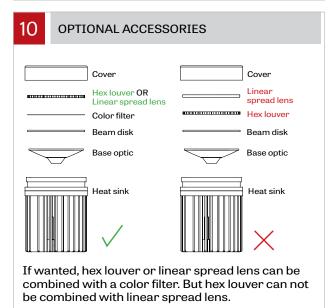

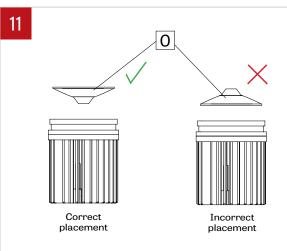

Make sure to position new optic (O) with flat surface facing outwards.

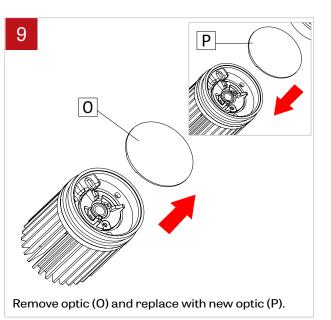

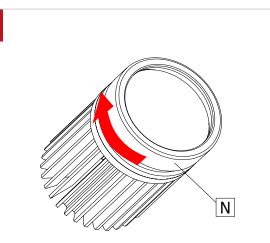

12


Screw lens cover (N) back onto light element.

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to LumenWerx ULC. FILE NAME:VOILA2-RECESSED-OPTIC-REPLACEMENT-INST December 24, 2019 Page: 2/3


LumenWerx ULC. reserves the right to change or modify product specifications without notification

## VOILÀ 2




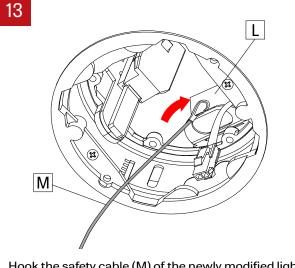


Hook the safety cable (M) of the newly modified light element to the driver (L).

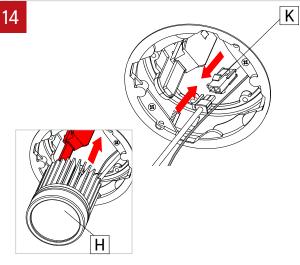


Reconnect light element (H) to driver with quick connectors (K).

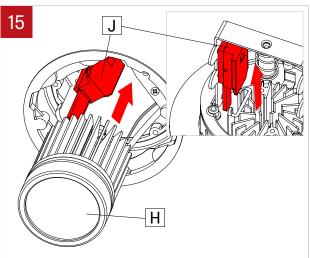

Insert light element (H) through track system (J). For standard depth, install until first click. For deep regressed depth, install until secondary click.

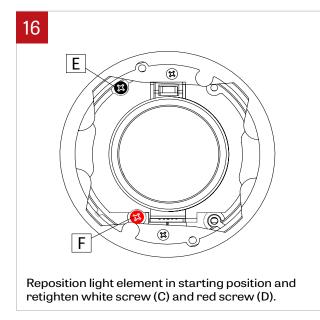

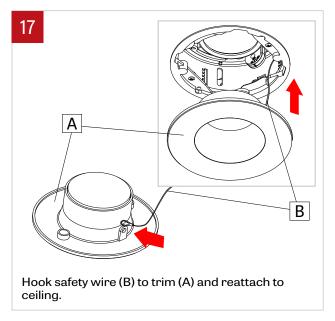

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 © All rights are reserved to LumenWerx ULC. | FILE NAME:VOILA2-RECESSED-OPTIC-REPLACEMENT-INST

December 24, 2019 Page: 3 / 3