

# CLUSTER COMBO


## DRYWALL TRIM/TRIMLESS - INSTALLATION INST.

**NOTE:** Wire dimming conductors as Class 1




Reflector must be reinstalled with the screw and plastic washer that was originally supplied. If not, it can result in an electrical failure

Make sure to reconnect the wires to the LED boards correctly

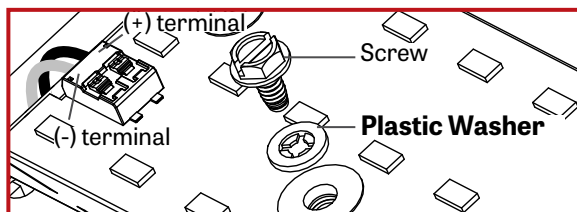


### 1 SINGLE FIXTURE

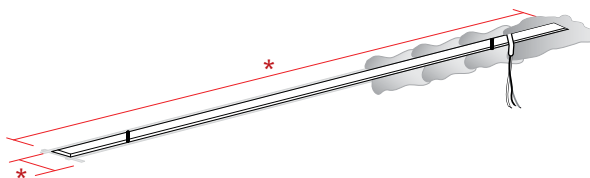


Prepare the area where the fixture is going to be installed. Cut hole in the drywall according to the dimensions [\*] in the client drawings.

### 2

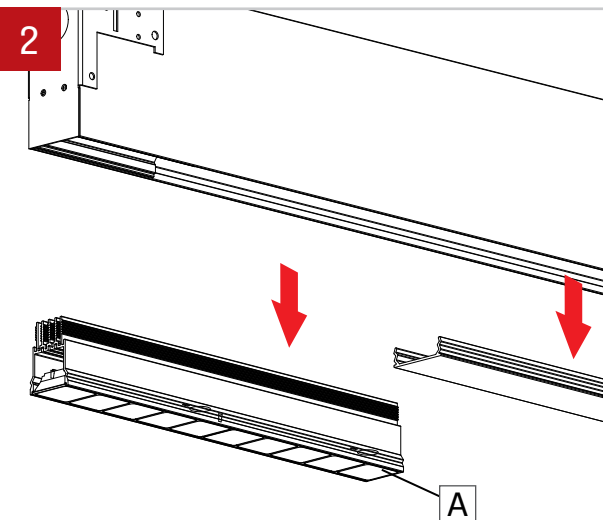


Remove clusters (A) and/or remove the lens or blank by using

### 3

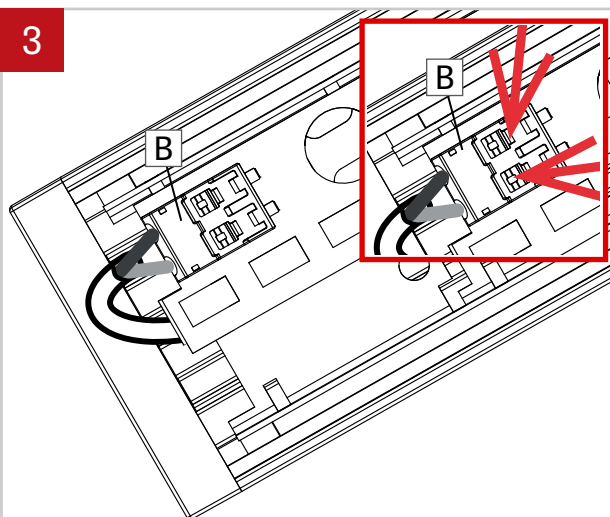


Disconnect LED mox connector (B) by taking a pointed object and pressing on the two tabs on the top.

### 4

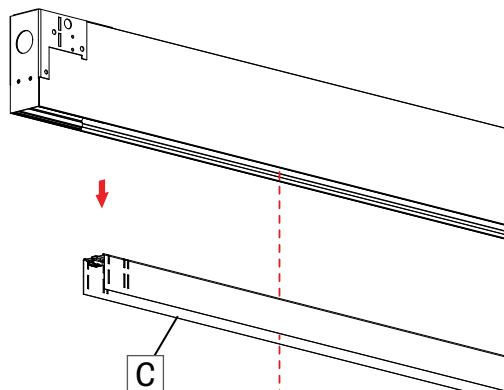

Remove the cartridge (C).


### 5

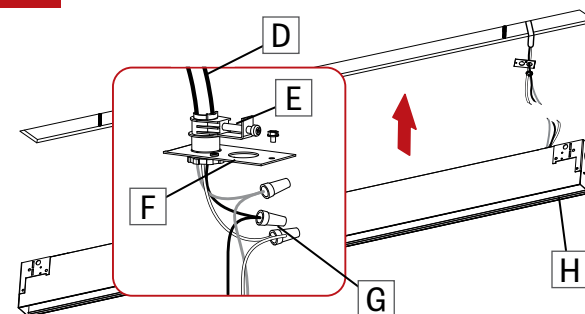


Install power cable (D) (by other) through the BX connector (E) (by other) and install onto the power plate (F) provided. Make electrical connections between power cable (D) and fixture cables using electrical marettes (G). Reinstall the power plate [G] to the fixture (H). **Number of wires may vary.**

# CLUSTER COMBO


## DRYWALL TRIM/TRIMLESS - INSTALLATION INST.

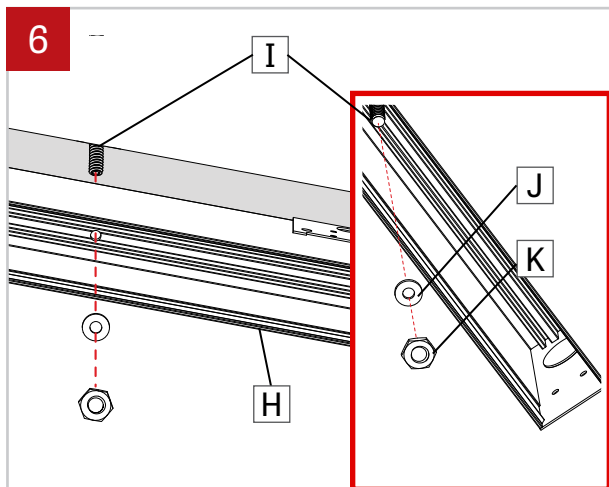

Insert the fixture (H) into pre-cut hole in drywall, aligning threaded rods (I) with holes in top of fixture (H). Put washers (J) and tighten nuts (K) to secure the fixture (H).

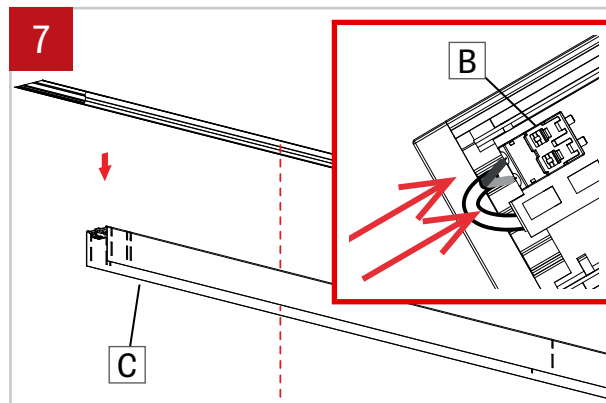


Reinstall the cartridge(s) (C) and reconnect the LED molex connector (B). **NOTE: connect blue wire into the negative (-) terminal and the red wire into (+) positive terminal.** Make sure that the wires are not hiding any LED diode. Screw the cartridge back in place by **using screw with plastic washer. Do not apply too much pressure.**

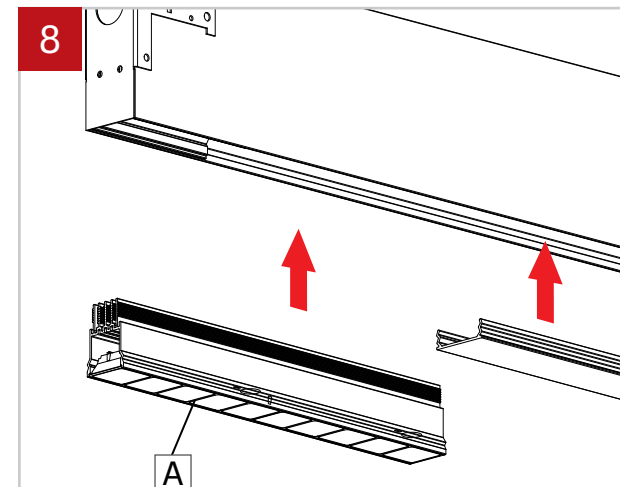


Reinstall the extrusion clusters (A) and the lens or blank.


### 9 CONTINUOUS SYSTEM

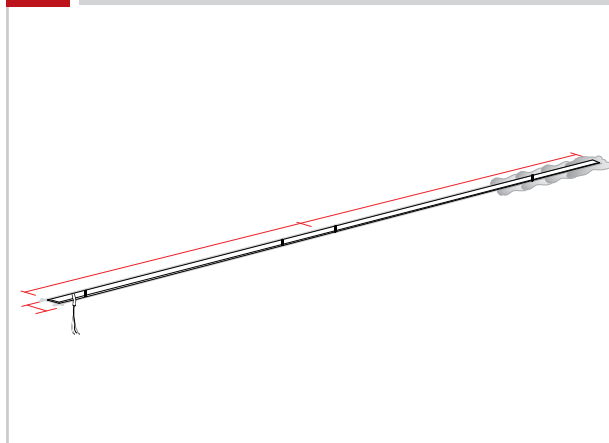

Prepare the area where all the fixtures are going to be installed. Cut hole in the drywall according to the dimensions [\*] in the client drawings.

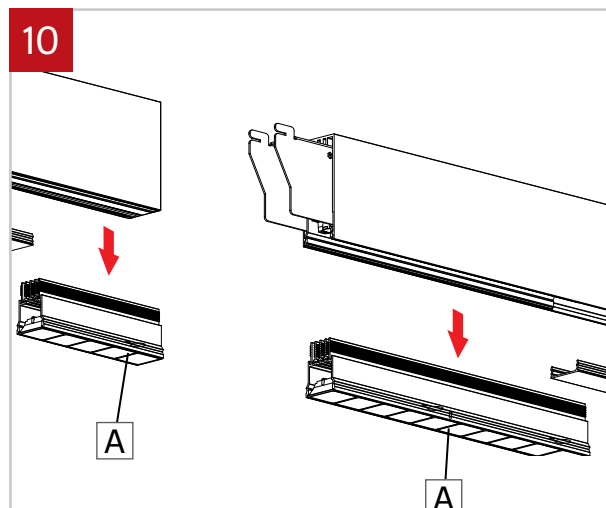

Remove the lenses (A) from all the fixtures in the run with the included lens tool.

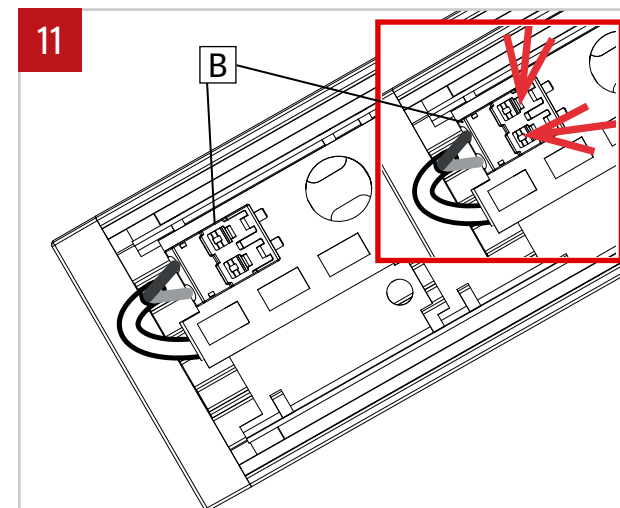

Disconnect LED molex connector (B) by taking a pointed object and pressing on the two tabs on the top.

# CLUSTER COMBO

## DRYWALL TRIM/TRIMLESS - INSTALLATION INST.

