REVEN-CAMBER-SMILE SIB


DRIVER REPLACEMENT




IMPORTANT: Installation instructions are shown with Reven and applies to Reven, Camber and Smile fixtures

NOTE: Wire dimming conductors as Class 1




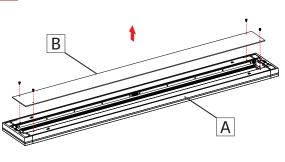


Make sure the power to the fixure (A) is turned off. Unscrew and remove the dust cover (B) (if provided).

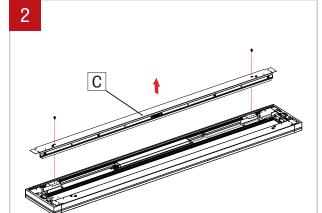

Unscrew the side reflector (C) and remove it.

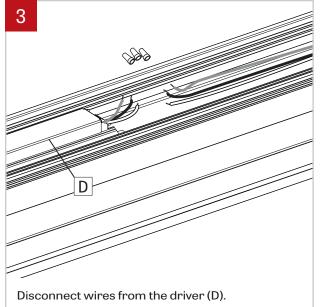




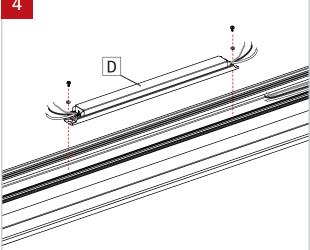

Unscrew the driver (D) from the fixture. Replace

the driver and make connection with wire nuts.

Screw the side reflector (C) back in place.

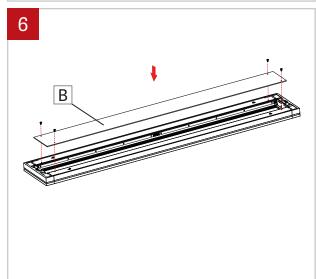

www.lumenwerx.com (T) 514-225-4304 (F) 514-931-4862 @ All rights are reserved to LumenWerx ULC.

FILENAME:REVEN-CAMBER-SMILE-SIB-DRIVER-REPLACEMENT-INST

November 14, 2019

Screw the dust cover (B) back in place (if

provided).

Page: 1/1

